



SECTION 211-02 Power Steering


VEHICLE APPLICATION: 2011.25 Focus

CONTENTS	PAGE
ELECTRICAL SCHEMATICS	
Power Steering.....	211-02-2
ELECTRICAL CONNECTORS	
Power Steering Control (PSC) Module — A.....	211-02-4
Power Steering Control (PSC) Module — B.....	211-02-4
Power Steering Control (PSC) Module — C.....	211-02-4

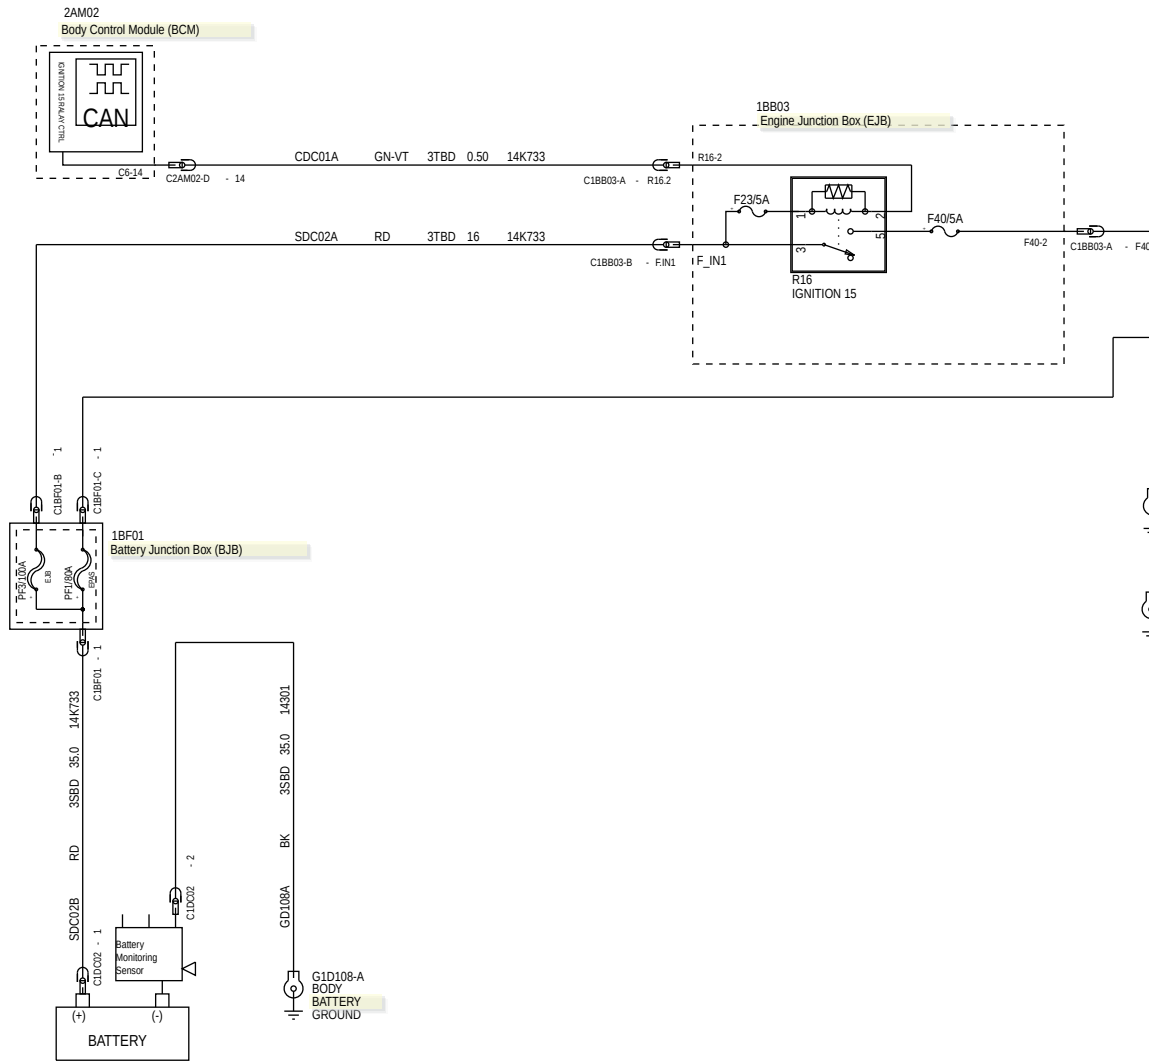

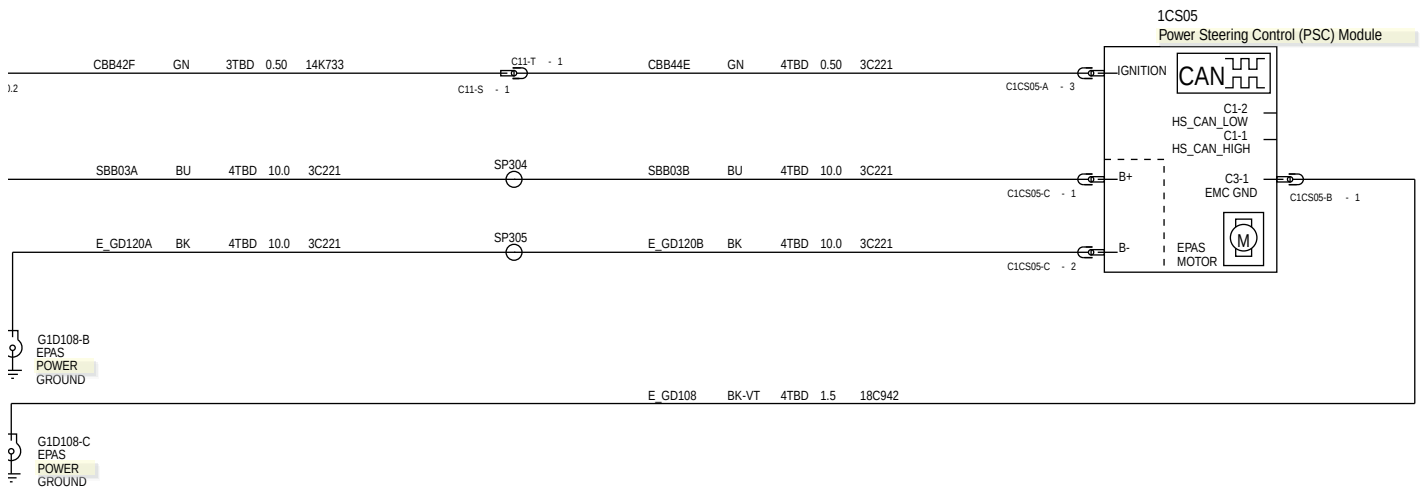

Power Steering Control (PSC) Module—A (G1374578)

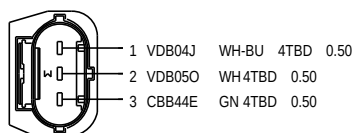

3M5T-14A464-GCC

C1CS05-A

TO EPAS MODULE

HARNESS 3C221

Power Steering Control (PSC) Module—B (G1374579)




92BG-14463-HJA

C1CS05-B

TO EPAS MODULE CONNECTOR

HARNESS 18C942

Power Steering Control (PSC) Module—C (G1374580)



9U5T-14A464-EA

C1CS05-C


TO EPAS MODULE POWER CONNECTOR

HARNESS 3C221


SECTION 211-05 Steering Column Switches

VEHICLE APPLICATION: 2011.25 Focus

CONTENTS	PAGE
ELECTRICAL SCHEMATICS	
Steering Wheel Module.....	211-05-2
ELECTRICAL CONNECTORS	
Ignition Switch.....	211-05-4
Ignition Switch.....	211-05-4
Steering Wheel Module — A.....	211-05-4
Steering Wheel Module — B.....	211-05-4
Steering Wheel Module — C.....	211-05-5
Steering Wheel Module — A.....	211-05-5

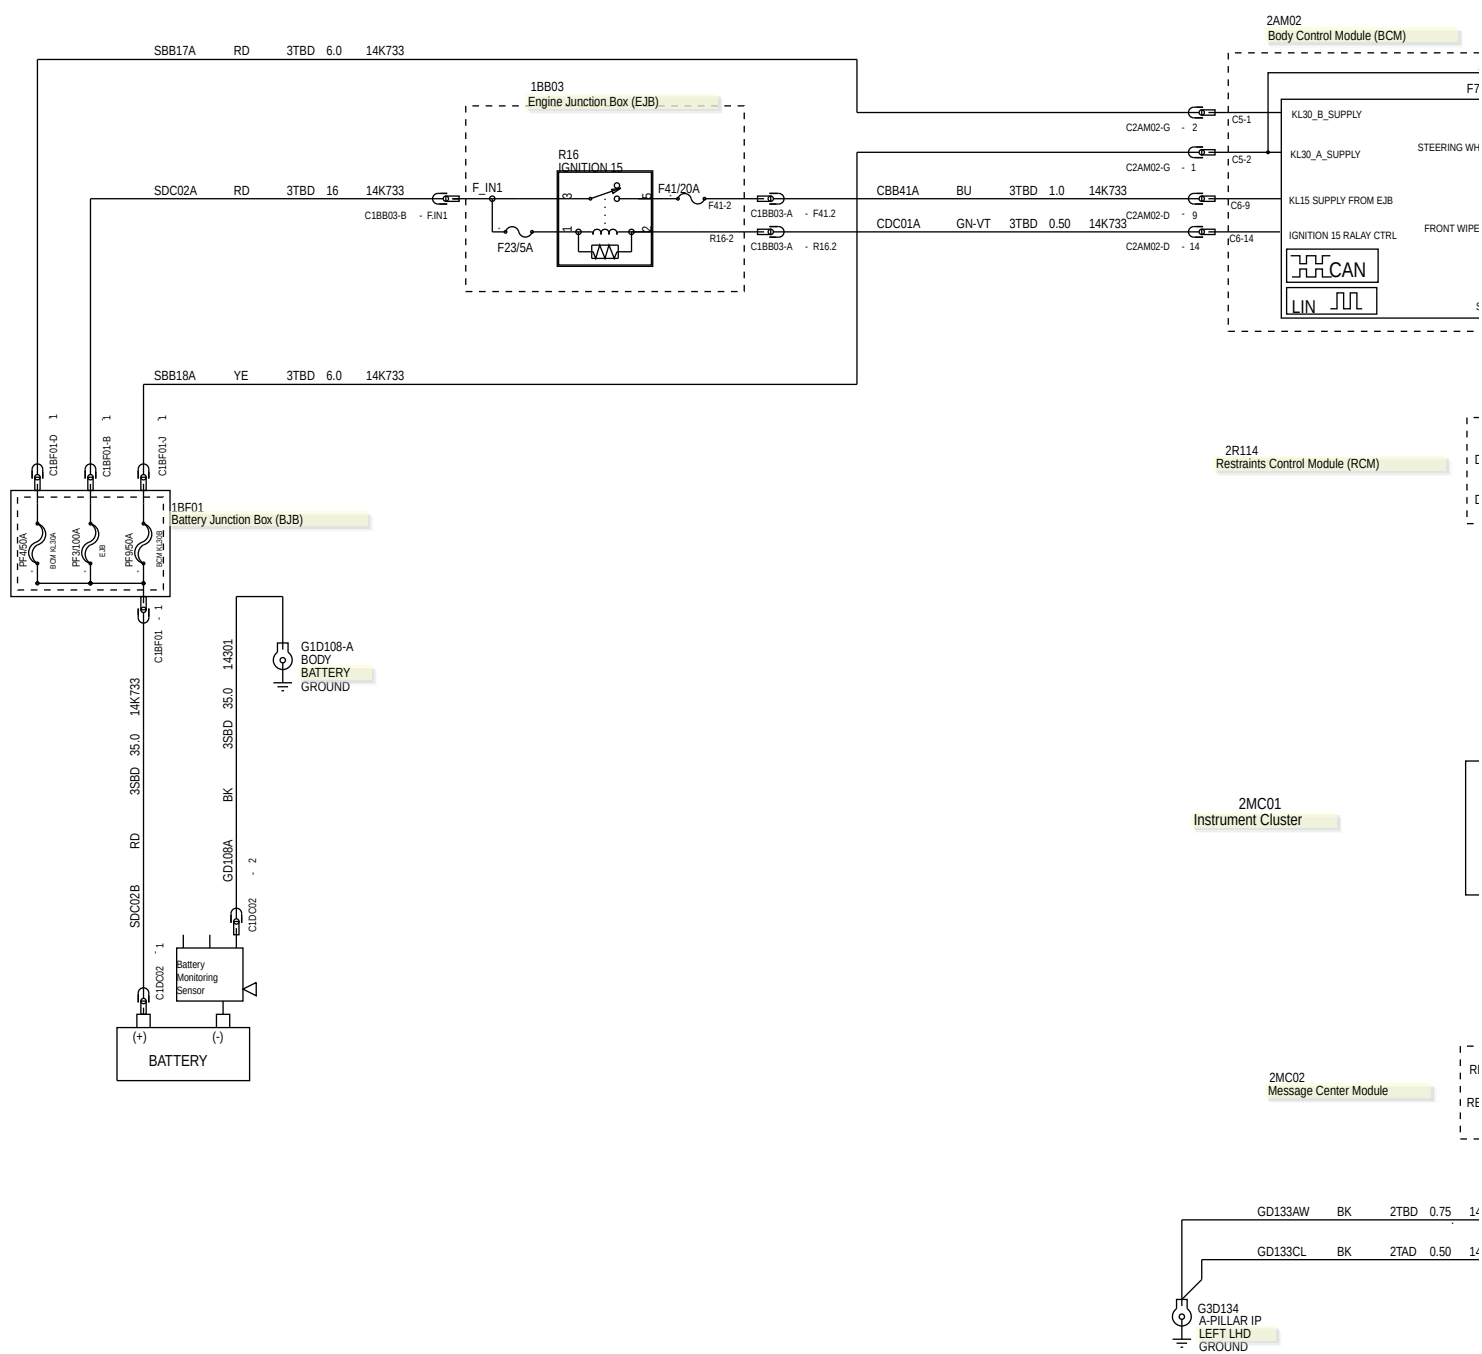


Ignition Switch (G1374602)

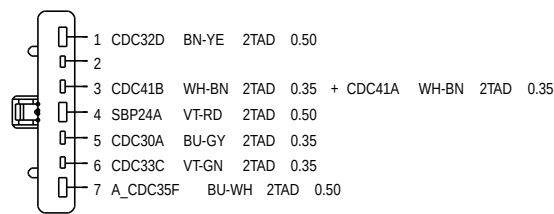


98AG-14489-ZGB
C2DC32
TO FORD IGNITION SWITCH CONNECTOR
HARNESS 14401

Ignition Switch (G1374603)

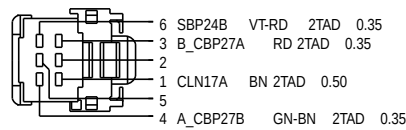


2S6T-14489-FA
C2PK34
TO START BUTTON
HARNESS 14401

Steering Wheel Module—A (G1374604)

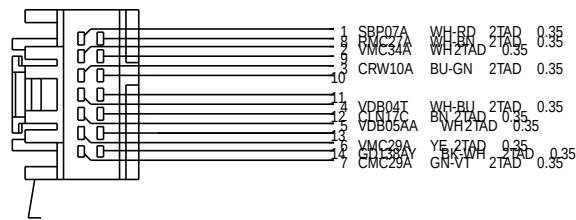


2C5T-14A464-BA
C2AM01-A
TO STEERING COLUMN MODULE C1
HARNESS 14401

Steering Wheel Module—B (G1374605)

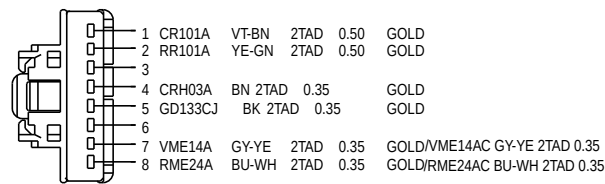


6G9T-14489-AHA
C2AM01-B
TO STEERING COLUMN MODULE C2
HARNESS 14401

Steering Wheel Module—C (G1374606)

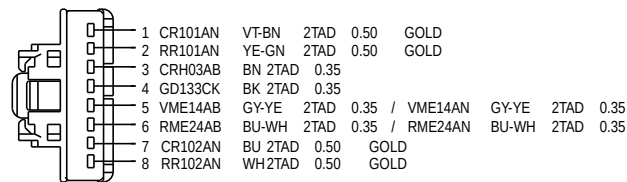

6G9T-14489-AHA
C2AM01-C
TO STEERING COLUMN MODULE C2
HARNESS 14401

Steering Wheel Module—A (G1375303)

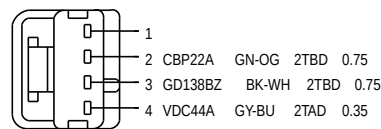

XF2T-14A464-AA
C2LS41-A
TO ELECTRICAL STEERING COLUMN LOCK
HARNESS 14401