




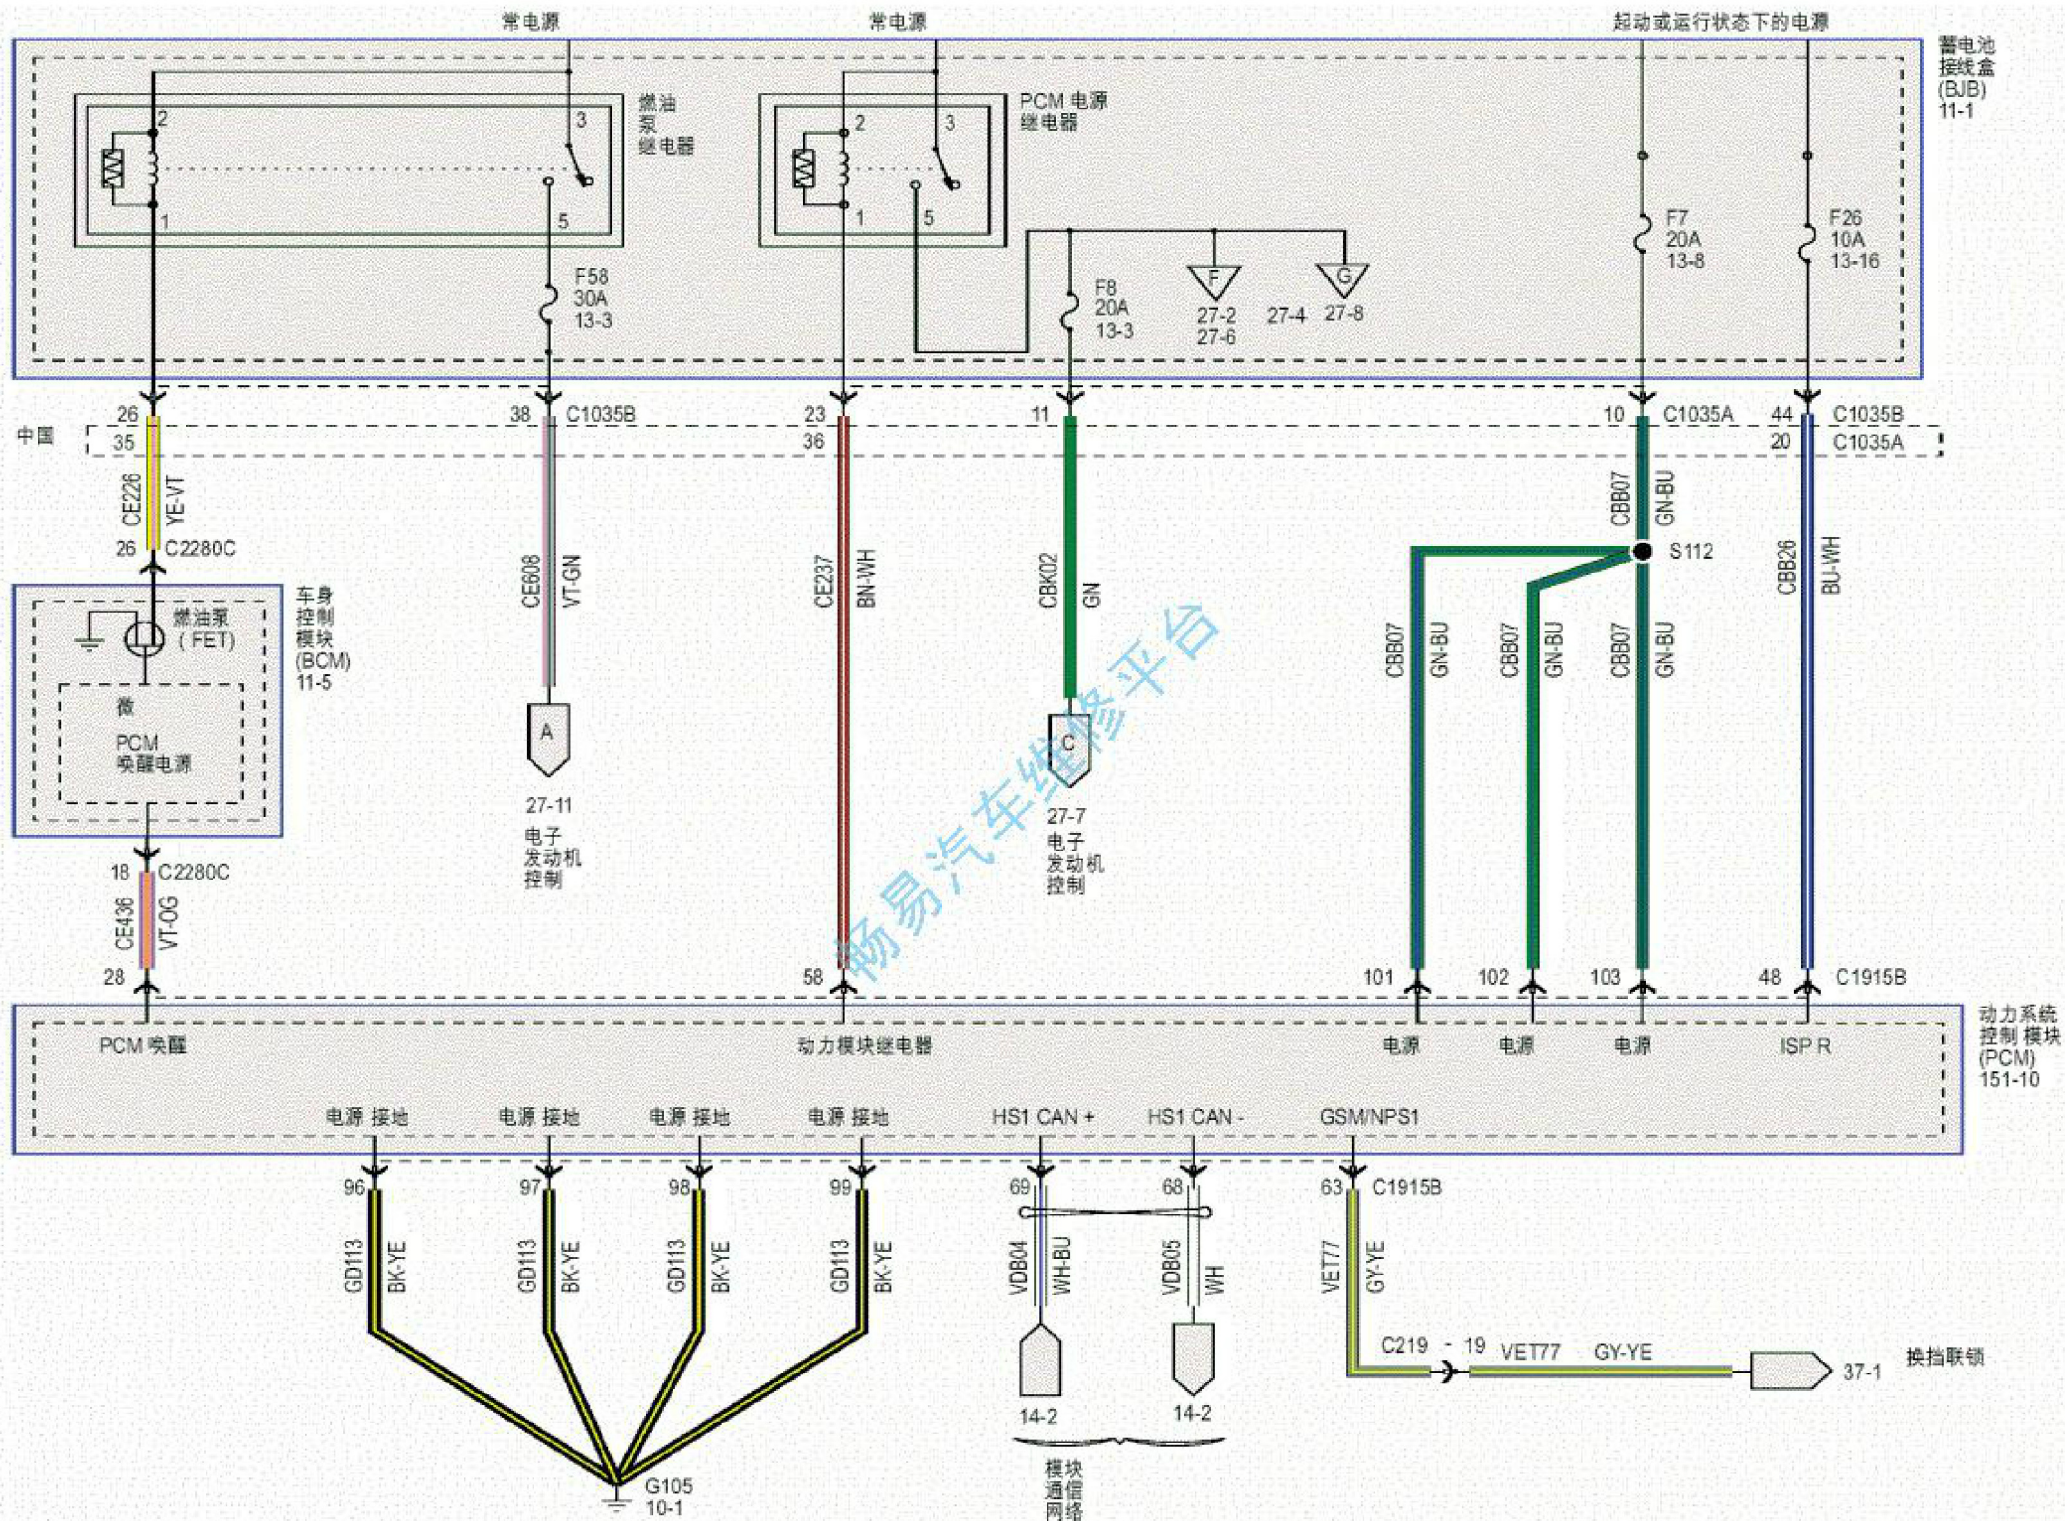



动力系统
控制
模块
(PCM)
151-10 151-21


蓄电池
接线盒
(BJB)
11-1

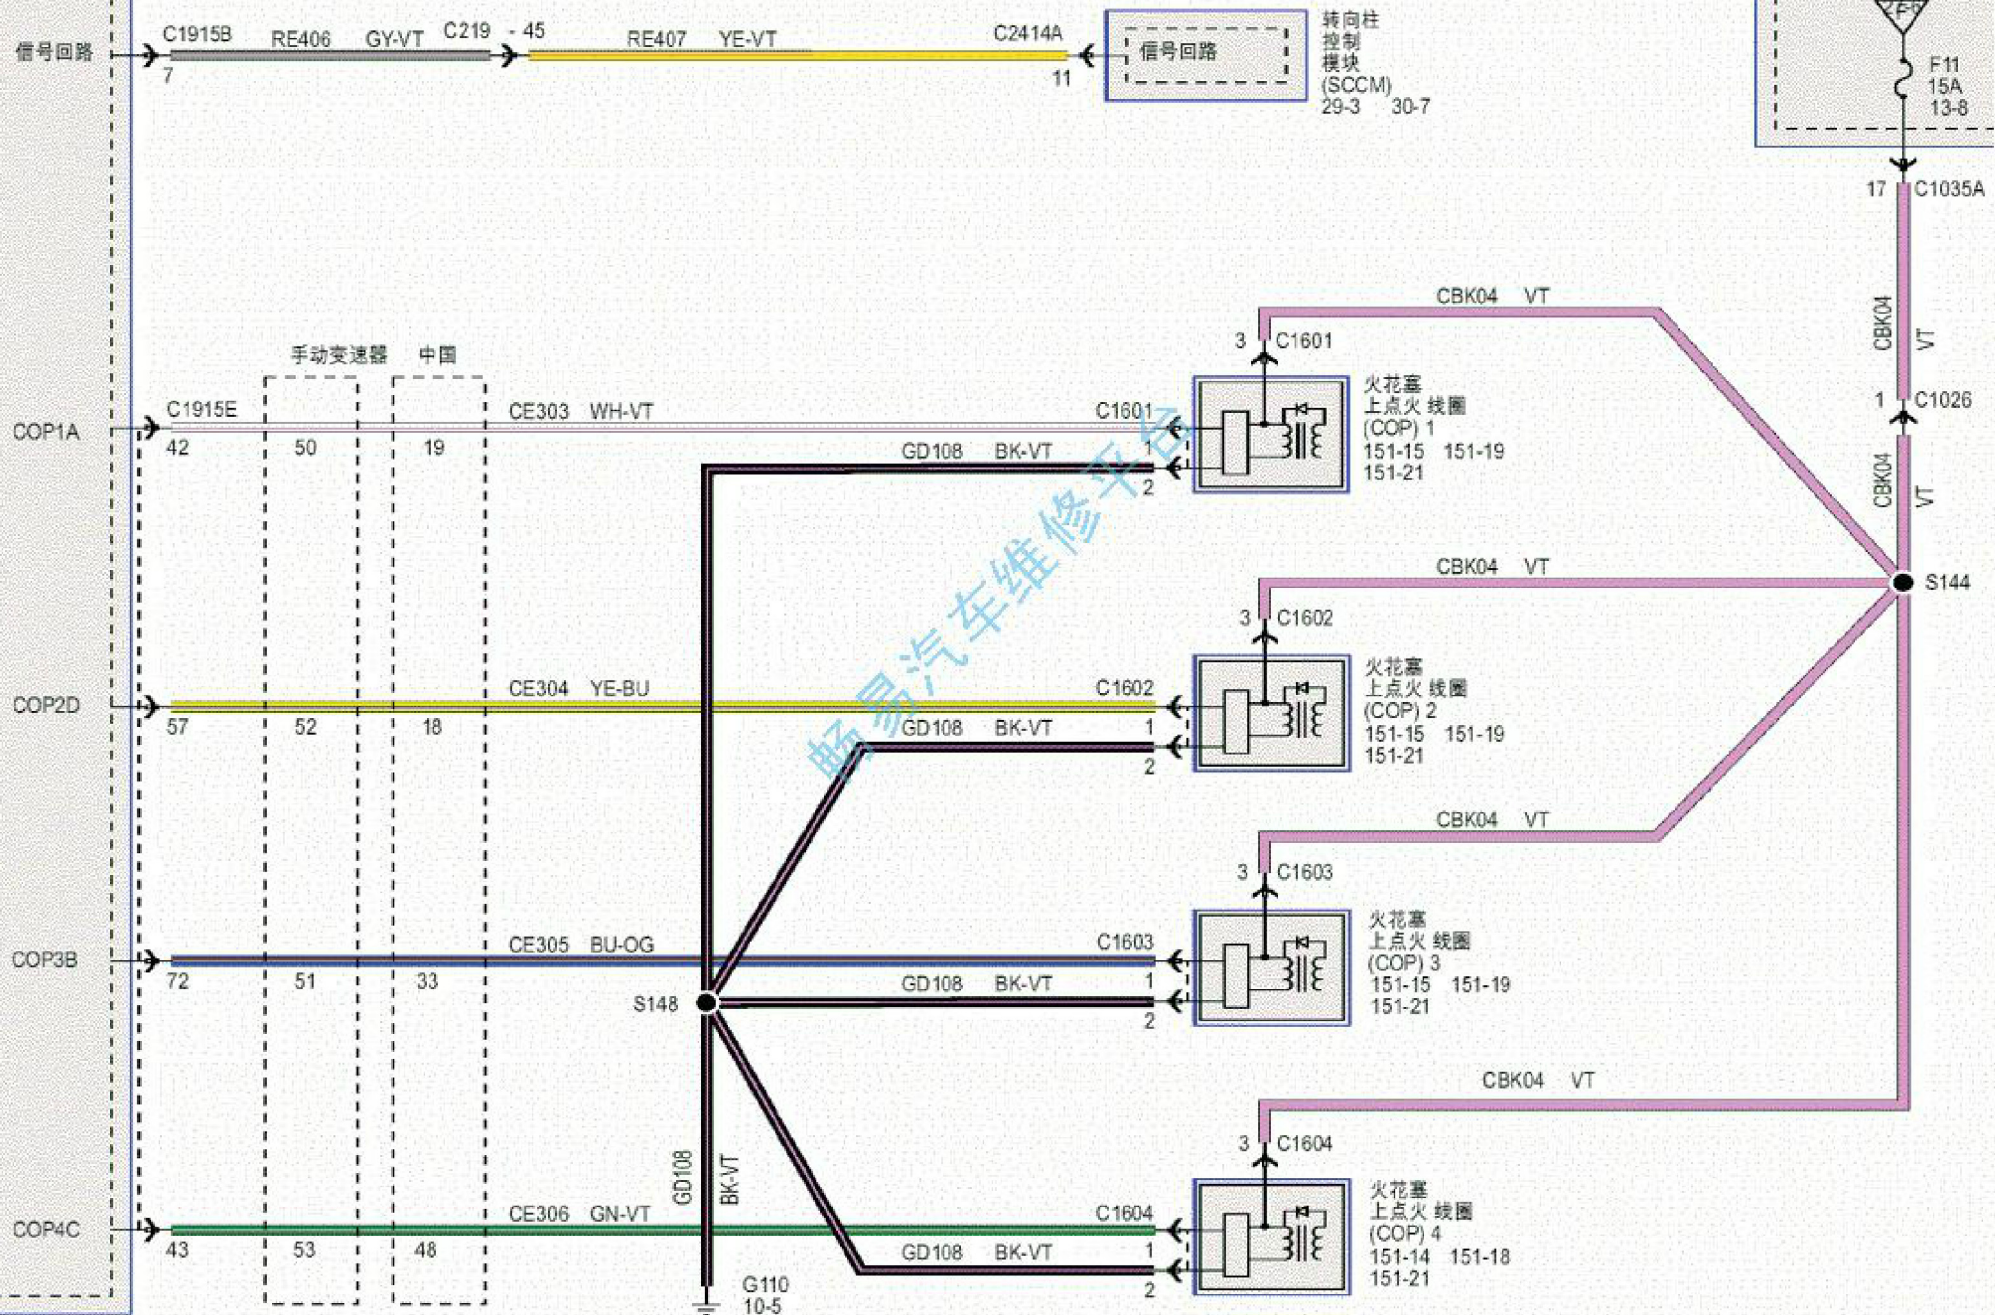

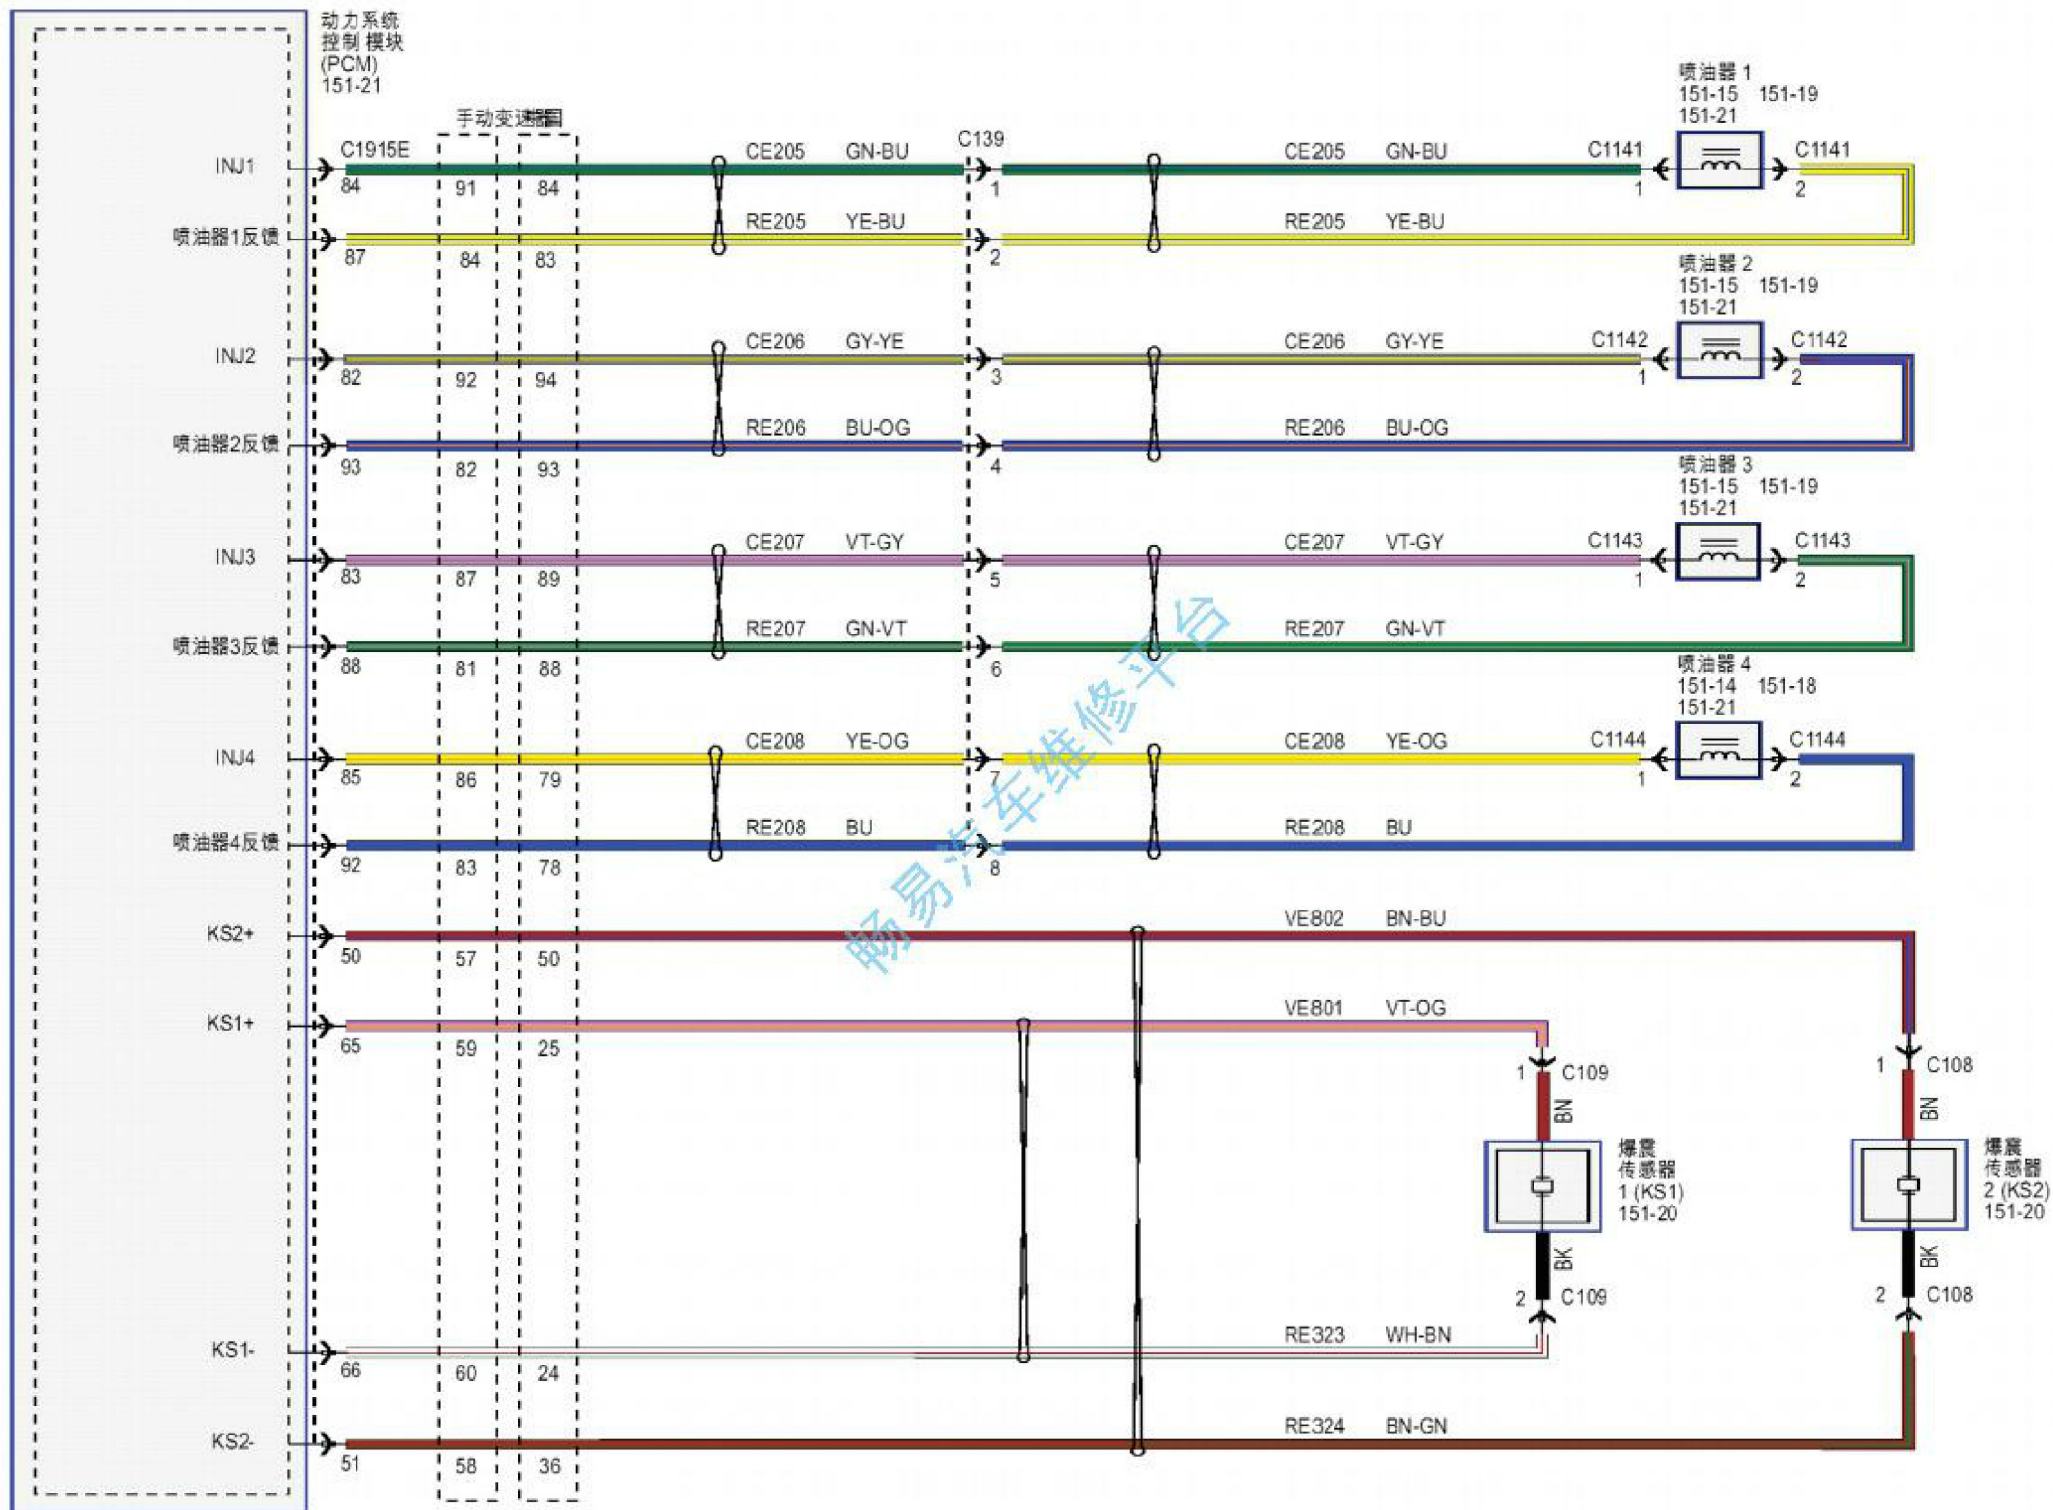

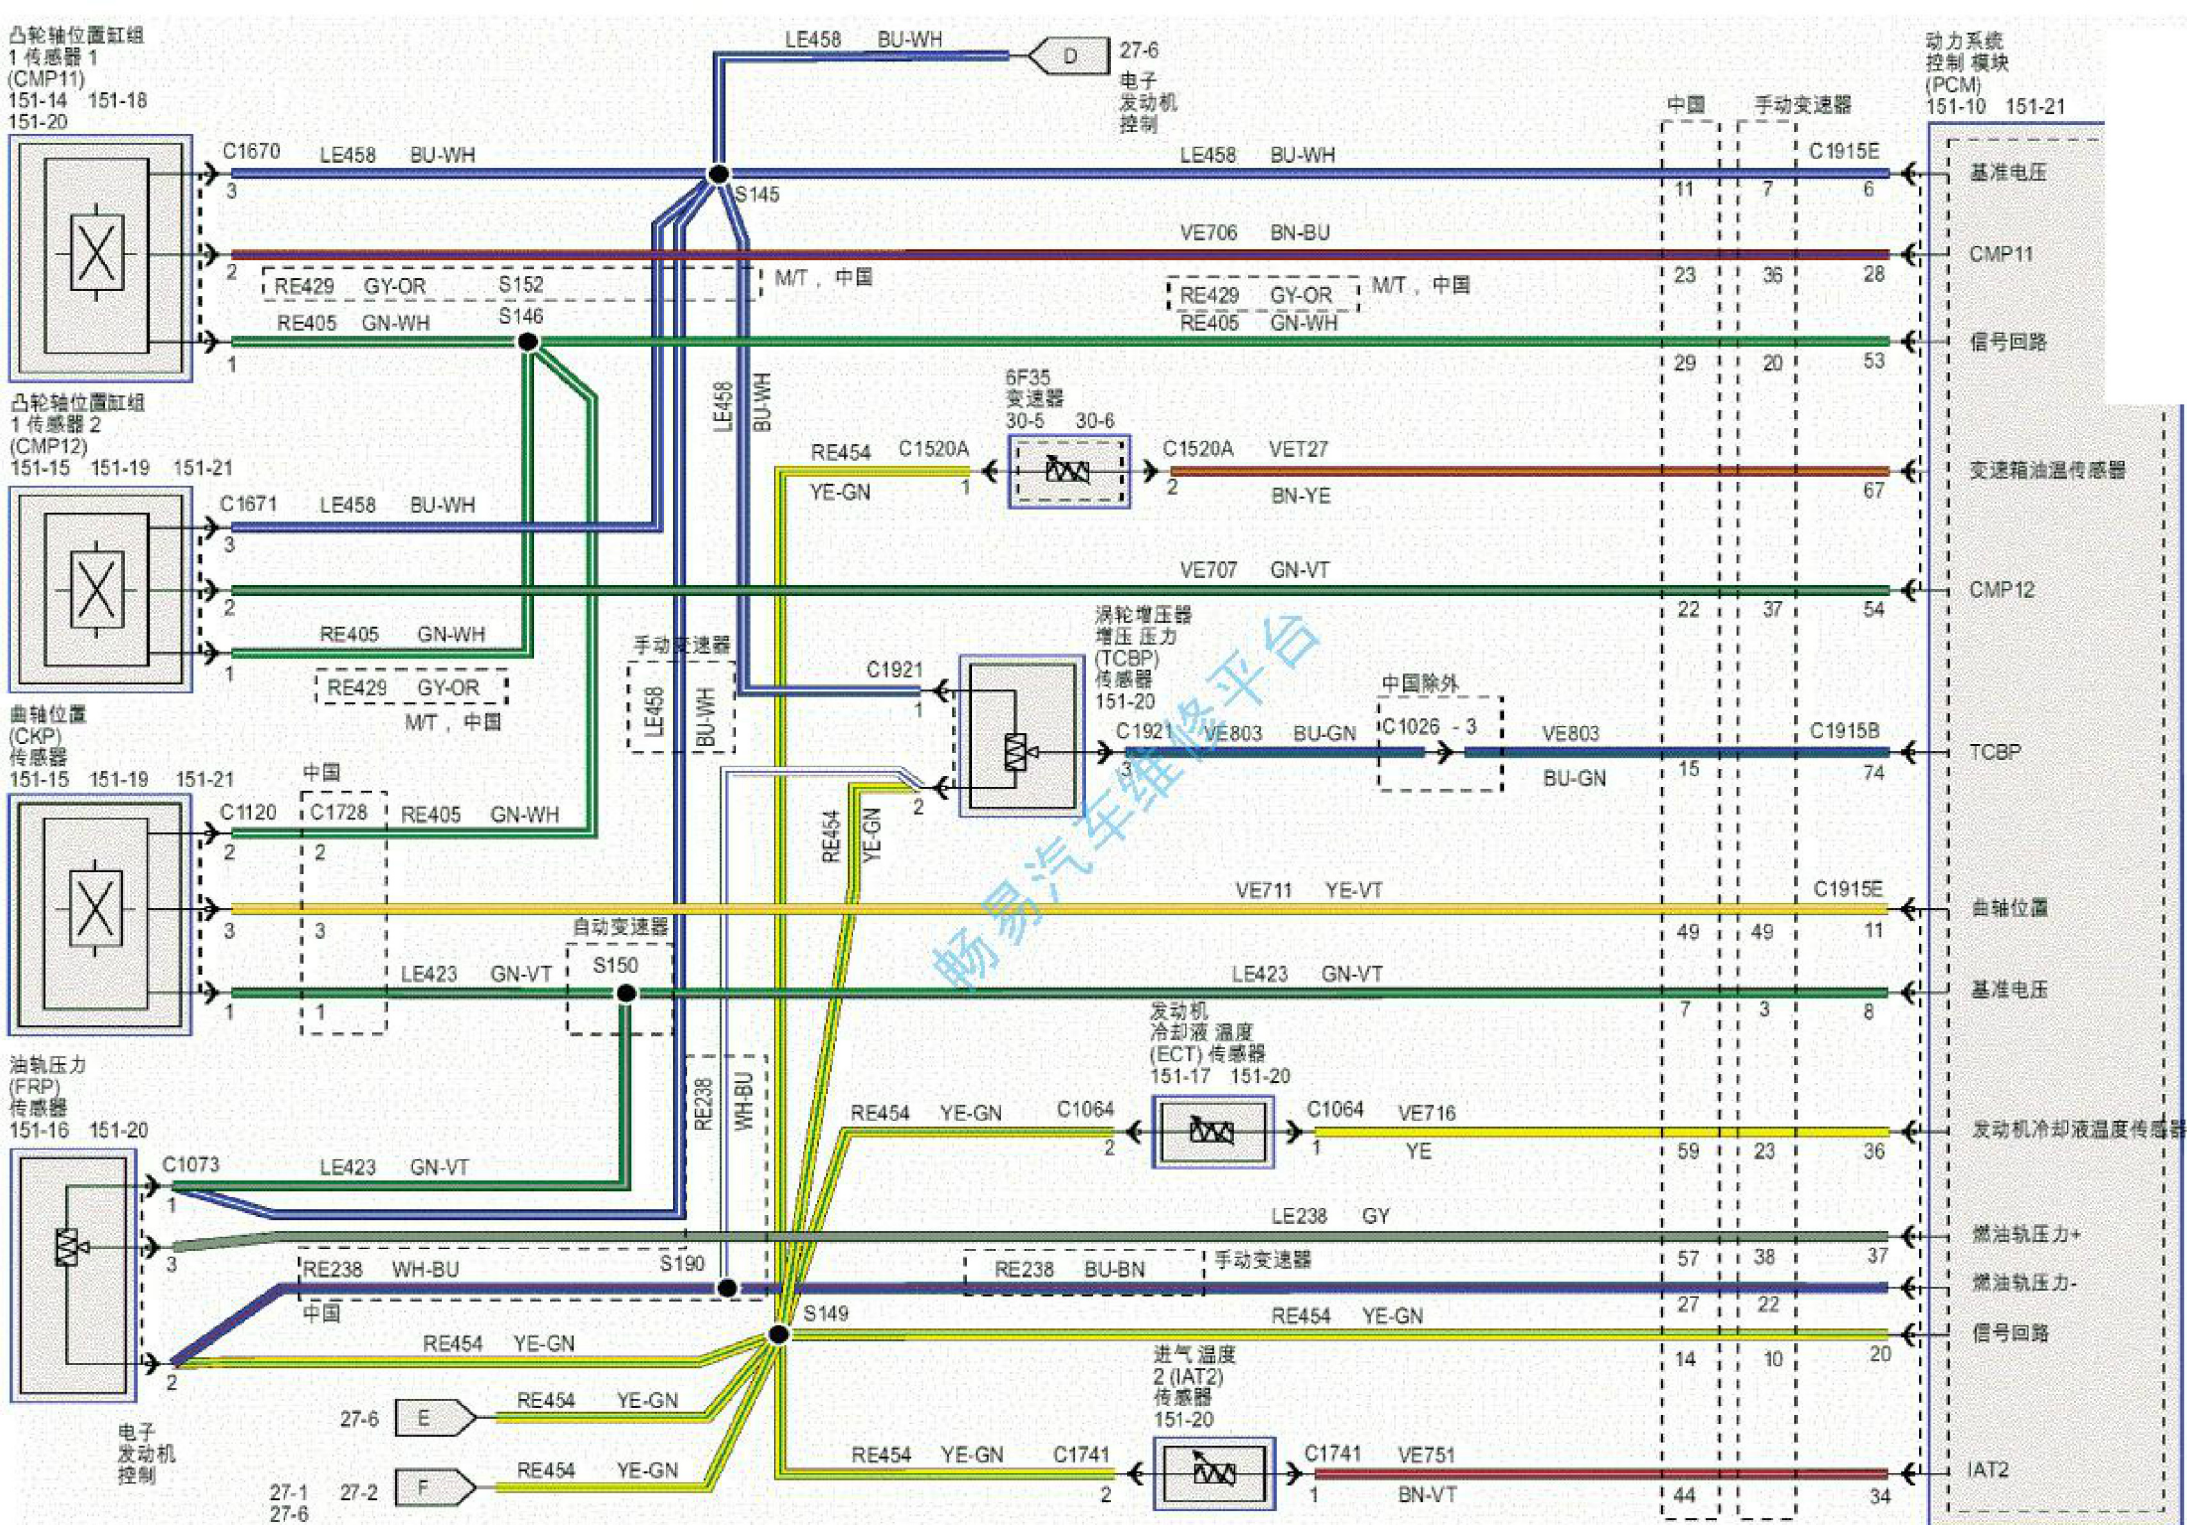

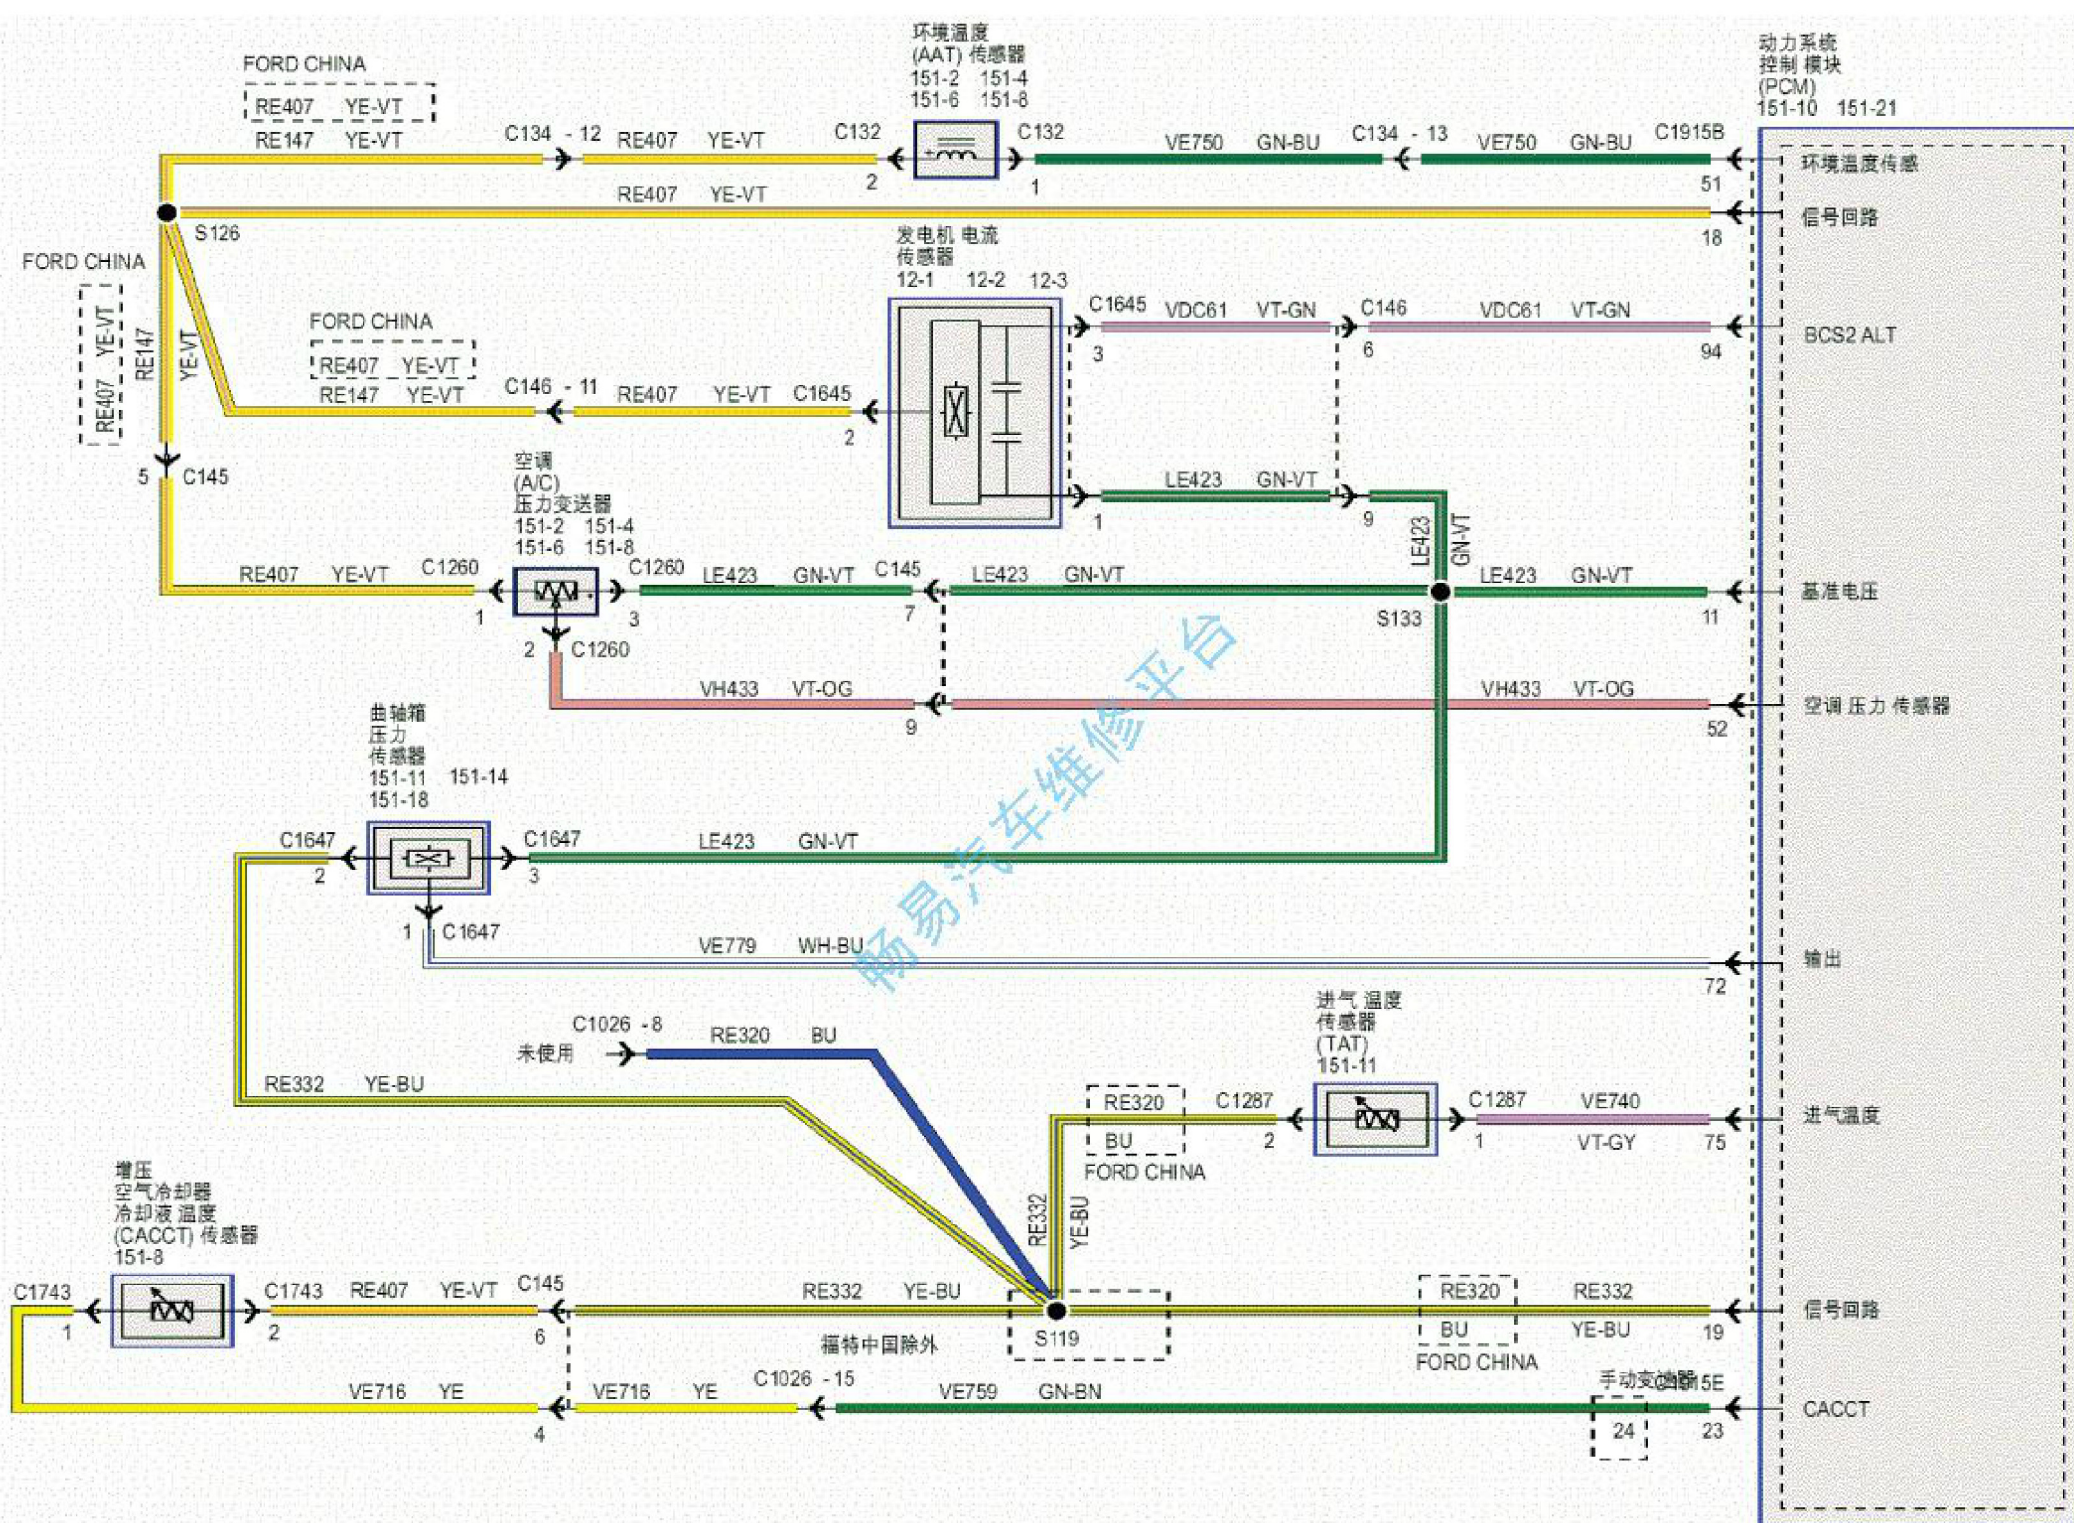

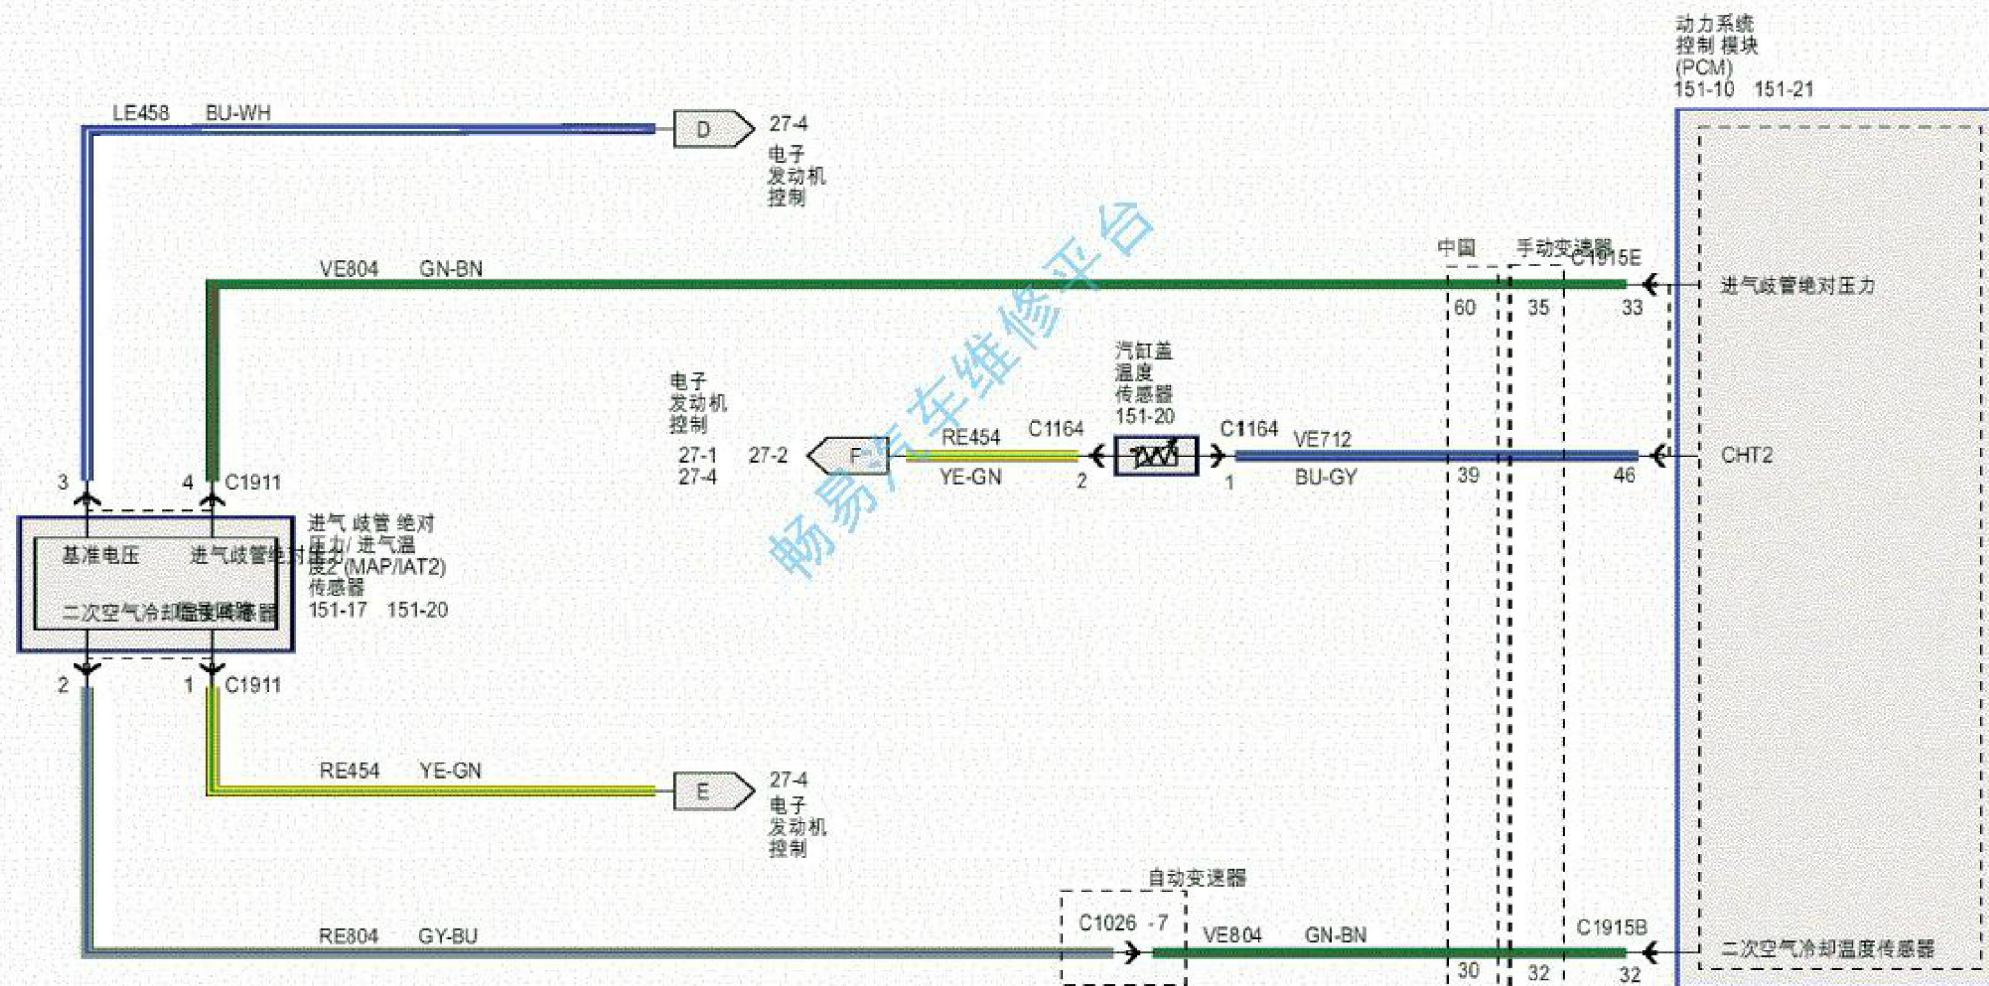

动力系统
控制 模块
(PCM)
151-10 151-21

HTR12
HO2S12
信号回路

C1915B CE233 WH-OG
1 12
57 VE731 YE-GN
13
38 RE242 GN
14

C1026 CE233 WH-OG C1917
12 2
13 VE731 YE-GN 4
14 RE731 WH 3

加热 型氧 传感器
(HO2S) #12
151-20

C1917 CBK02 GN

电子
发动机
控制
27-1

UO2SHTR11
UO2S11
UO2SGREF11
UO2SPC11
UO2SPCT11

手动变速器 中国
C1915E C1915E C1915E
14 1 76
64 26 53
49 25 52
63 39 37
48 40 51

CE235 GN-BN C1661
3
VE826 BN-VT 6
LE448 GY-BU 2
LE451 BN-YE 1
LE452 GN 5

通用 加热
型氧 传感器
(HO2S) #11
151-20

C1661 CBK02 GN

S113

CBK02 GN

16 C1026

CBK02 GN

27-10
电子
发动机
控制

VCT11

CE421 VT C1670
1 16 46 2

可变凸轮轴正时缸组
1 电磁阀 1
(VCT11)
151-14 151-18 151-20

C1670 CBK02 GN

S147

VCT12

CE422 WH-OG C1671
29 31 5 2

可变凸轮轴正时缸组
1 电磁阀 2
(VCT12)
151-15 151-19 151-21

C1671 CBK02 GN

蒸发 排放
系统 (EVAP)
碳罐 净化阀
151-17 151-20

C123 CBK02 GN

蒸发排放碳罐净化阀

C1915B CE113 C1026 - 4 CE113 C123
22 3 WH-BN 1

中国除外

中国除外

