


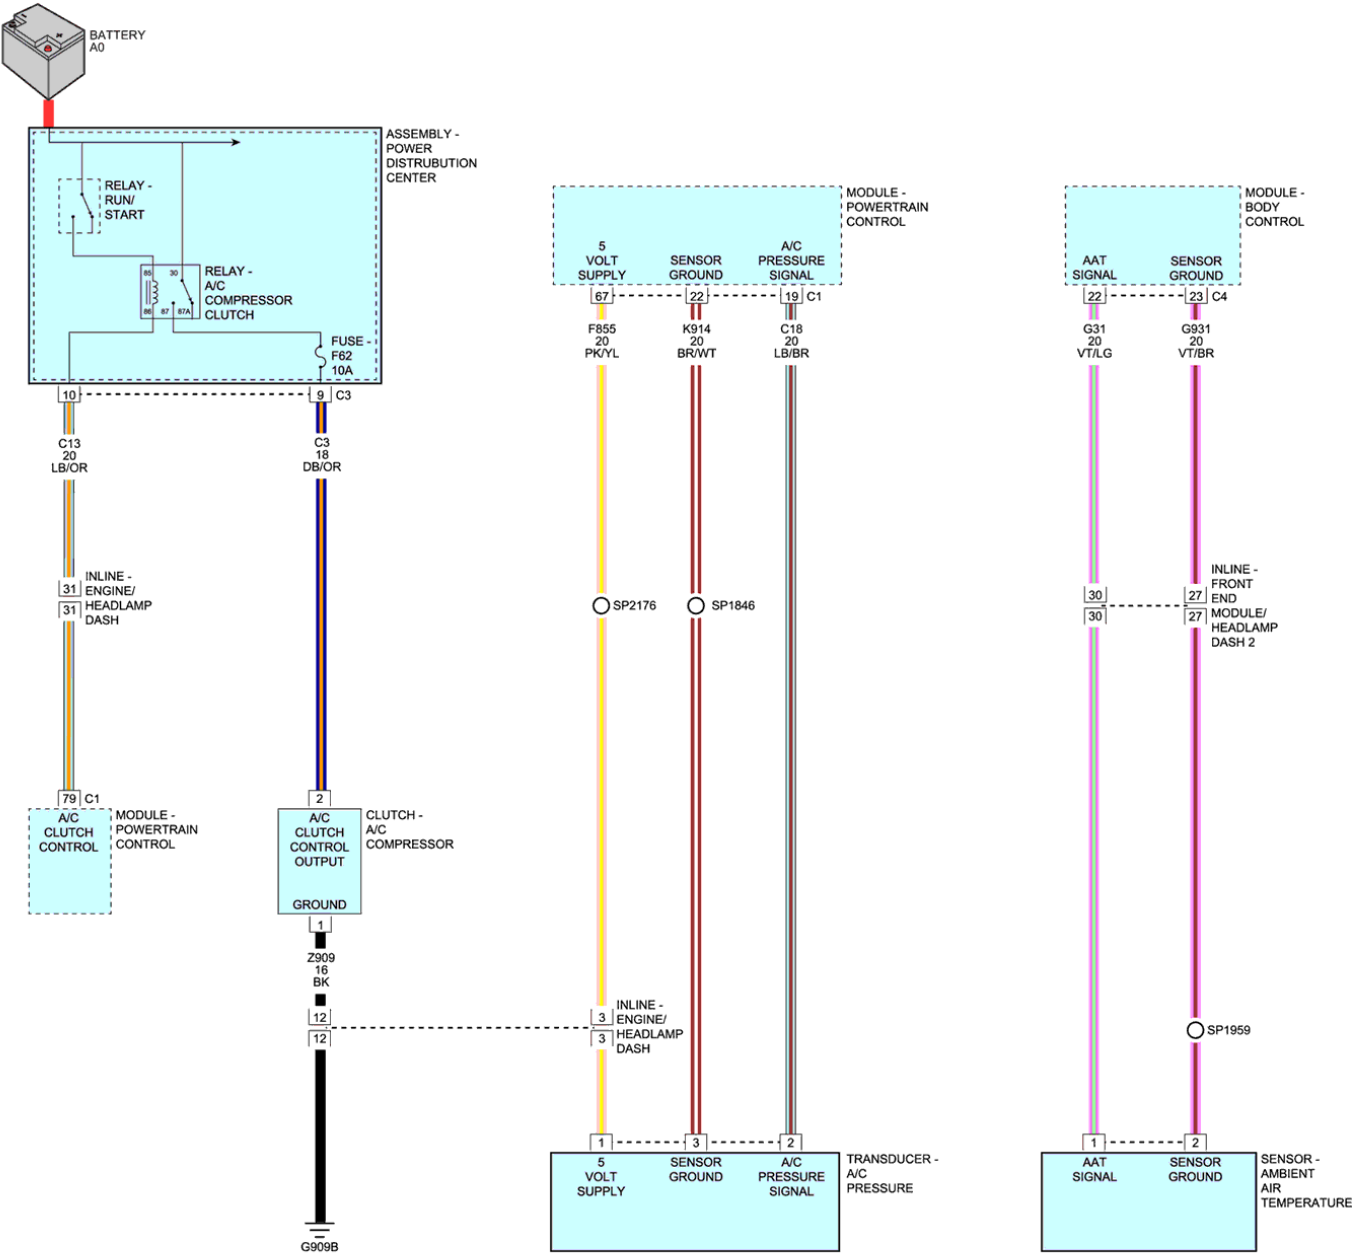

BATTERY
A0

FUSE
14
40A

RELAY-RUN/START

RELAY-A/C CLUTCH

FUSE
62
10A

ASSEMBLY-POWER DISTRIBUTION CENTER

A904
12
RD

C6
21

C13
20
LB/OR

C3
18
DB/OR

C3
0.8
DB/OR

AMBIENT AIR TEMPERATURE SIGNAL

SENSOR GROUND

G31
20
VT/LG

G931
20
VT/BR

SP1959

INLINE-FRONT END/ HEADLAMP DASH

MODULE-BODY CONTROL

FUSED B(+)

AMBIENT AIR TEMPERATURE SIGNAL

SENSOR GROUND

CAN IHS(+)

CAN IHS(-)

D145
20
WT/LG

D146
20
WT

C7/G

CAN IHS(+)

CAN IHS(-)

CONNECTOR-STAR CAN IHS IP

GROUND

Z912
20
BK

G912A

94
C1

A/C CLUTCH CONTROL

SENSOR GROUND

A/C PRESSURE SIGNAL

5 VOLT SUPPLY

C818
20
LB/OR

C18
20
LB/BR

C918
20
BK/LB

A/C PRESSURE 5 VOLT SUPPLY

A/C PRESSURE SIGNAL

A/C PRESSURE RETURN

TRANSDUCER-A/C PRESSURE

1
2
3

A/C CLUTCH CONTROL OUTPUT

CLUTCH-A/C COMPRESSOR

GROUND

Z909
1.0
BK

SP2068

Z909
2.0
BK

1
1

1
1

Z909
14
BK

G809A