



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

The present section contains the following disassembly sequences:

- A) Parking brake caliper disassembly
- B) Parking brake lever disassembly
- C) Disassembling the parking brake lever cables



A) Parking brake caliper disassembly

Preliminary operations

- Put the car on a car lift (000000).
- Remove the rear wheel (060103).

Disassembling the caliper

1. Act on the screw (A-Fig.1) to zero set the automatic backlash device.
2. Use a pair of pliers to release the parking brake cable (B-Fig.2).

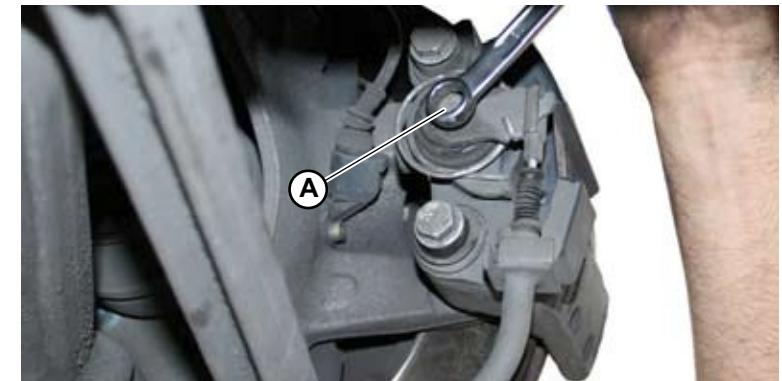


Fig.1



Fig.2


® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

3. Remove the 2 pins (C-Fig.3) from the calliper.
4. Remove the spring (D-Fig.3) from its housing.

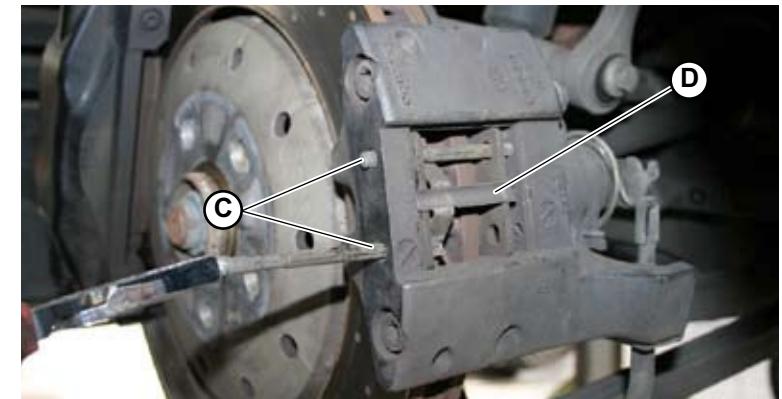


Fig.3

5. Unscrew the 2 bolts (E-Fig.4) securing the calliper.
6. Extract the calliper (F-Fig.4) and the pads (G-Fig.4) together.
7. If necessary, remove the pads from the calliper (G-Fig.4).



Fig.4

8. Remove the snap ring (H-Fig.5) and extract the parking brake cable.
9. Remove the parking brake calliper (F-Fig.5).

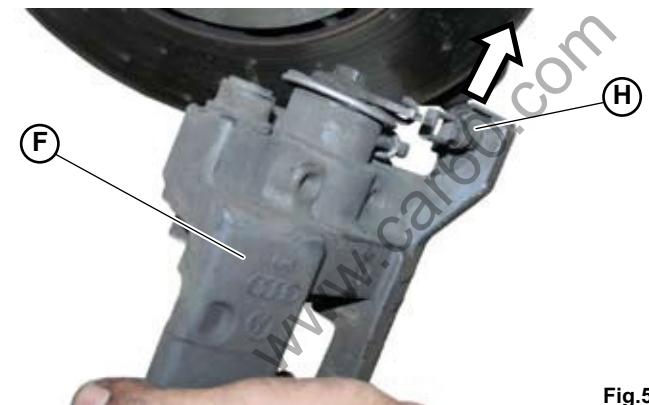


Fig.5



The same procedure applies to both rear wheels.

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



B) Parking brake lever disassembly

Preliminary operations

- Disassemble the central tunnel (086303).

Disassembling the lever

1. Unscrew the 3 screws (A-Fig.6) securing the parking brake lever (B-Fig.2).
2. Release the parking brake lever from the tie rod (C-Fig.6) behind it.
3. Disconnect the parking brake lever connector (D-Fig.6).

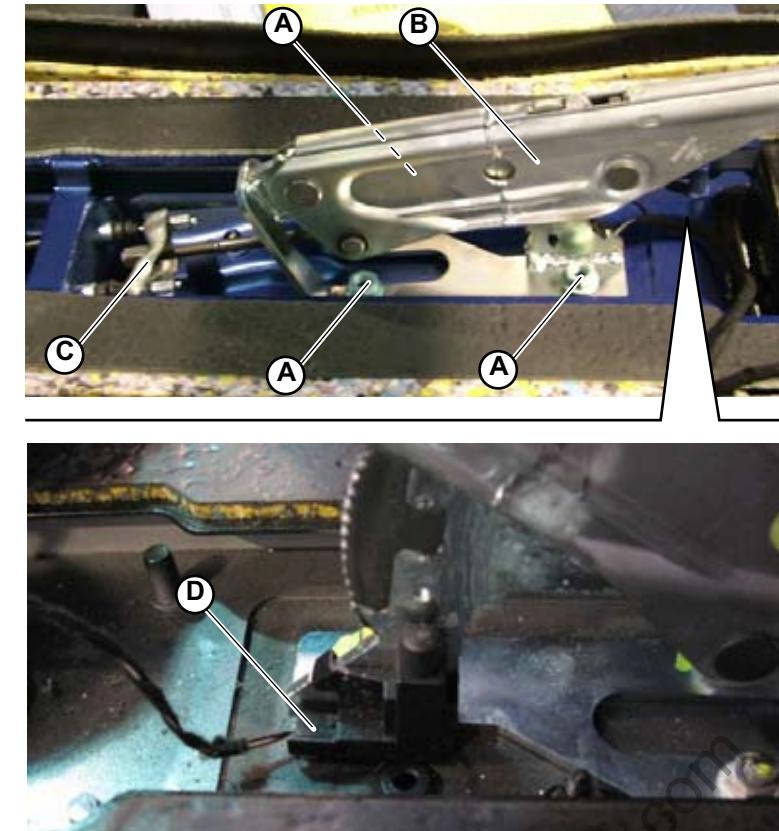


Fig.6



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



C) Disassembling the parking brake lever cables

Preliminary operations

- Raise the vehicle on the car lift (000000).
- Disassemble the rear wheels (060103).
- Disassemble the rear and centre flat floors (082503).

Disassembling the cables

1. To disassemble the glove box (A-Fig. 7), loosen 3 screws (B-Fig. 7) or remove the drink holder.
2. Disconnect the cables (C-Fig.7) from the parking brake lever.
3. Loosen the screws (D-Fig.8) securing the parking brake cable fastening clamps to the chassis.

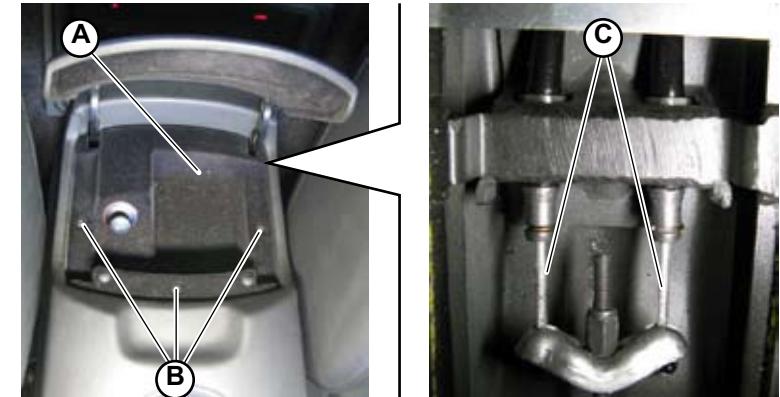


Fig.7

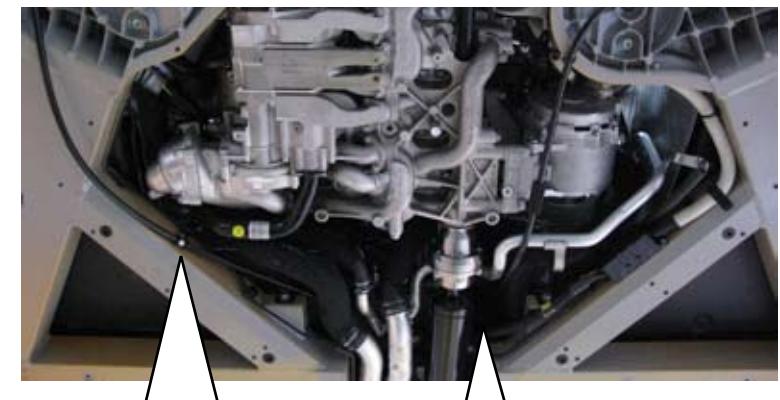


Fig.8



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

4. On both sides, remove the clip (E-Fig.9) and lower the spring (F-Fig.9) to disconnect the parking brake cable (C-Fig.9) from the rear brake calliper.

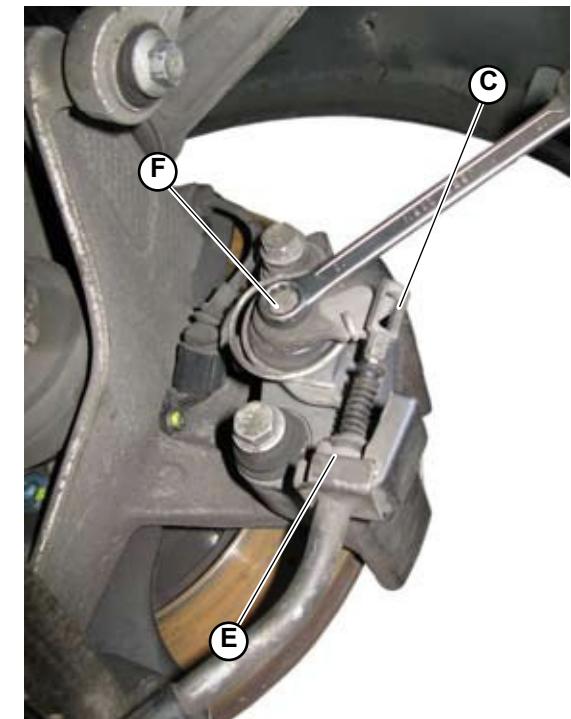


Fig.9