

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

This section explains how to disassemble:

- A) Disassembling the right side member on the body
- B) Disassembling the left side member on the body



#### A) Disassembling the right side member on the body

##### Preliminary operations

- Remove the rear seat cover (bottom) (086803).
- 1. Unscrew the screws securing the body side member (A-Fig.1) to the car using the free space created by the rear seat cover.
- Raise the car on the car lift (000000).
- Remove the 2 wheels on the right flank (front and rear wheels) (060103).
- Remove the rear element of the front wheel arch (082103).
- Remove the front element of the rear wheel arch (082103).

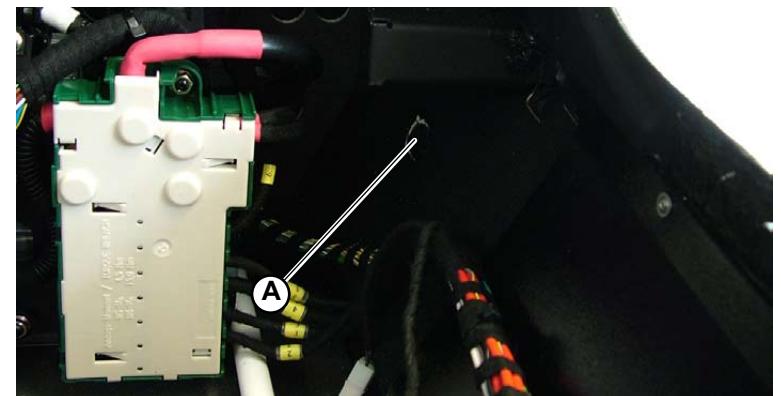


Fig.1

##### Side member disassembly

- 2. Unscrew the 2 screws (B-Fig.2) securing the conveyor to the side member, using the free space created by the rear element of the front wheel arch.
- 3. Unscrew the screw (C-Fig.2) securing the conveyor to the oil radiator, using the free space created by the front element of the rear wheel arch.

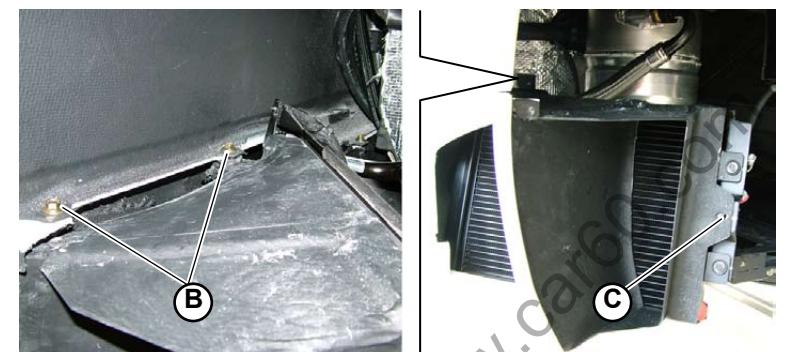


Fig.2



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

4. Unscrew the screw (D-Fig.3) at the front of the conveyor.

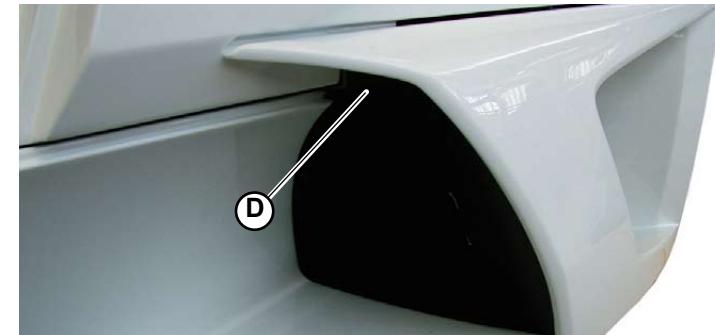


Fig.3

5. Unscrew the screw (E-Fig.4) on the lower part of the conveyor and remove the conveyor itself.

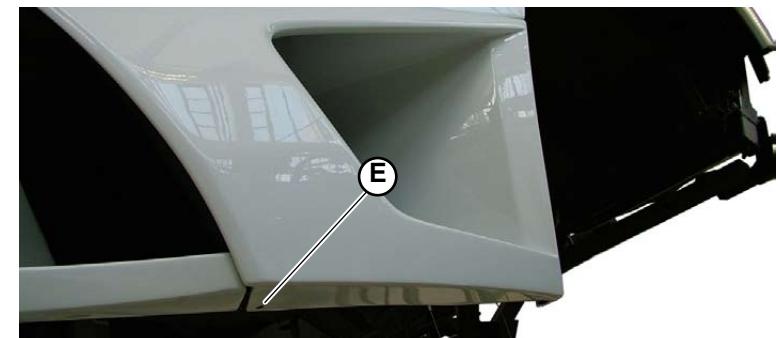


Fig.4

6. Remove the panel with the words "MURCIELAGO" located above the side member.
7. Unscrew the 4 screws (F-Fig.5) on the upper part of the side member.
8. Unscrew the 4 screws (G-Fig.5) on the lower part of the side member.
9. Unscrew the screw (H-Fig.5) at the front of the side member.
10. Remove the side member.



Fig.5

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



## B) Disassembling the left side member on the body

### Preliminary operations

- Raise the car on the car lift (000000).
- Remove the 2 wheels on the left flank (front and rear wheels) (060103).
- Remove the rear element of the front wheel arch (082103).
- Remove the front element of the rear wheel arch (082103).

### Side member disassembly

1. Unscrew the 3 screws (A-Fig.6) securing the rear part of the side member, using the free space created by the rear element of the wheel arch.
2. Unscrew the screw (B-Fig.7) securing the rear part of the side member to the side member itself.
3. Unscrew the screw (C-Fig.8) on the lower part and remove the rear part of the side member (D-Fig.8).

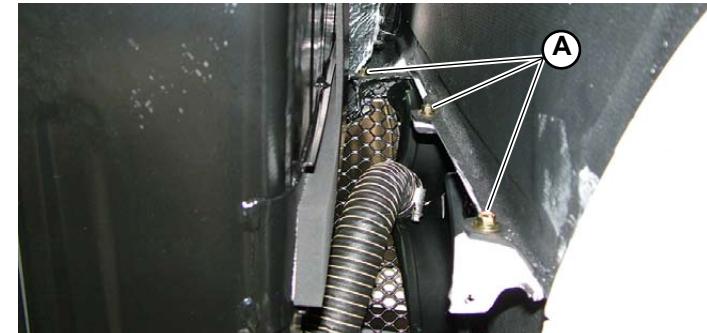


Fig.6

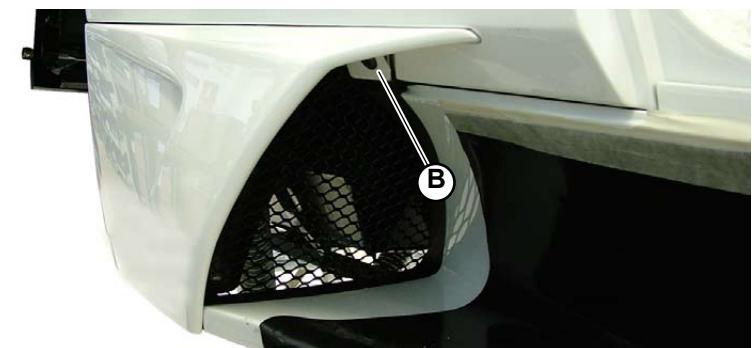


Fig.7

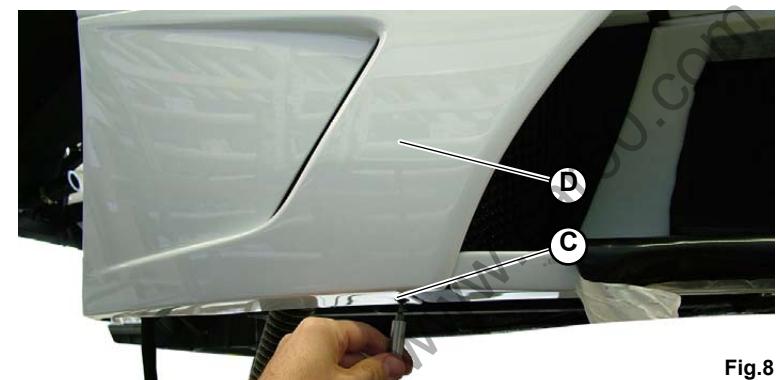


Fig.8



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

4. Disconnect the pipe (E-Fig.9) from the air conveyor (by means of the clamp) and remove it from the engine compartment.

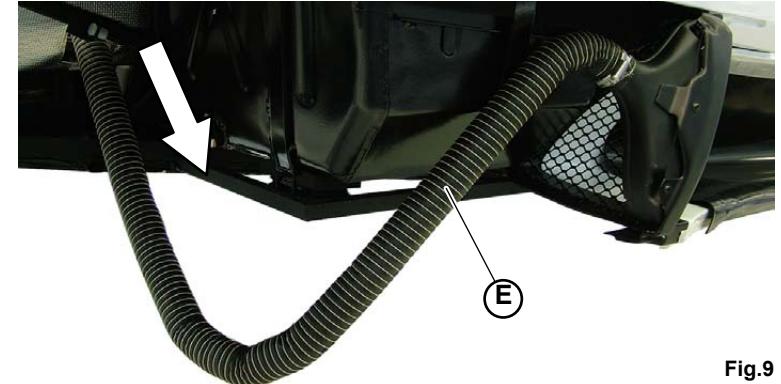


Fig.9

5. Remove the panel with the words "MURCIELAGO" located above the side member.
6. Unscrew the 4 screws (F-Fig.10) on the upper part of the side member.
7. Unscrew the 4 screws (G-Fig.10) on the lower part of the side member.
8. Unscrew the screw (H-Fig.10) at the front of the side member.
9. Remove the side member.

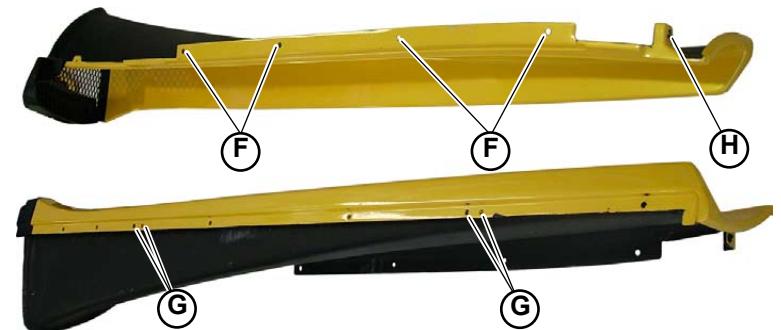


Fig.10

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

This section explains how to assemble:

- A) Assembling the right side member on the body
- B) Assembling the left side member on the body



#### A) Assembling the right side member on the body

1. Tighten the 4 screws (A-Fig.1) on the upper part of the side member.
2. Tighten the 4 screws (B-Fig.1) on the lower part of the side member onto the 2 relative support brackets.
3. Tighten the screw (C-Fig.1) at the front of the side member.
4. Attach the panel with the words "MURCIÉLAGO" above the side member.
- Assemble the oil radiator (011705).

5. Secure the air conveyor onto the side member using the 2 internal screws (D-Fig.2).
6. Tighten the screw (E-Fig.2) to secure the conveyor onto the oil radiator.

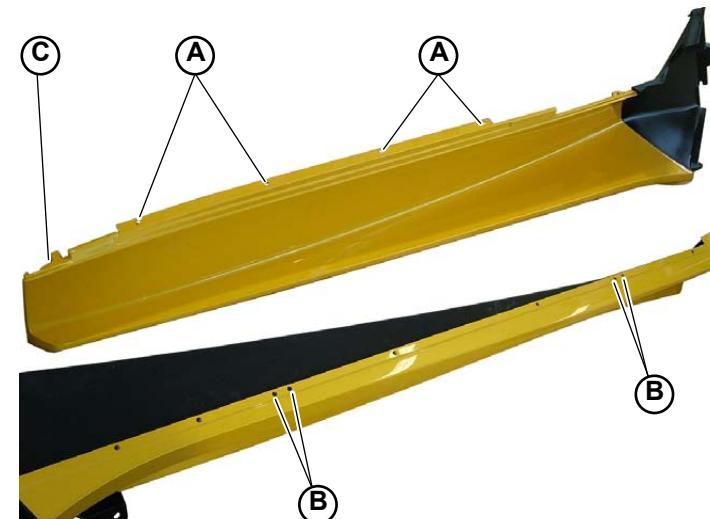


Fig.1

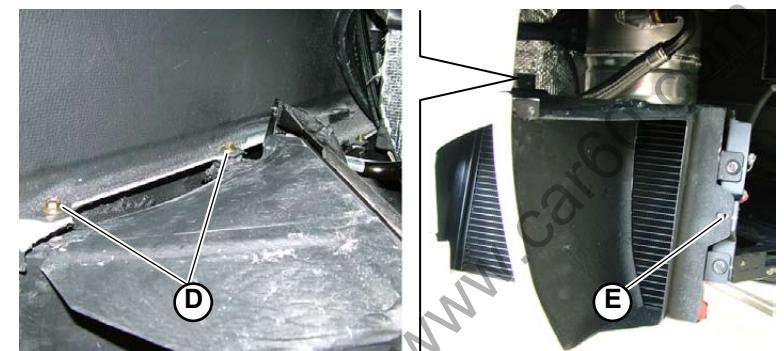


Fig.2



® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

7. Tighten the screw (F-Fig.3) at the front of the conveyor.

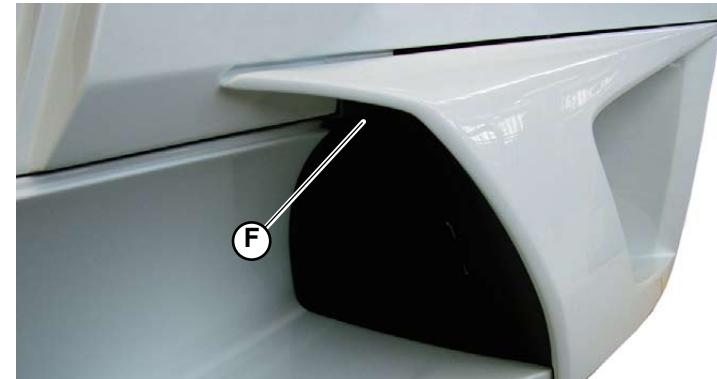


Fig.3

8. Tighten the screw (G-Fig.4) on the lower part of the conveyor.

- Assemble the front element of the rear wheel arch (082105).
- Assemble the rear element of the front wheel arch (082105).
- Assemble the 2 wheels on the right flank (front and rear wheels) (060105).

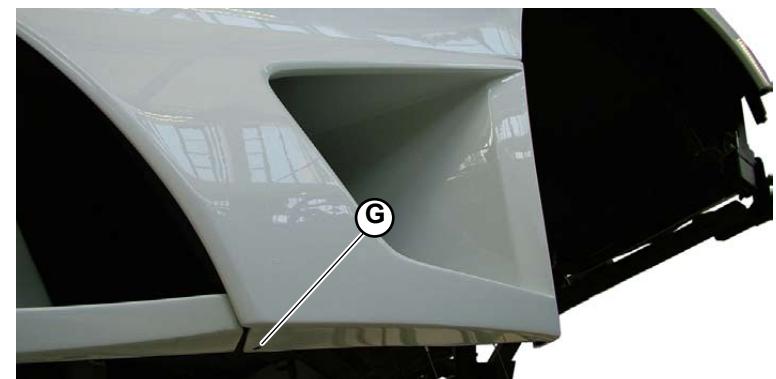


Fig.4

9. Tighten the screws securing the body side member (H-Fig.5) to the car using the free space created by the rear seat cover.

- Assemble the rear seat cover (bottom) (086805).

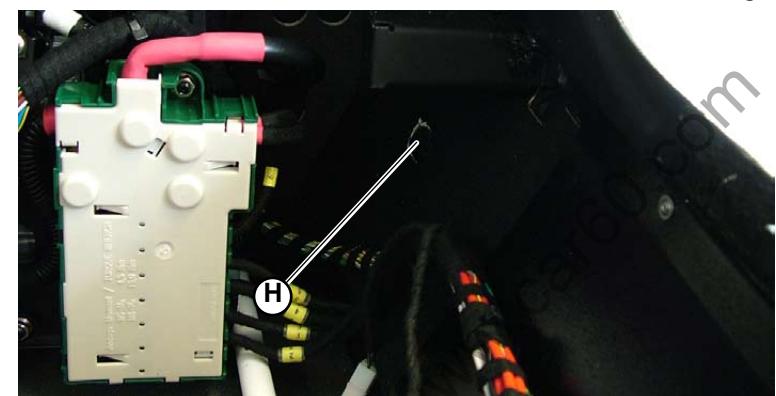


Fig.5

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.



### B) Assembling the left side member on the body

1. Tighten the 4 screws (A-Fig.6) on the upper part of the side member.
2. Tighten the 4 screws (B-Fig.6) on the lower part of the side member onto the 2 relative support brackets.
3. Tighten the screw (C-Fig.6) at the front of the side member.
4. Attach the panel with the words "MURCIÉLAGO" above the side member.
5. Connect the pipe (D-Fig.7) onto the air conveyor (by means of the clamp) and insert it into the engine compartment through the provided hole.
6. Position the rear part of the side member and secure it using the 3 internal screws (E-Fig.8).

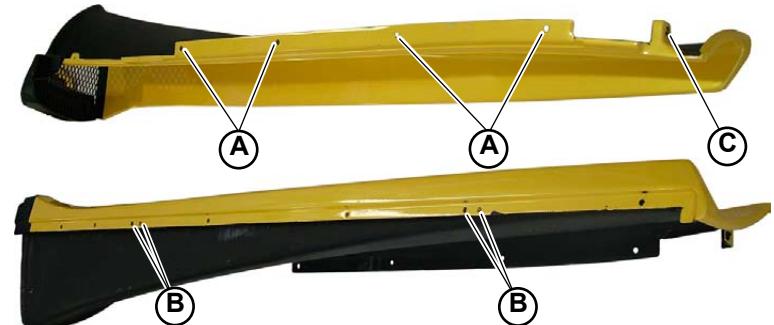


Fig.6



Fig.7

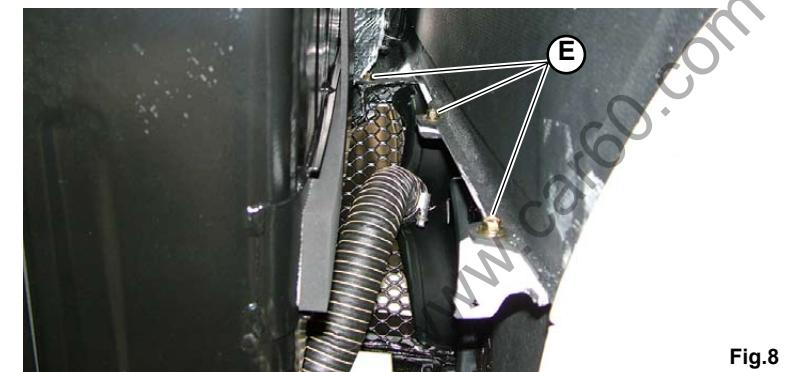


Fig.8

® Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

7. Tighten the screw (F-Fig.9) to secure the rear part of the side member onto the side member.

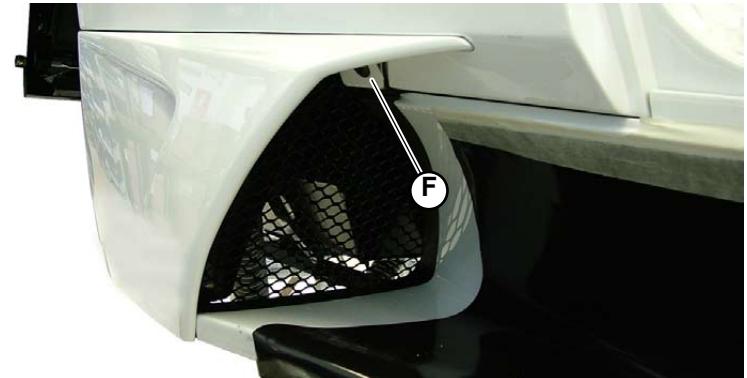


Fig.9

8. Tighten the screw (G-Fig.10) on the lower part.

- Assemble the front element of the rear wheel arch (082105).
- Assemble the rear element of the front wheel arch (082105).
- Assemble the 2 wheels on the left flank (front and rear wheels) (060105).



Fig.10

www.car60.com