




蓄电池-启动

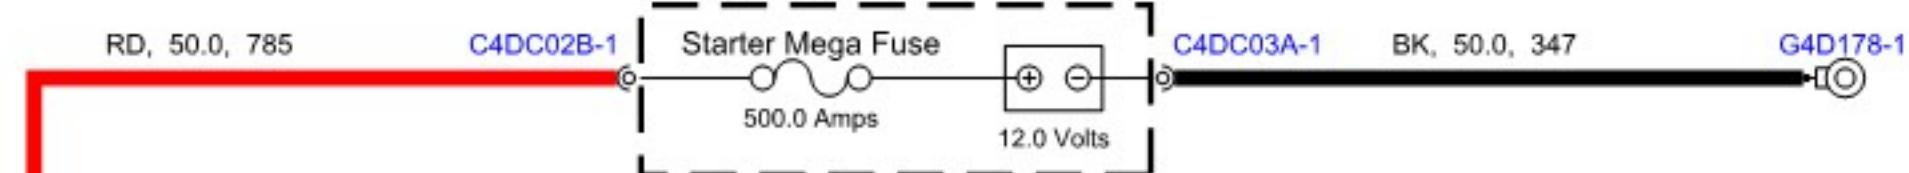


蓄电池接线盒

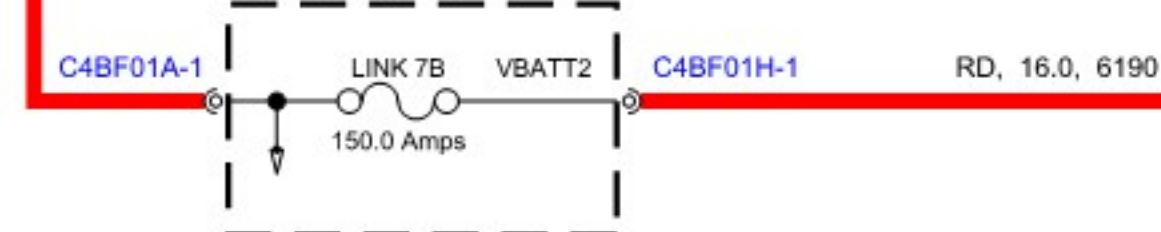


接线盒 - 乘客

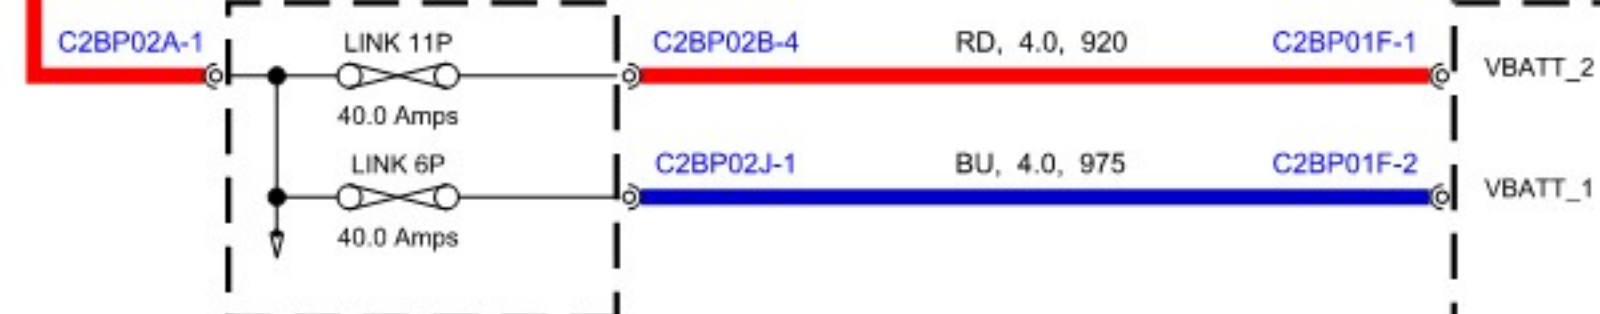


总成 - BCM-GWM

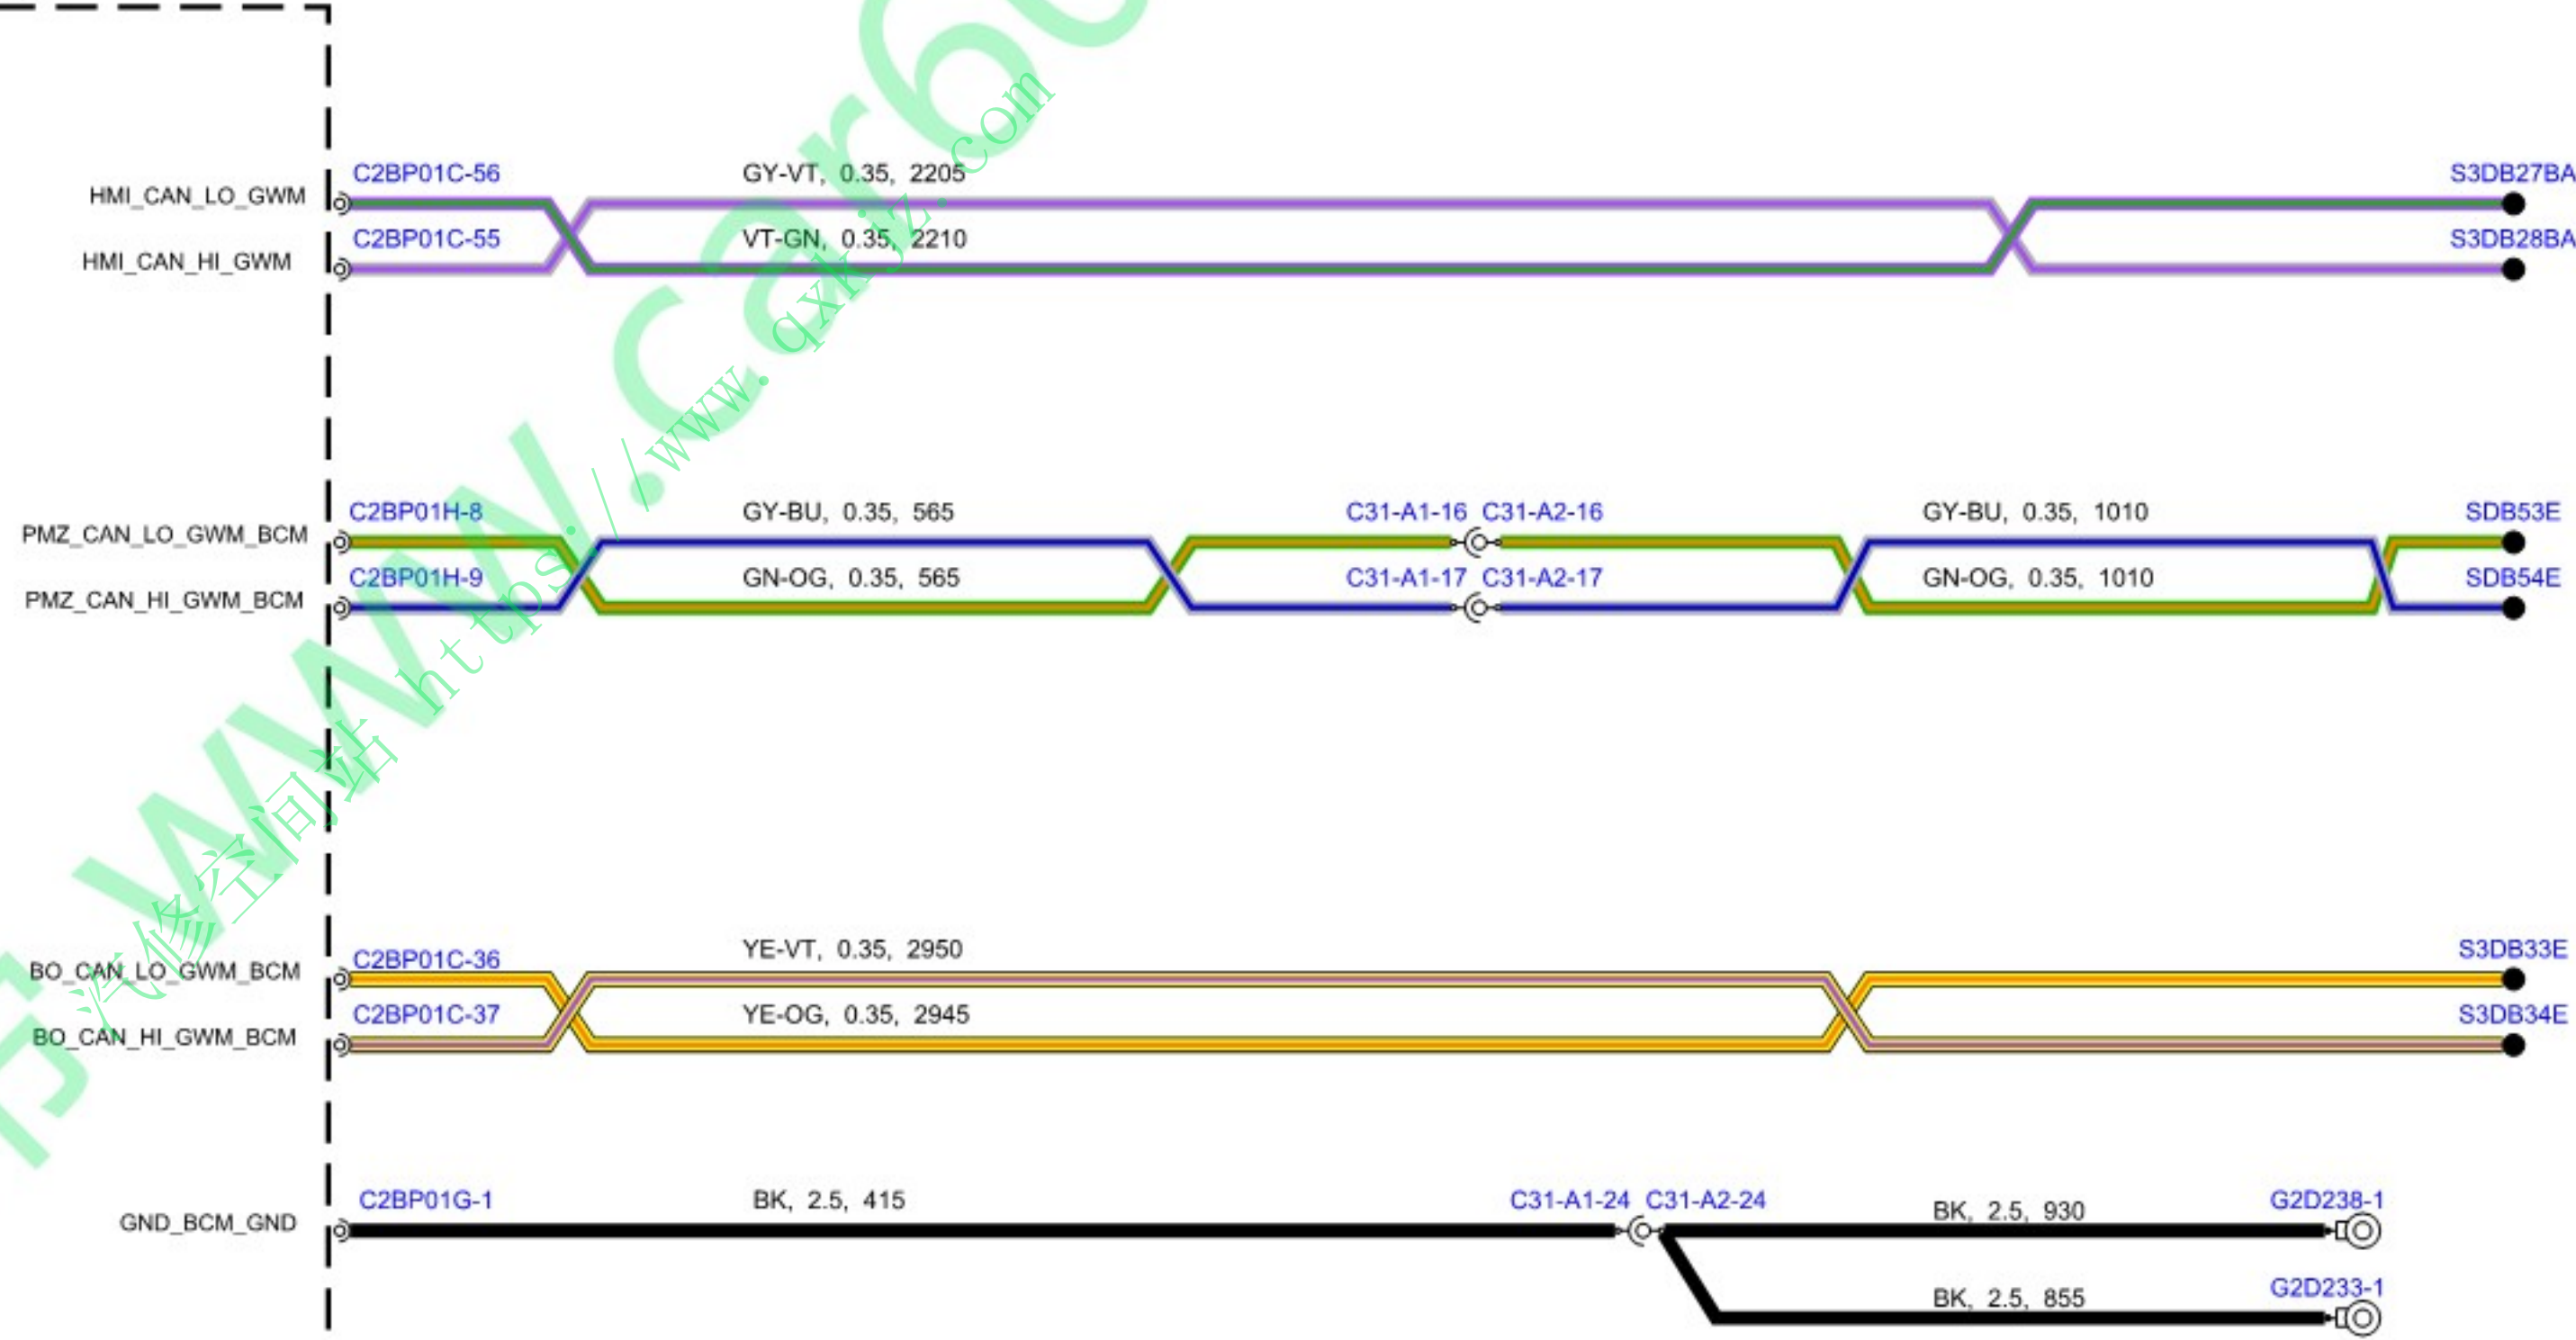



MY32 2018-04-02 10:09:00 (S.M2 21MYF-J021P09)

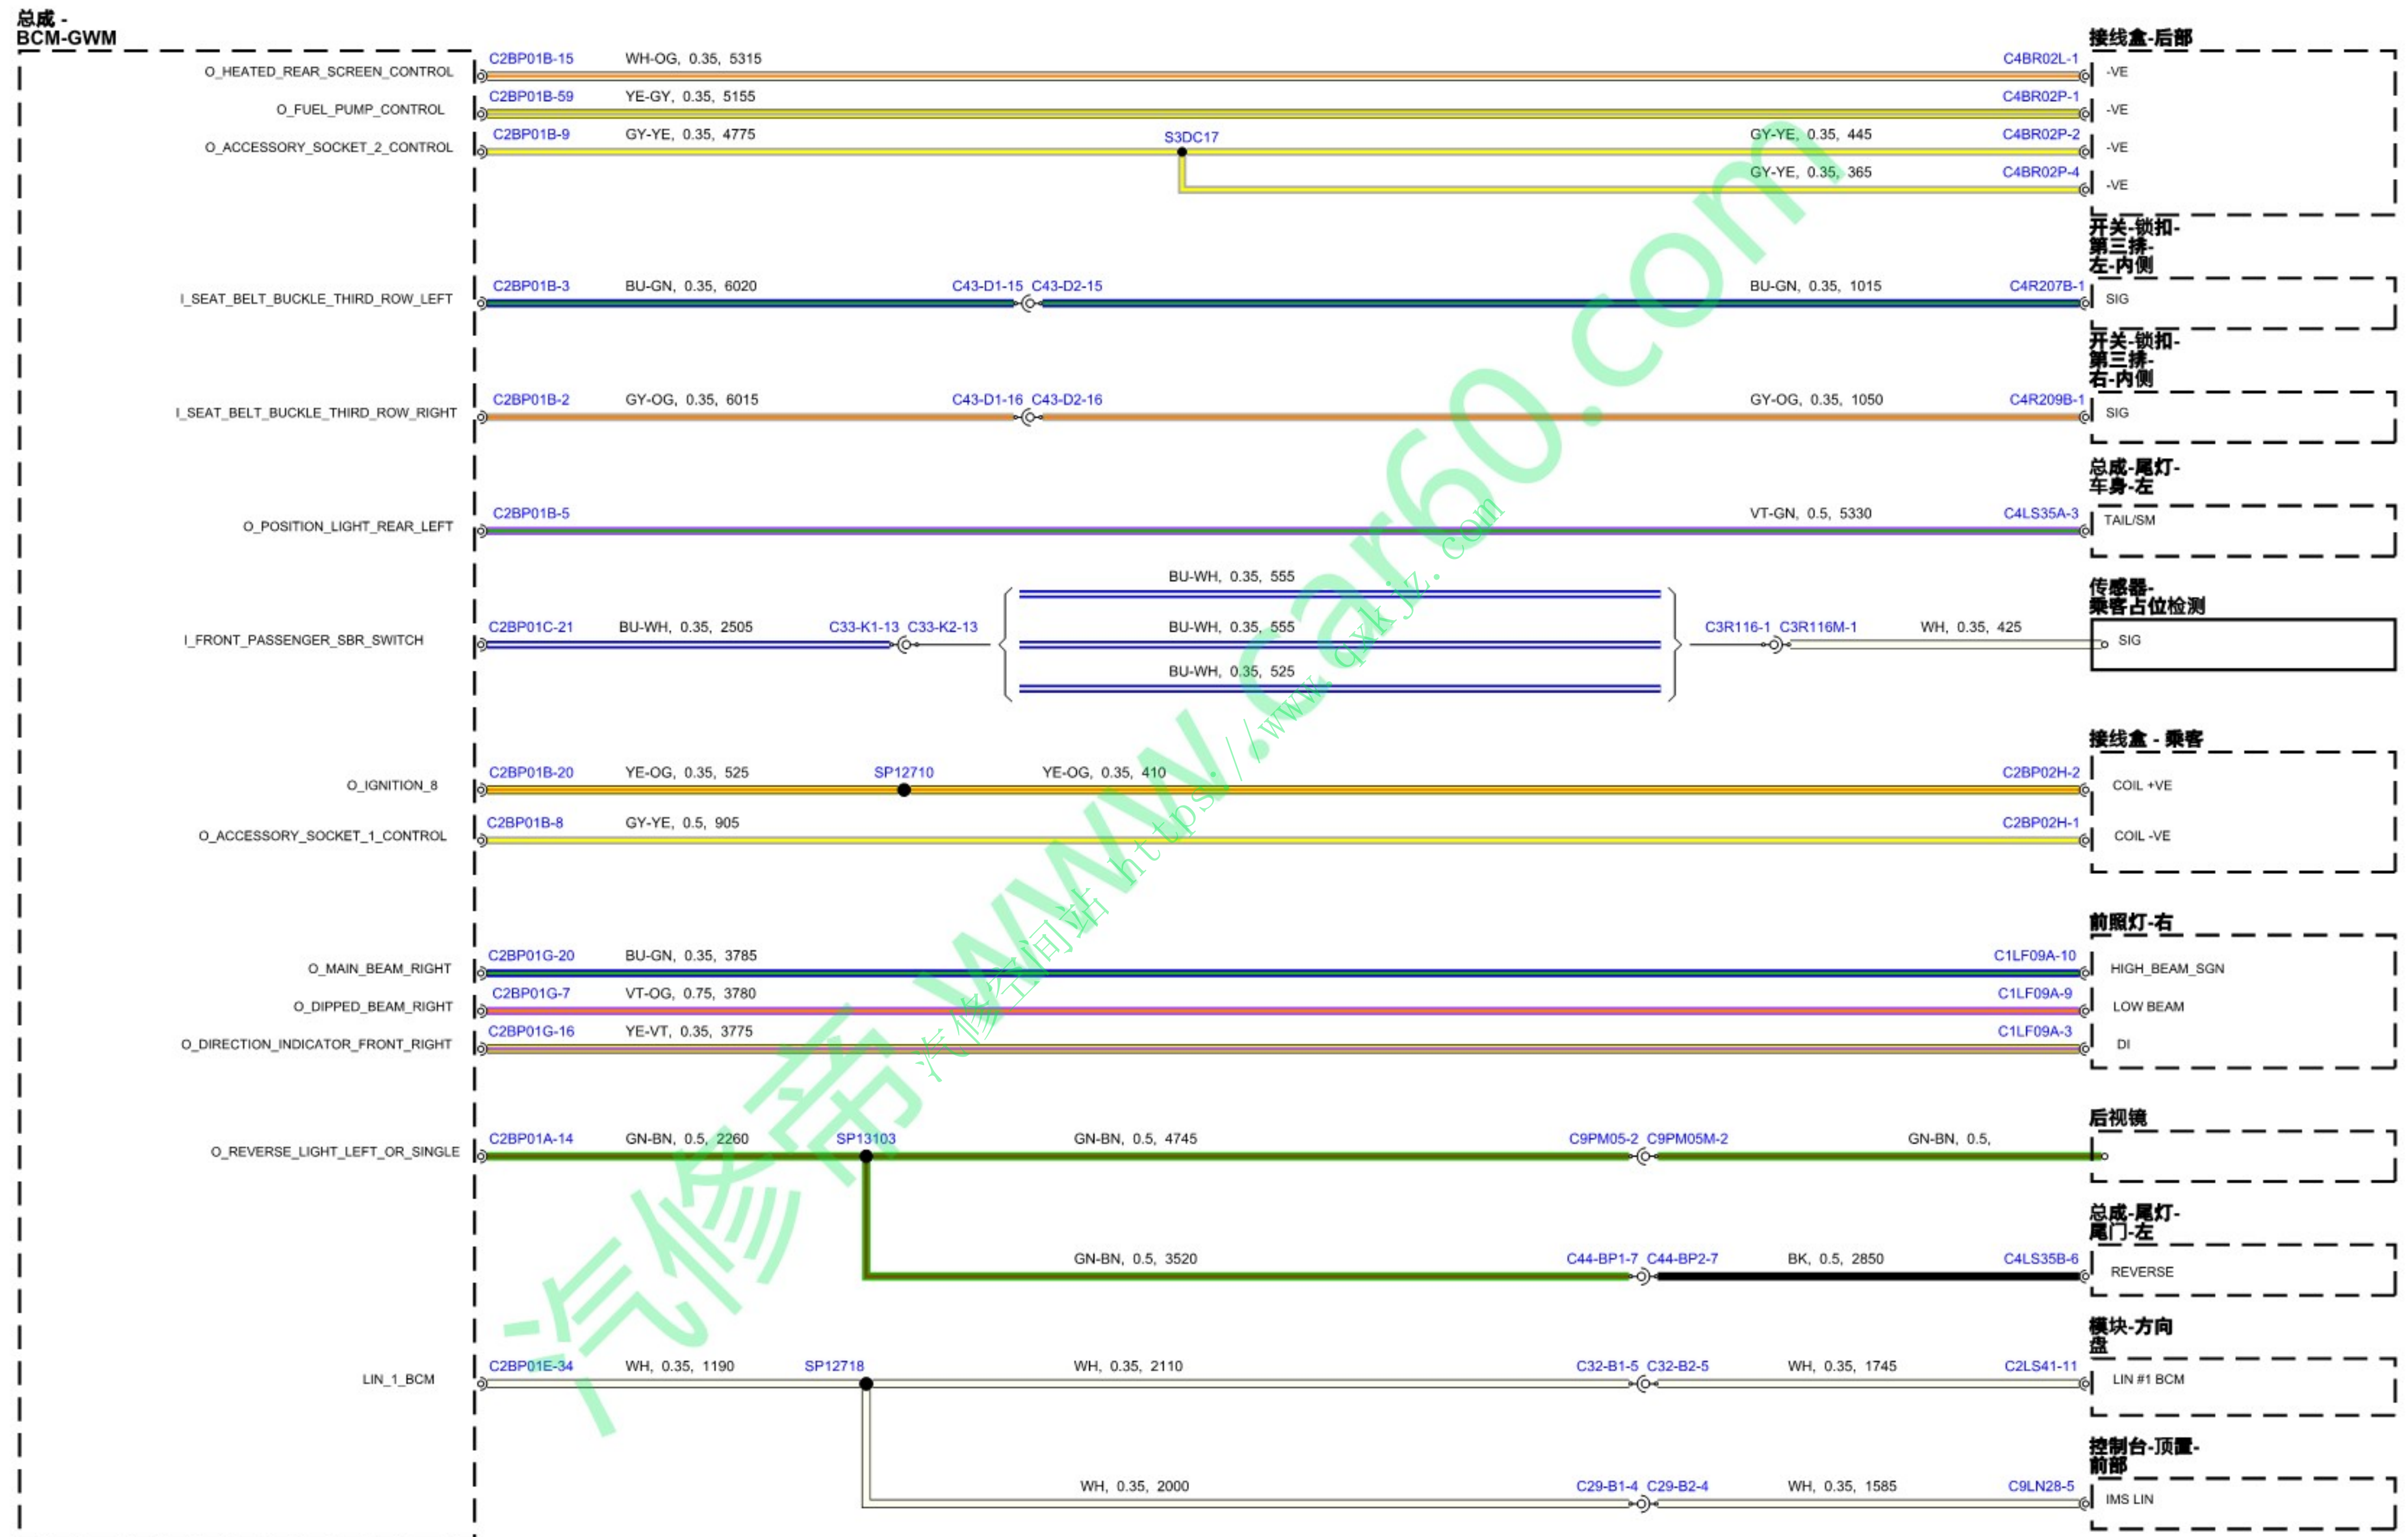

MF32-70(10)AA-55-15-Chassis (S.463-21MY-J081790)

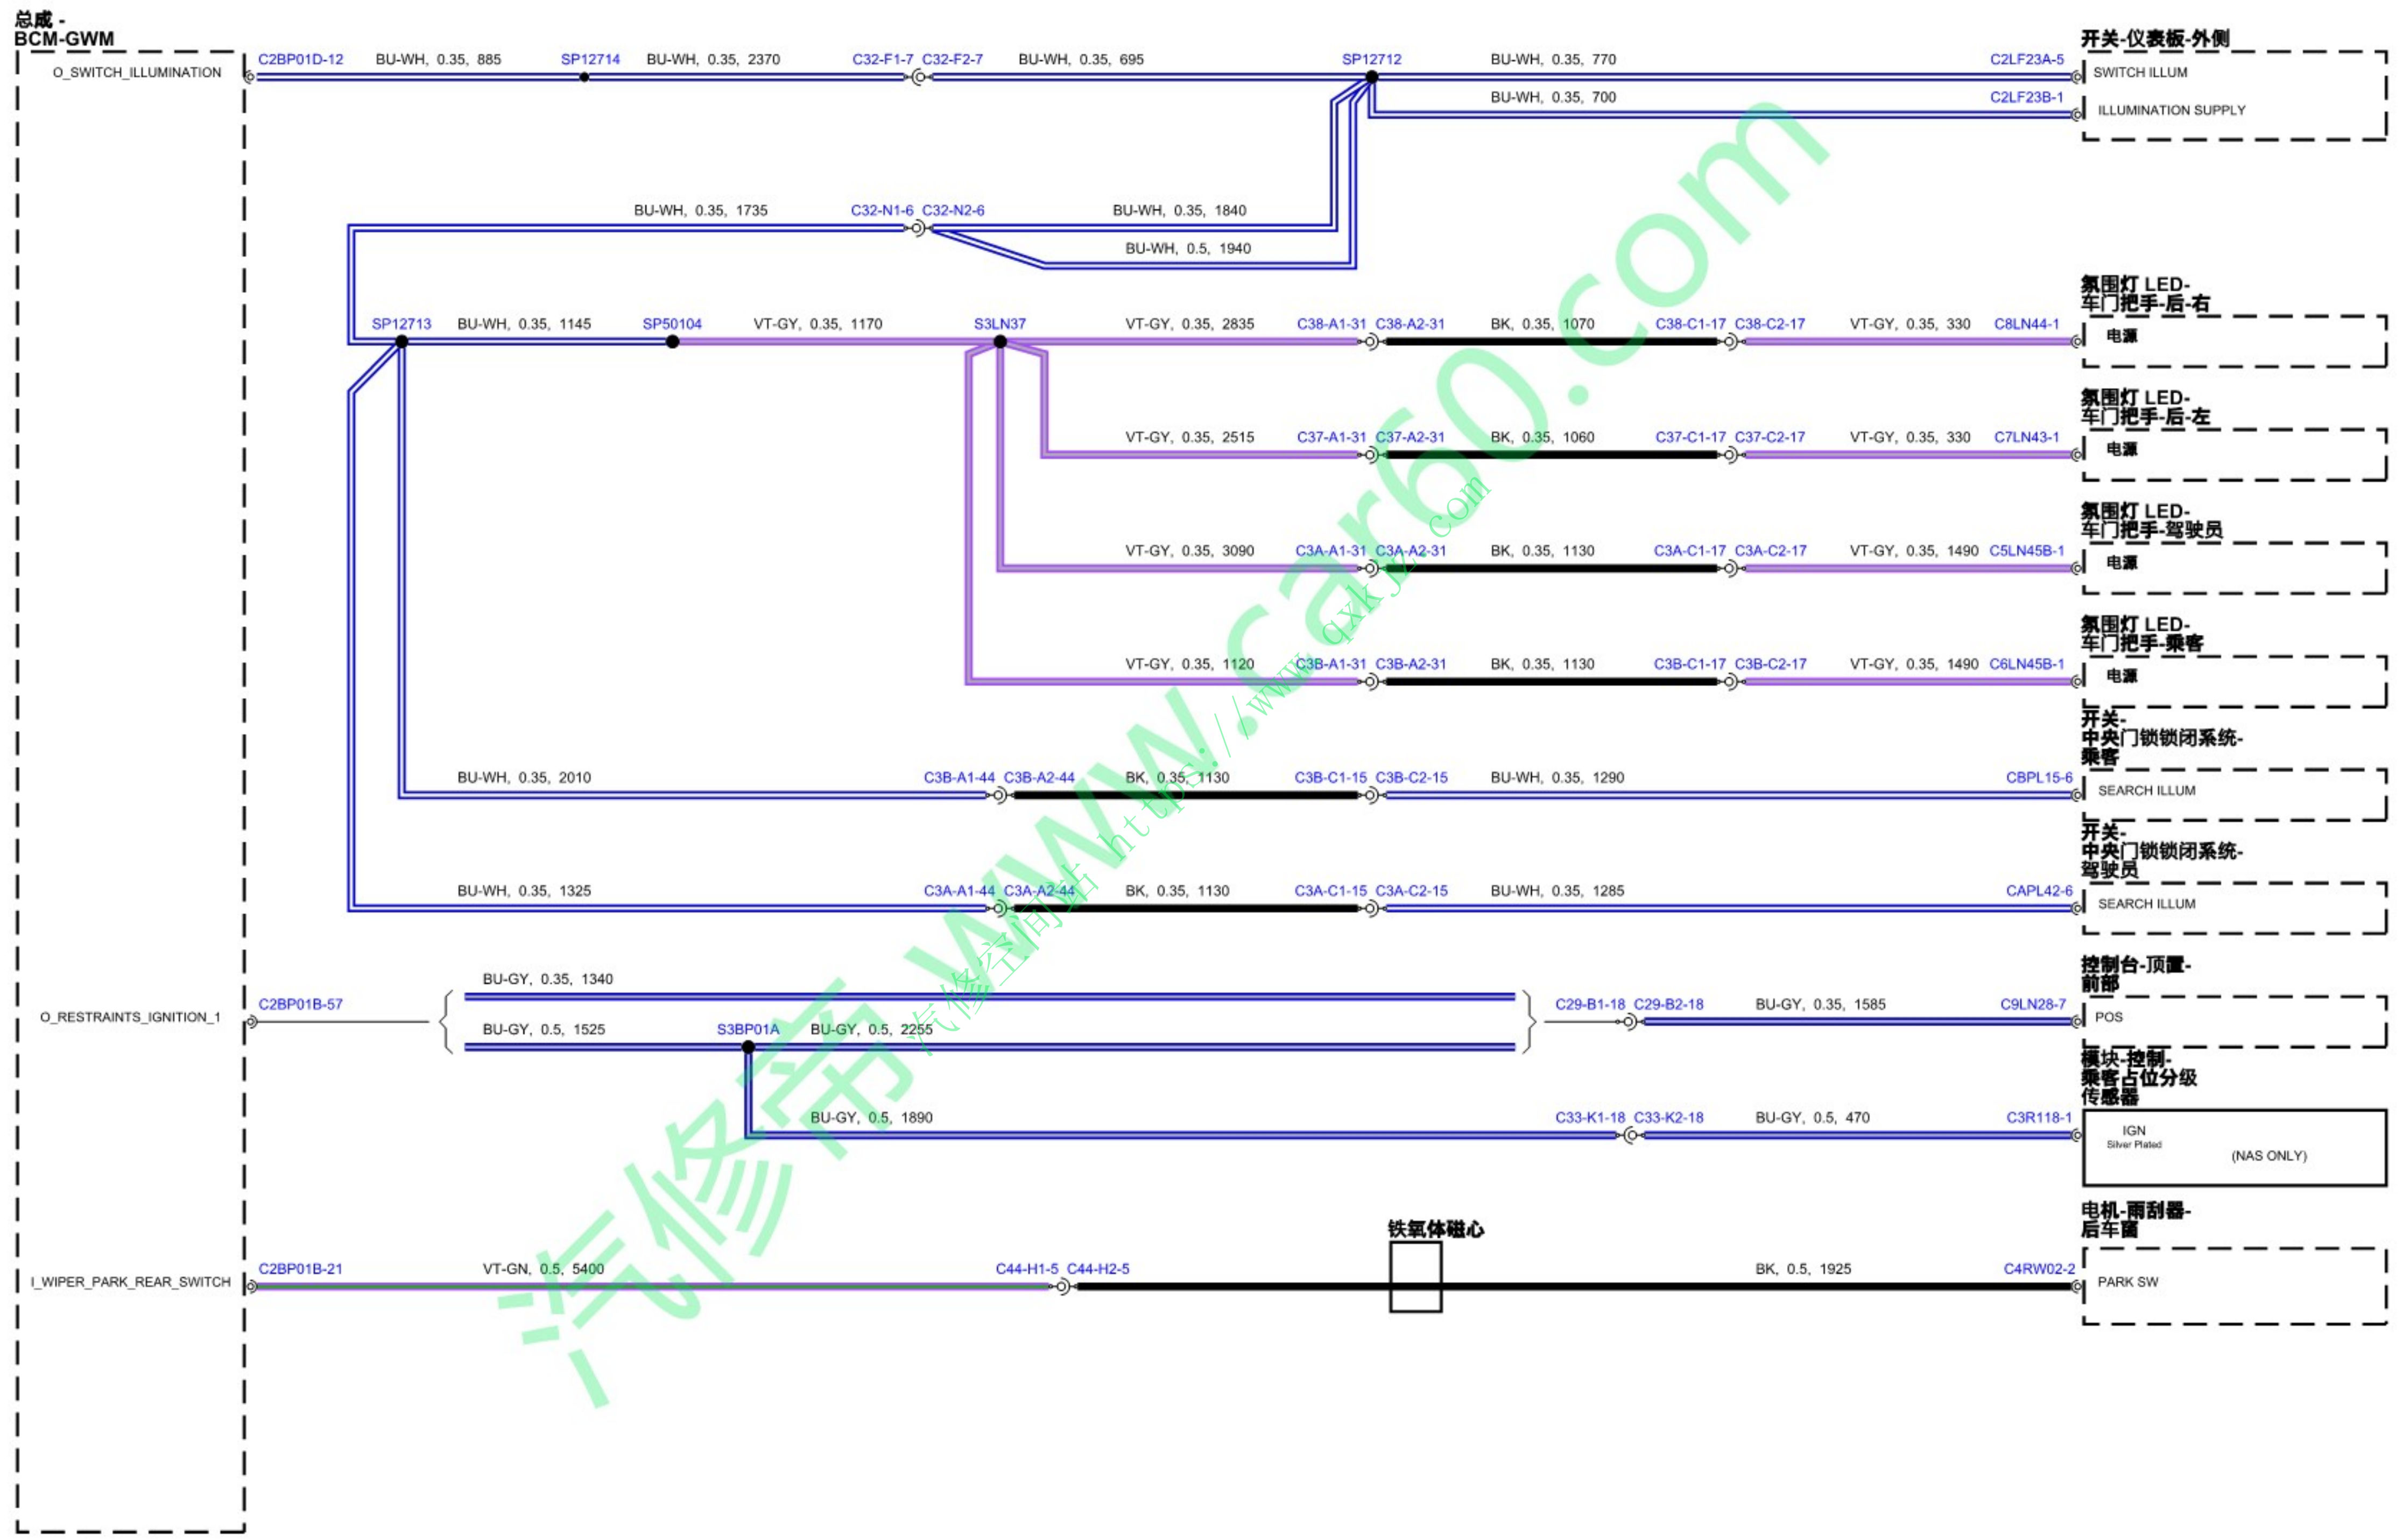

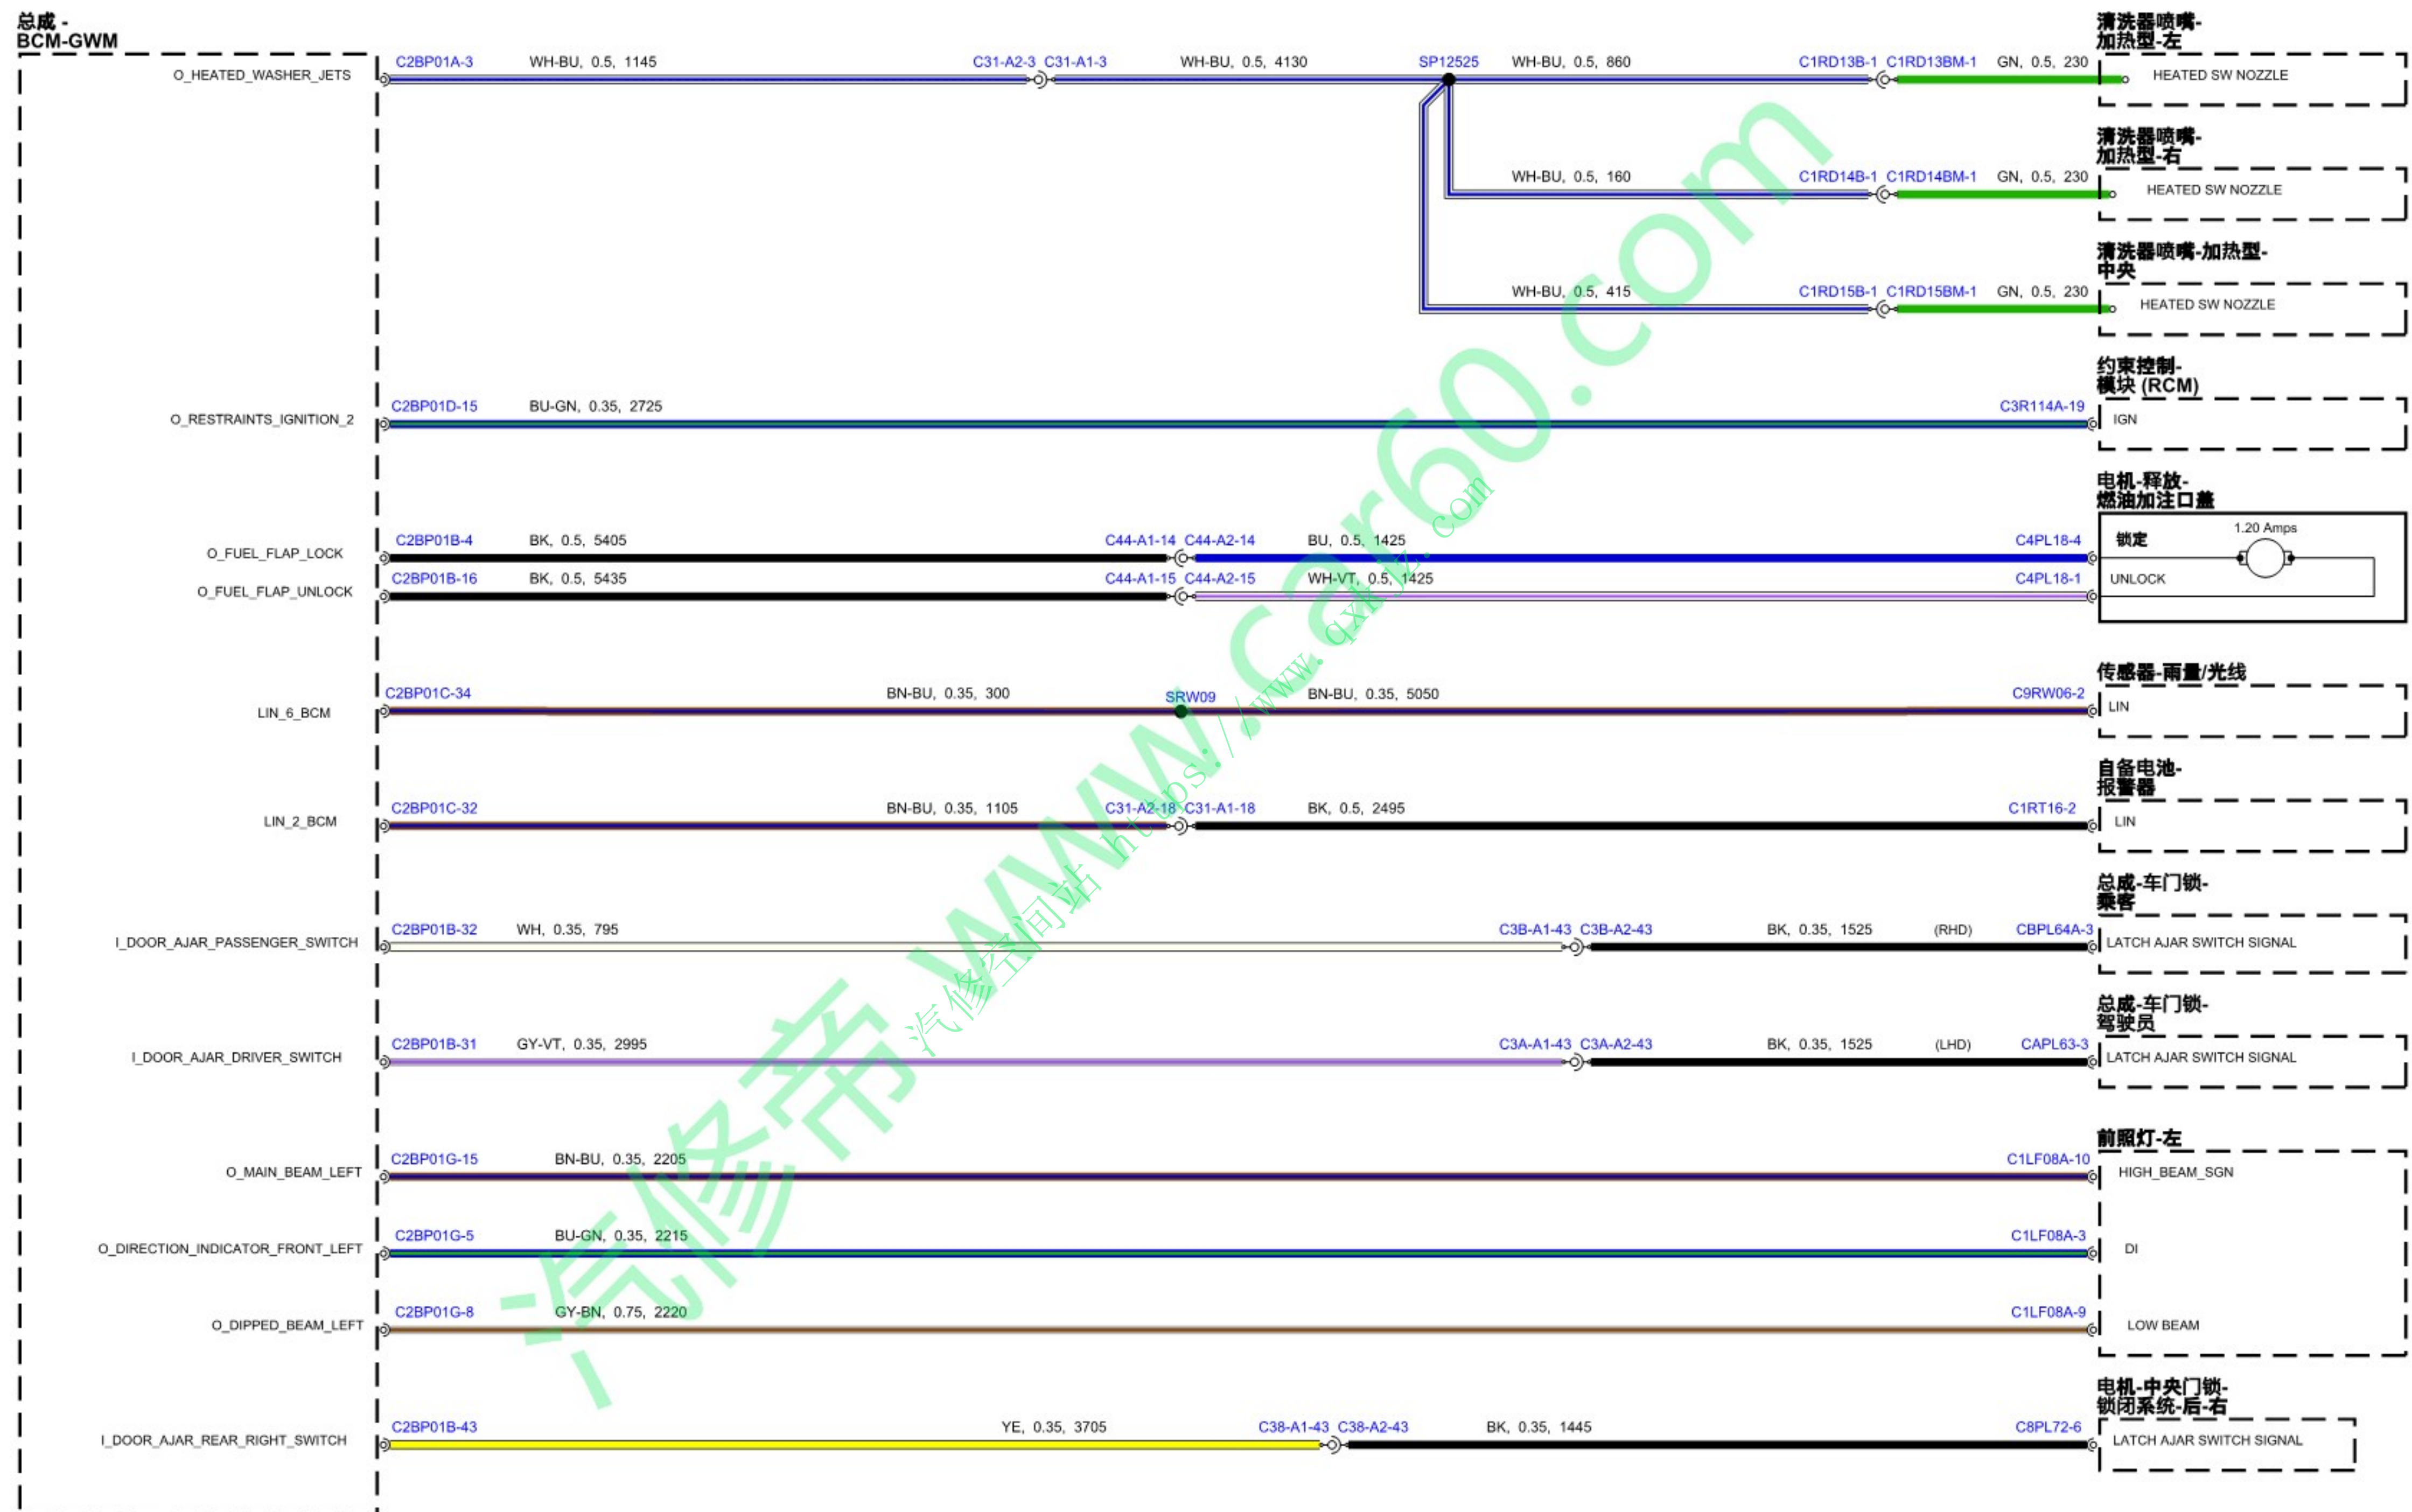

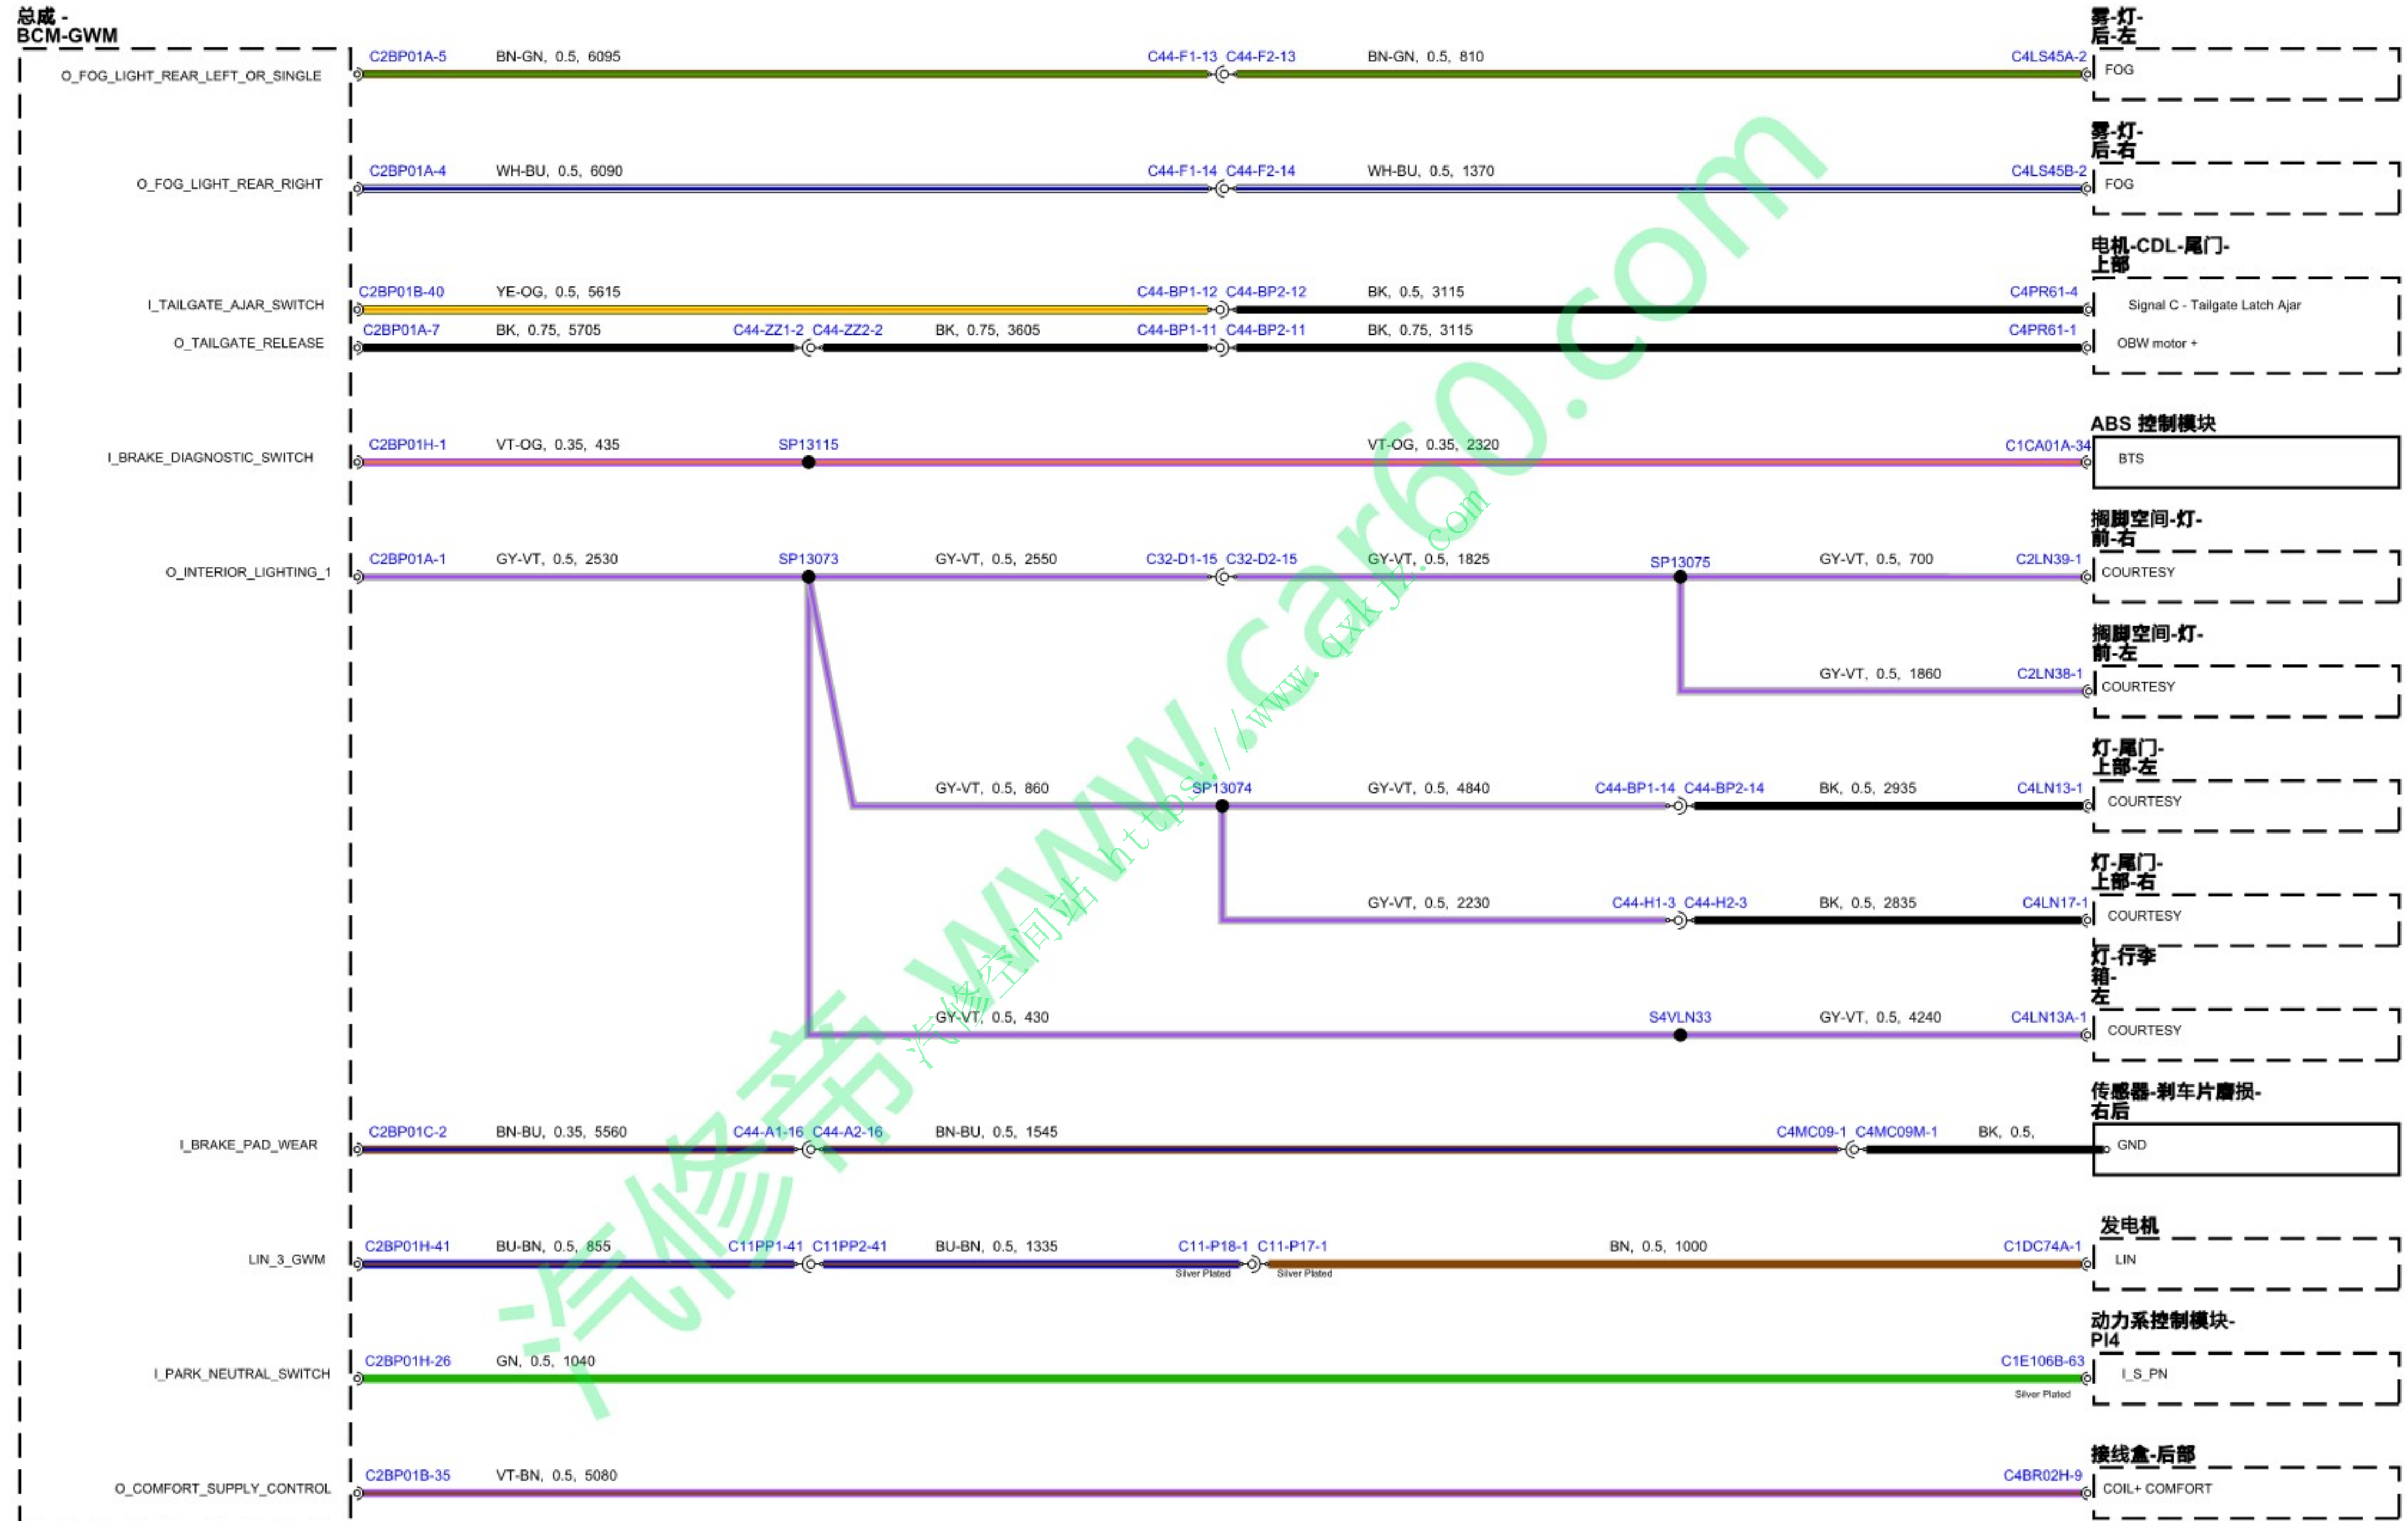

总成 - BCM-GWM

开关组-转向柱-调整

I_COLUMN_ADJUST_EASY_ENTRY_EXIT_SWITCH

C2BP01E-26 BU-GN, 0.35, 3275 C32-B1-3 C32-B2-3 BU-GN, 0.35, 1745 C2PP11-5

I_COLUMN_ADJUST_SWITCHPACK

C2BP01E-2 VT-WH, 0.35, 3235 C32-F1-12 C32-F2-12 VT-WH, 0.35, 1735 C2PP11-1

GND_COLUMN_ADJUST_SWITCHPACK_GND

C2BP01E-21 GN-OG, 0.35, 3270 C32-B1-1 C32-B2-1 GN-OG, 0.35, 1550 SP12886 GN-OG, 0.35, 210 C2PP11-3

O_COLUMN_ADJUST_RETRACT

C2BP01D-2 VT-GY, 1.5, 870 C32-N1-22 C32-N2-22 VT-GY, 1.5, 2600 C2PP03B-2

O_COLUMN_ADJUST_DOWN_OR_DOWN-EXTEND

C2BP01D-1 GY, 1.5, 870 C32-N1-21 C32-N2-21 GY, 1.5, 2600 C2PP03B-1

I_COLUMN_ADJUST_HALL_COUNT_TILT

C2BP01E-52 WH, 0.35, 3290 C32-B1-11 C32-B2-11 WH, 0.35, 1490 C2PP03B-4

O_COLUMN_ADJUST_EXTEND

C2BP01D-9 GY-BN, 1.5, 3415 C32-B1-19 C32-B2-19 GY-BN, 1.5, 1180 C2PP03A-3

O_COLUMN_ADJUST_UP_OR_UP-RETRACT

C2BP01D-20 GN-VT, 1.5, 3415 C32-B1-20 C32-B2-20 GN-VT, 1.5, 1180 C2PP03A-1

I_COLUMN_ADJUST_HALL_COUNT_TELESCOPE

C2BP01E-44 VT-BN, 0.35, 3280 C32-B1-9 C32-B2-9 VT-BN, 0.35, 1140 C2PP03A-2

I_DOOR_AJAR_REAR_LEFT_SWITCH

C2BP01B-42 GN, 0.35, 3385 C37-A1-43 C37-A2-43 BK, 0.35, 1445 C7PL72-3

O_BACKLIGHTING_ADJUST_5V

C2BP01E-54 WH-BN, 0.35, 3295 C32-B1-12 C32-B2-12 WH-BN, 0.35, 370 C2LF23B-4

I_BACKLIGHTING_ADJUST_5V

C2BP01E-22 BU-WH, 0.35, 3270 C32-B1-2 C32-B2-2 BU-WH, 0.35, 370 C2LF23B-5

GND_LIGHTING_STALK_GND

C2BP01E-35 GY-YE, 0.35, 3300 C32-B1-4 C32-B2-4 GY-YE, 0.35, 370 C2LF23B-6

I_INTERIOR_LIGHT_SWITCH





C2BP01C-15 YE-GY, 0.35, 1460 C29-B1-19 C29-B2-19 YE-GY, 0.35, 1585 C9LN28-19


总成-转向柱


电机-中央门锁-锁闭系统-后-左

开关-仪表板-外侧

控制台-顶置-前部

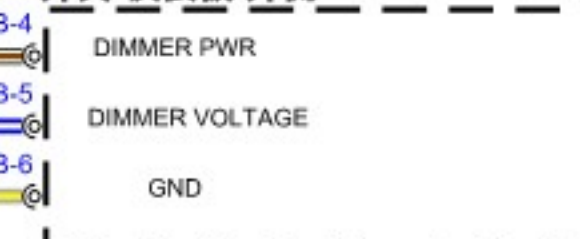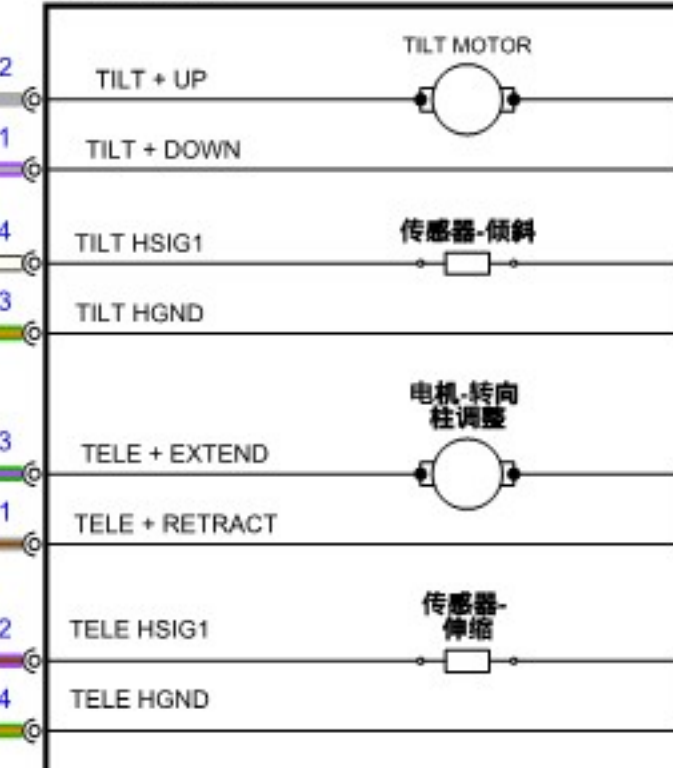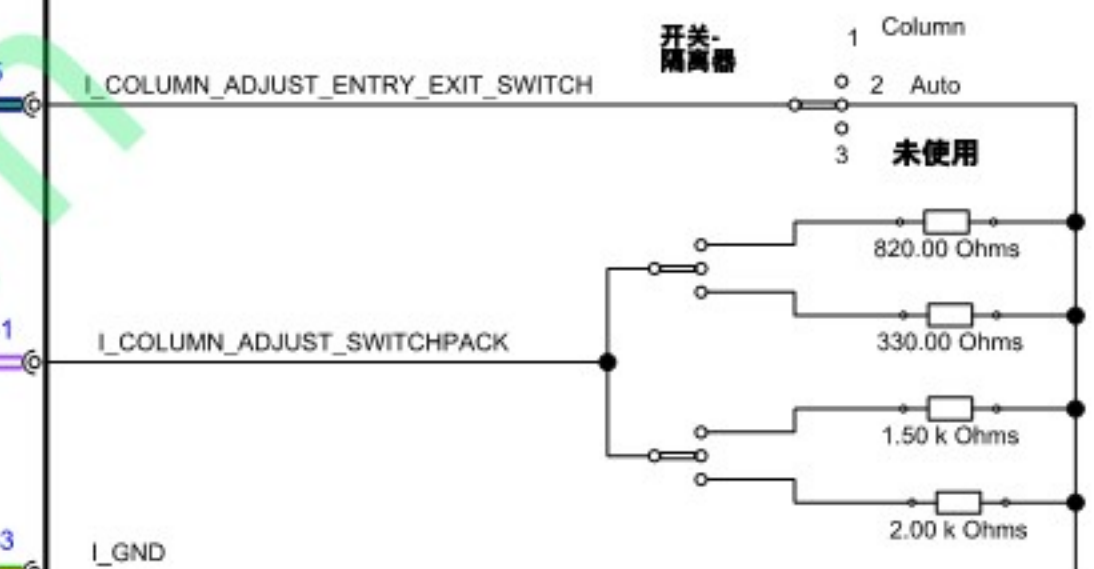

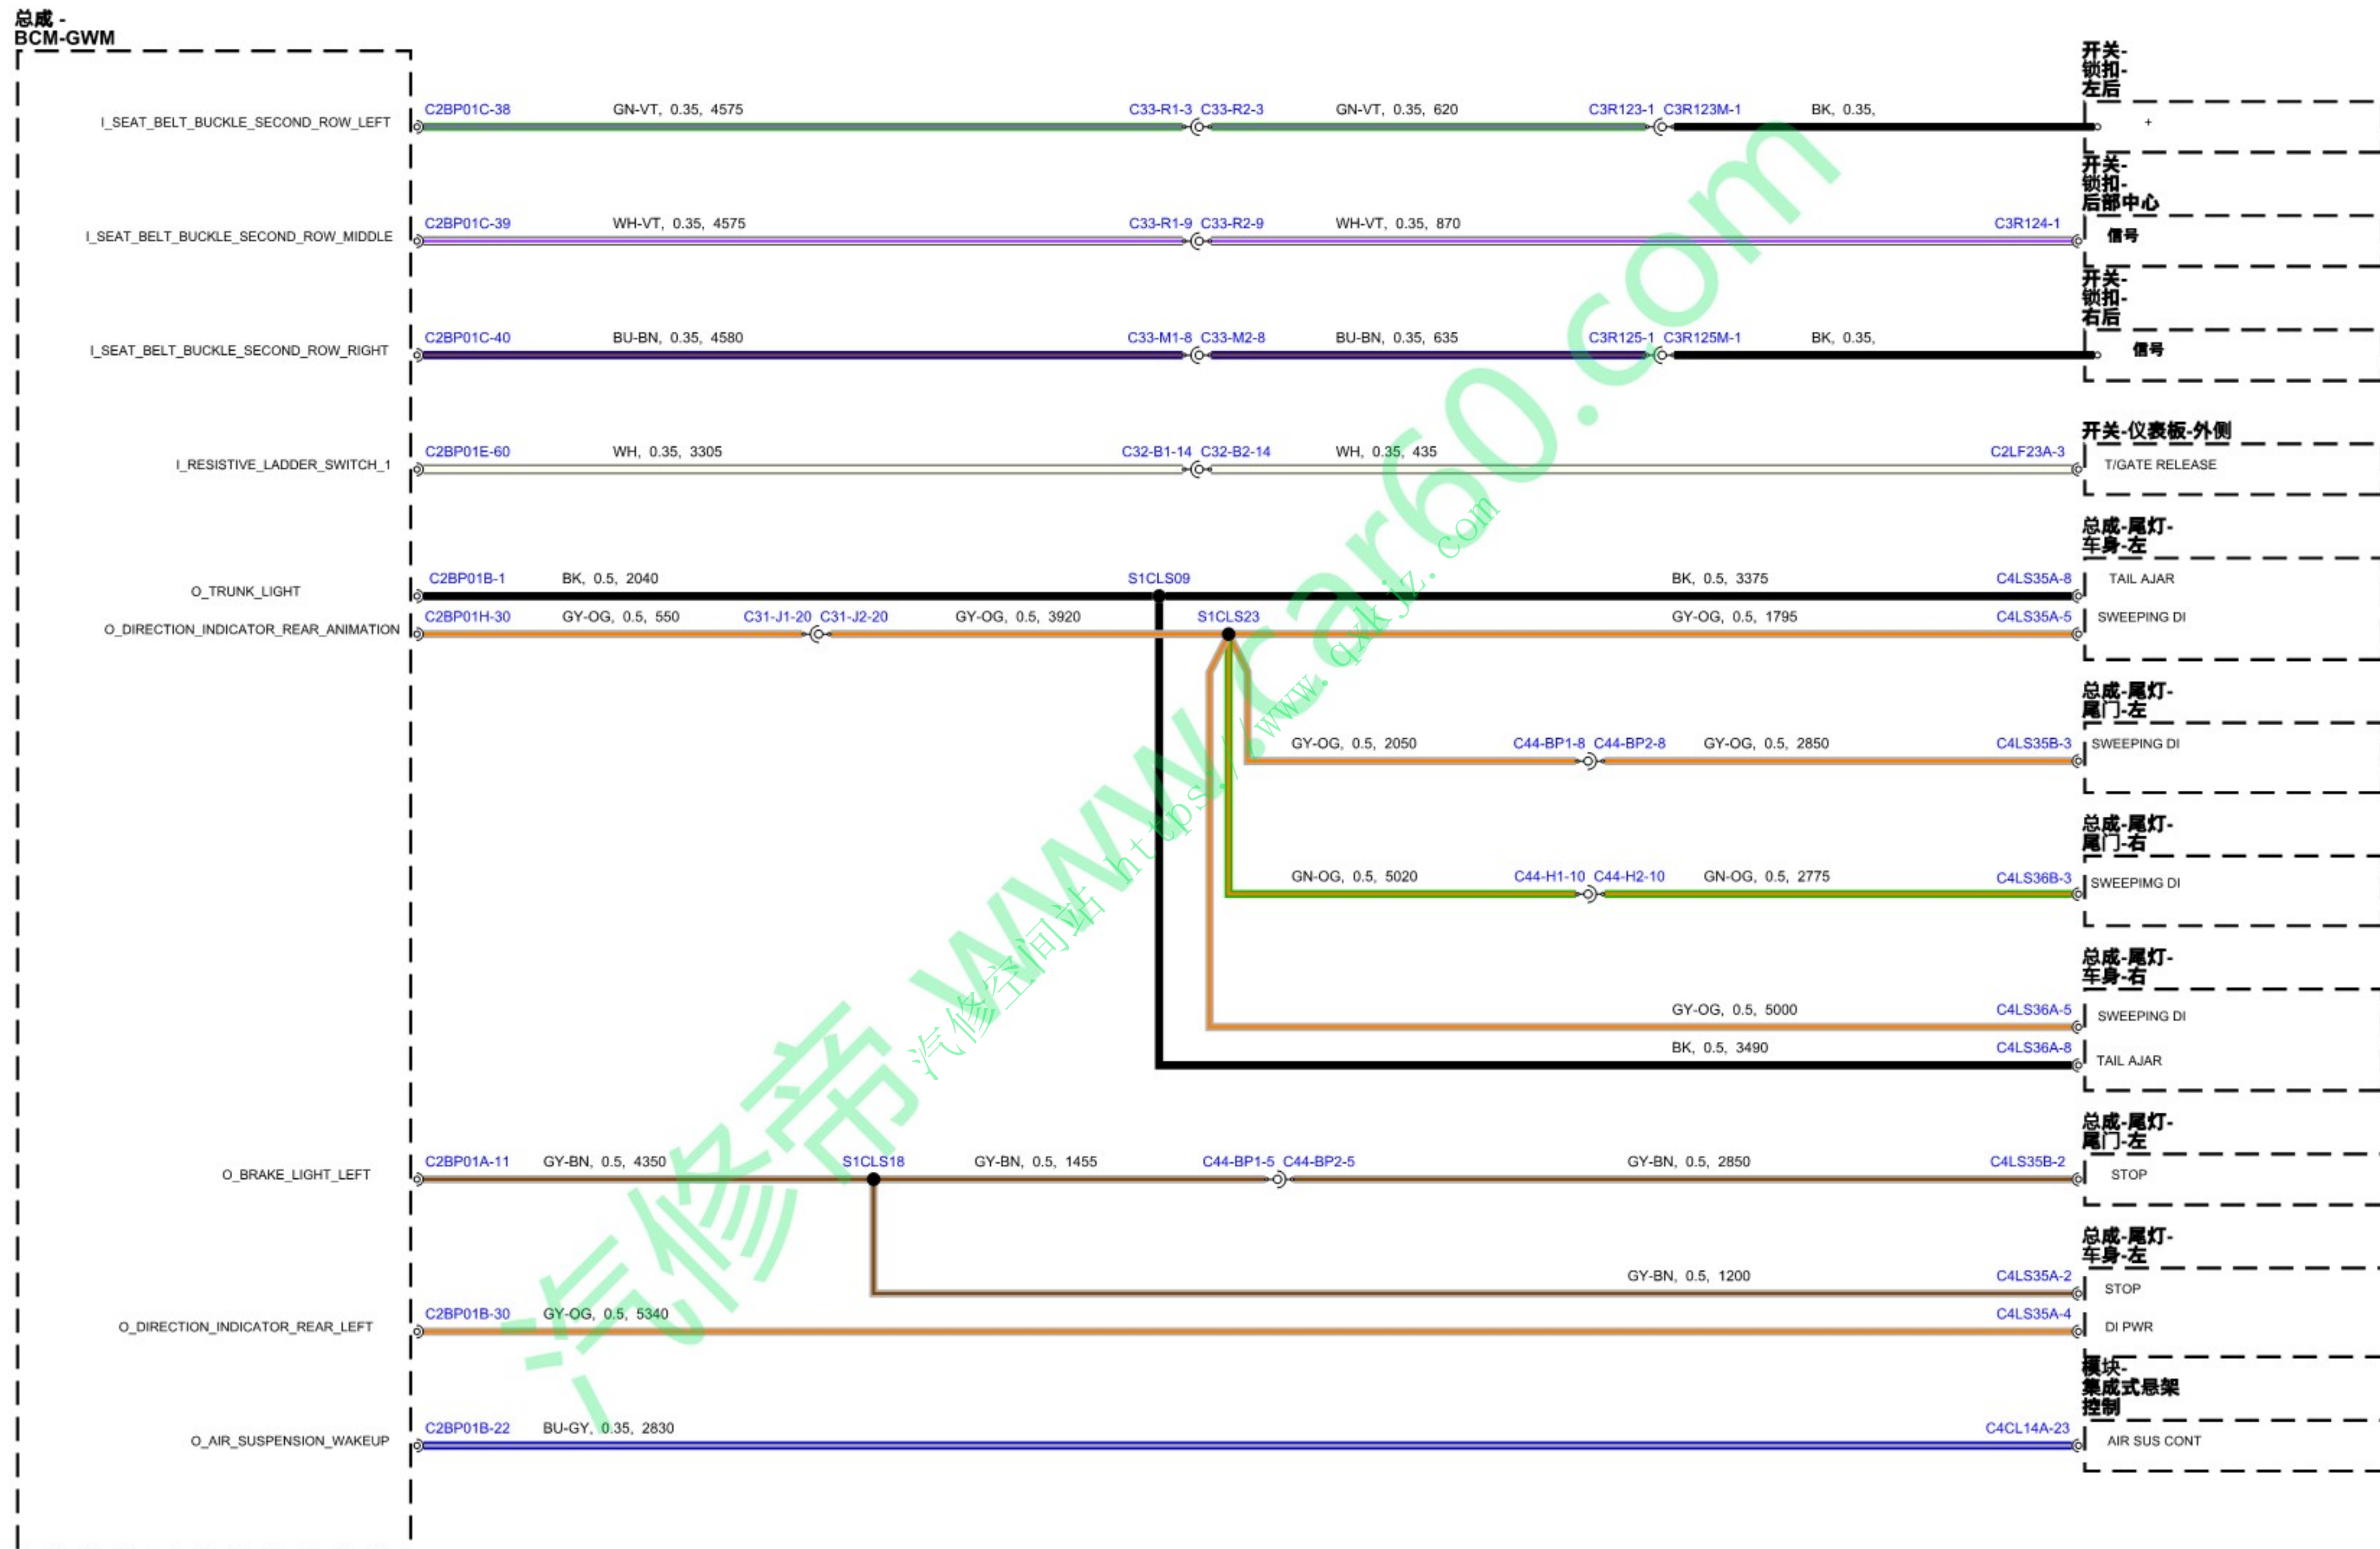

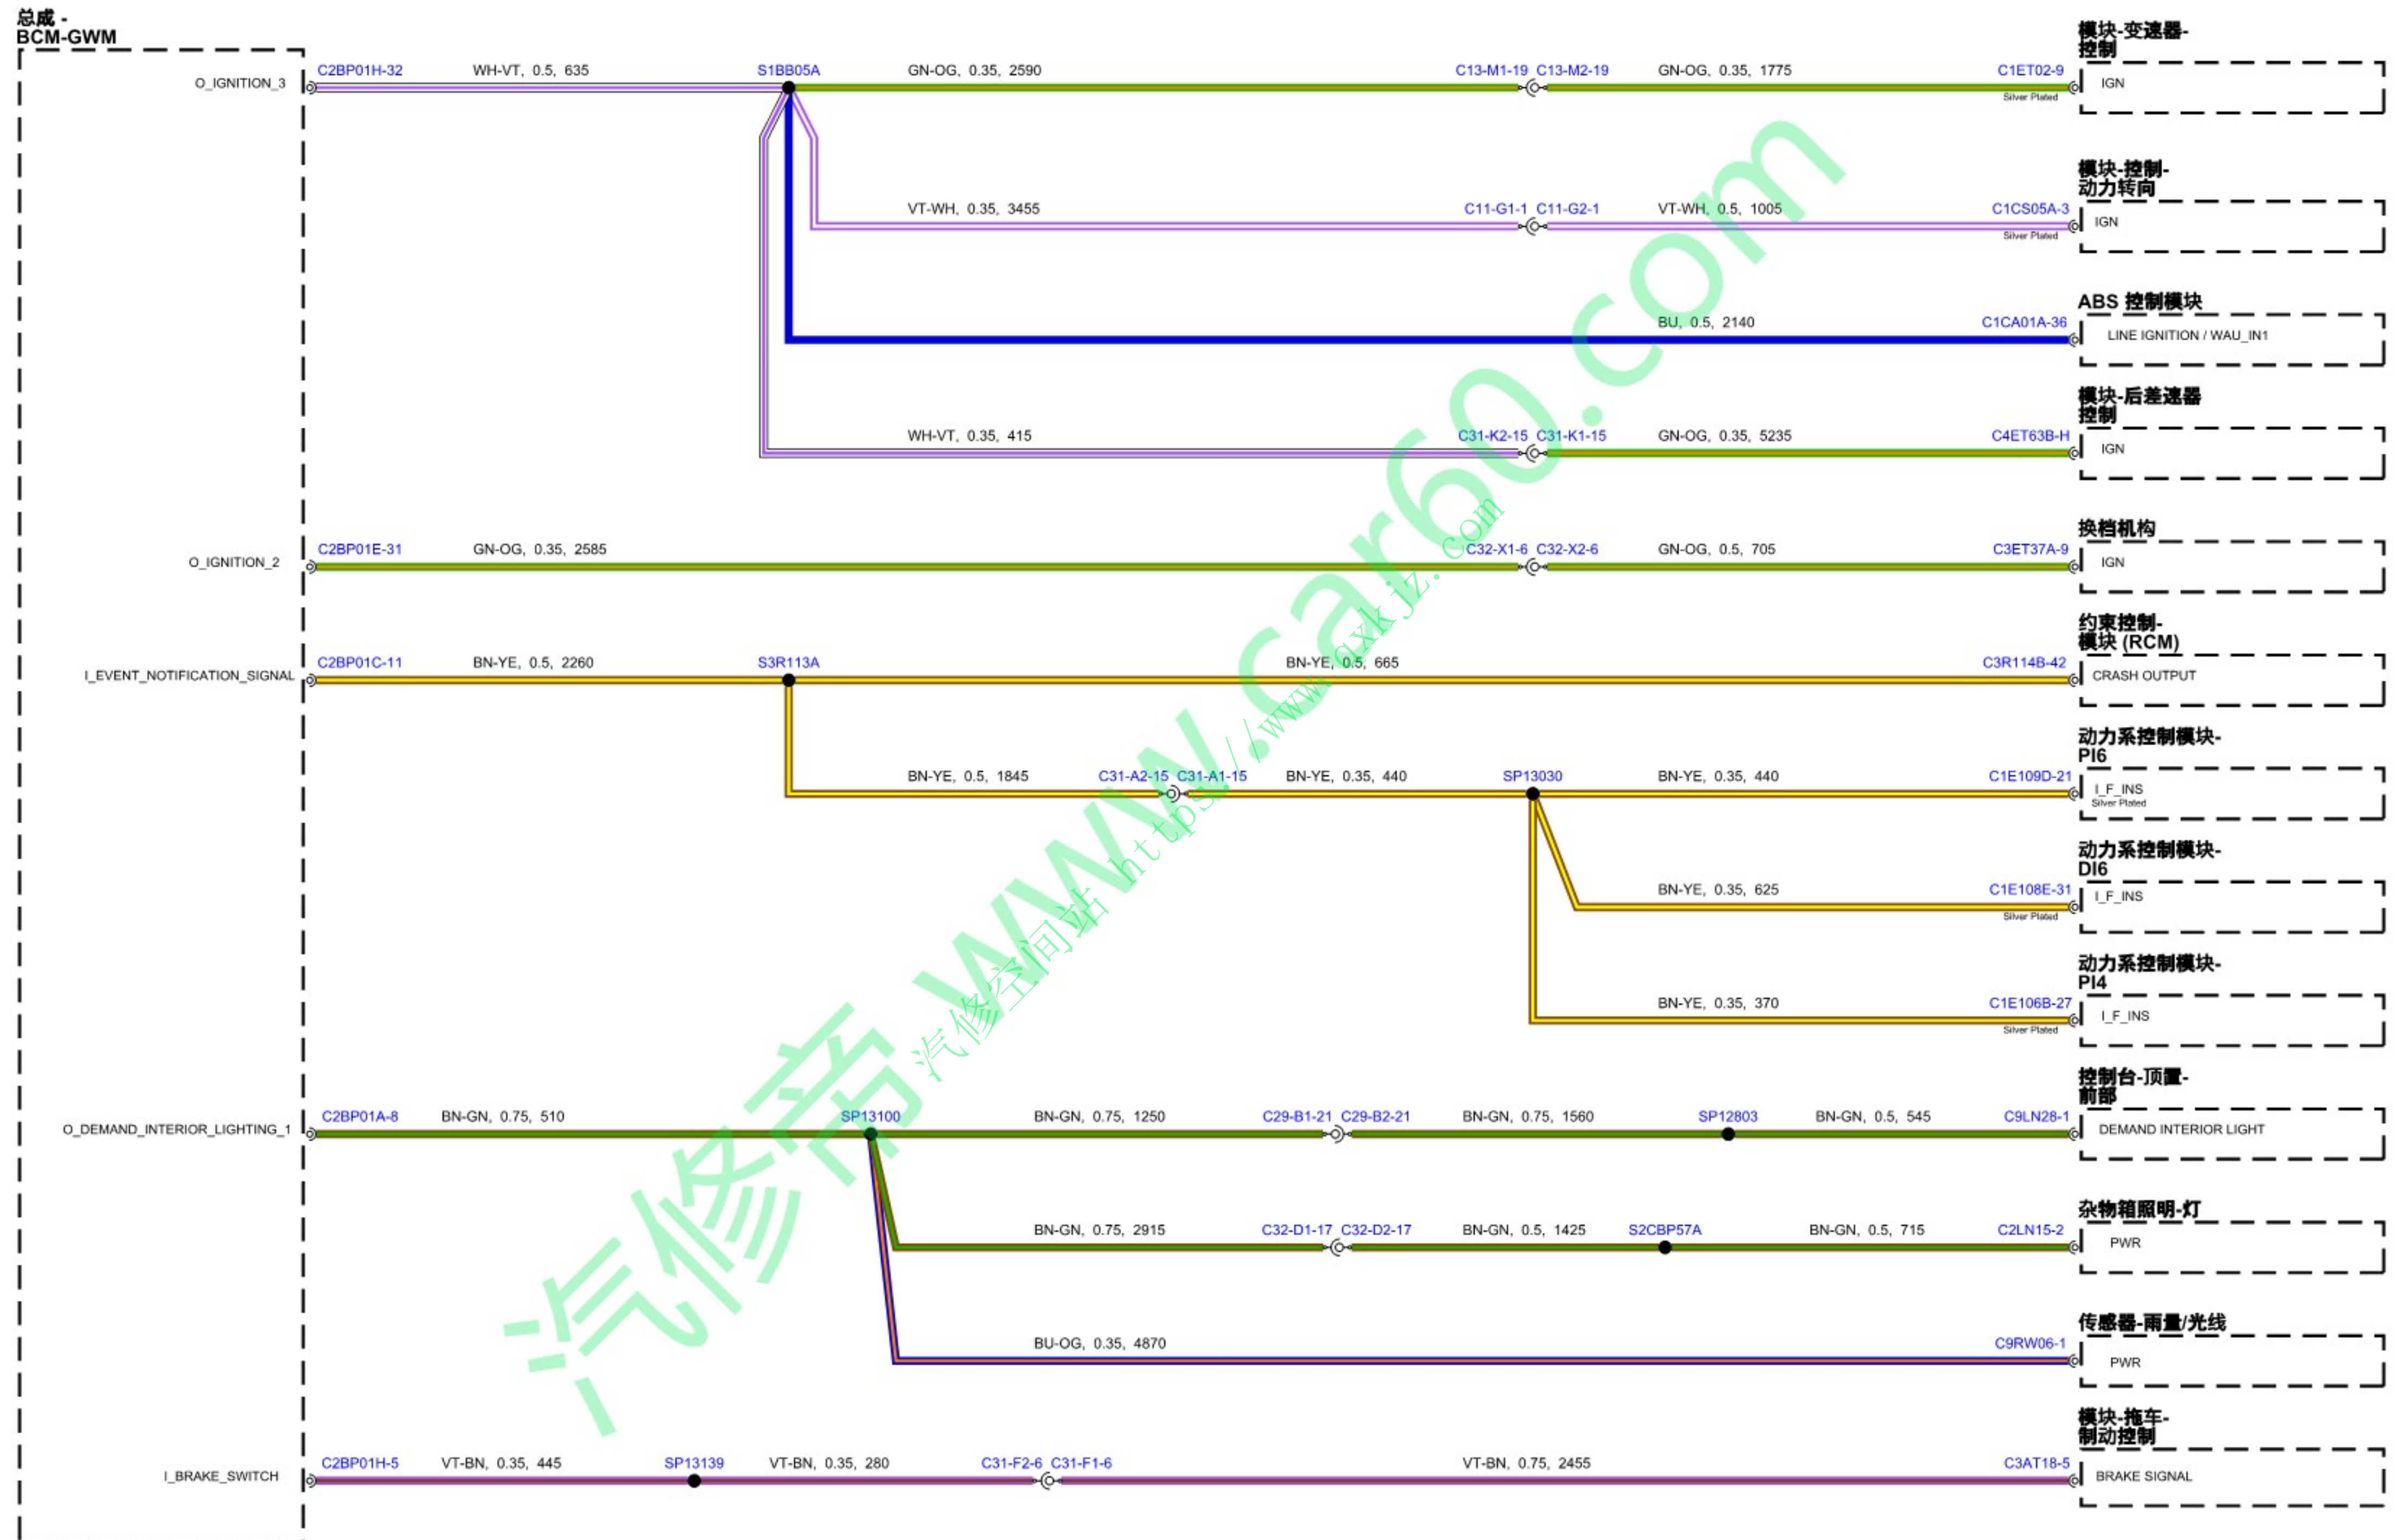

81332-10010-1-0-00-10 (Chinese) 3-400-21501-001100

总成 - BCM-GWM

