



*11 : Before Jan. 2012 Production
*12 : From Jan. 2012 Production
*13 : 1UR-FE
*14 : 3UR-FE
*16 : w/ Option Connector *12

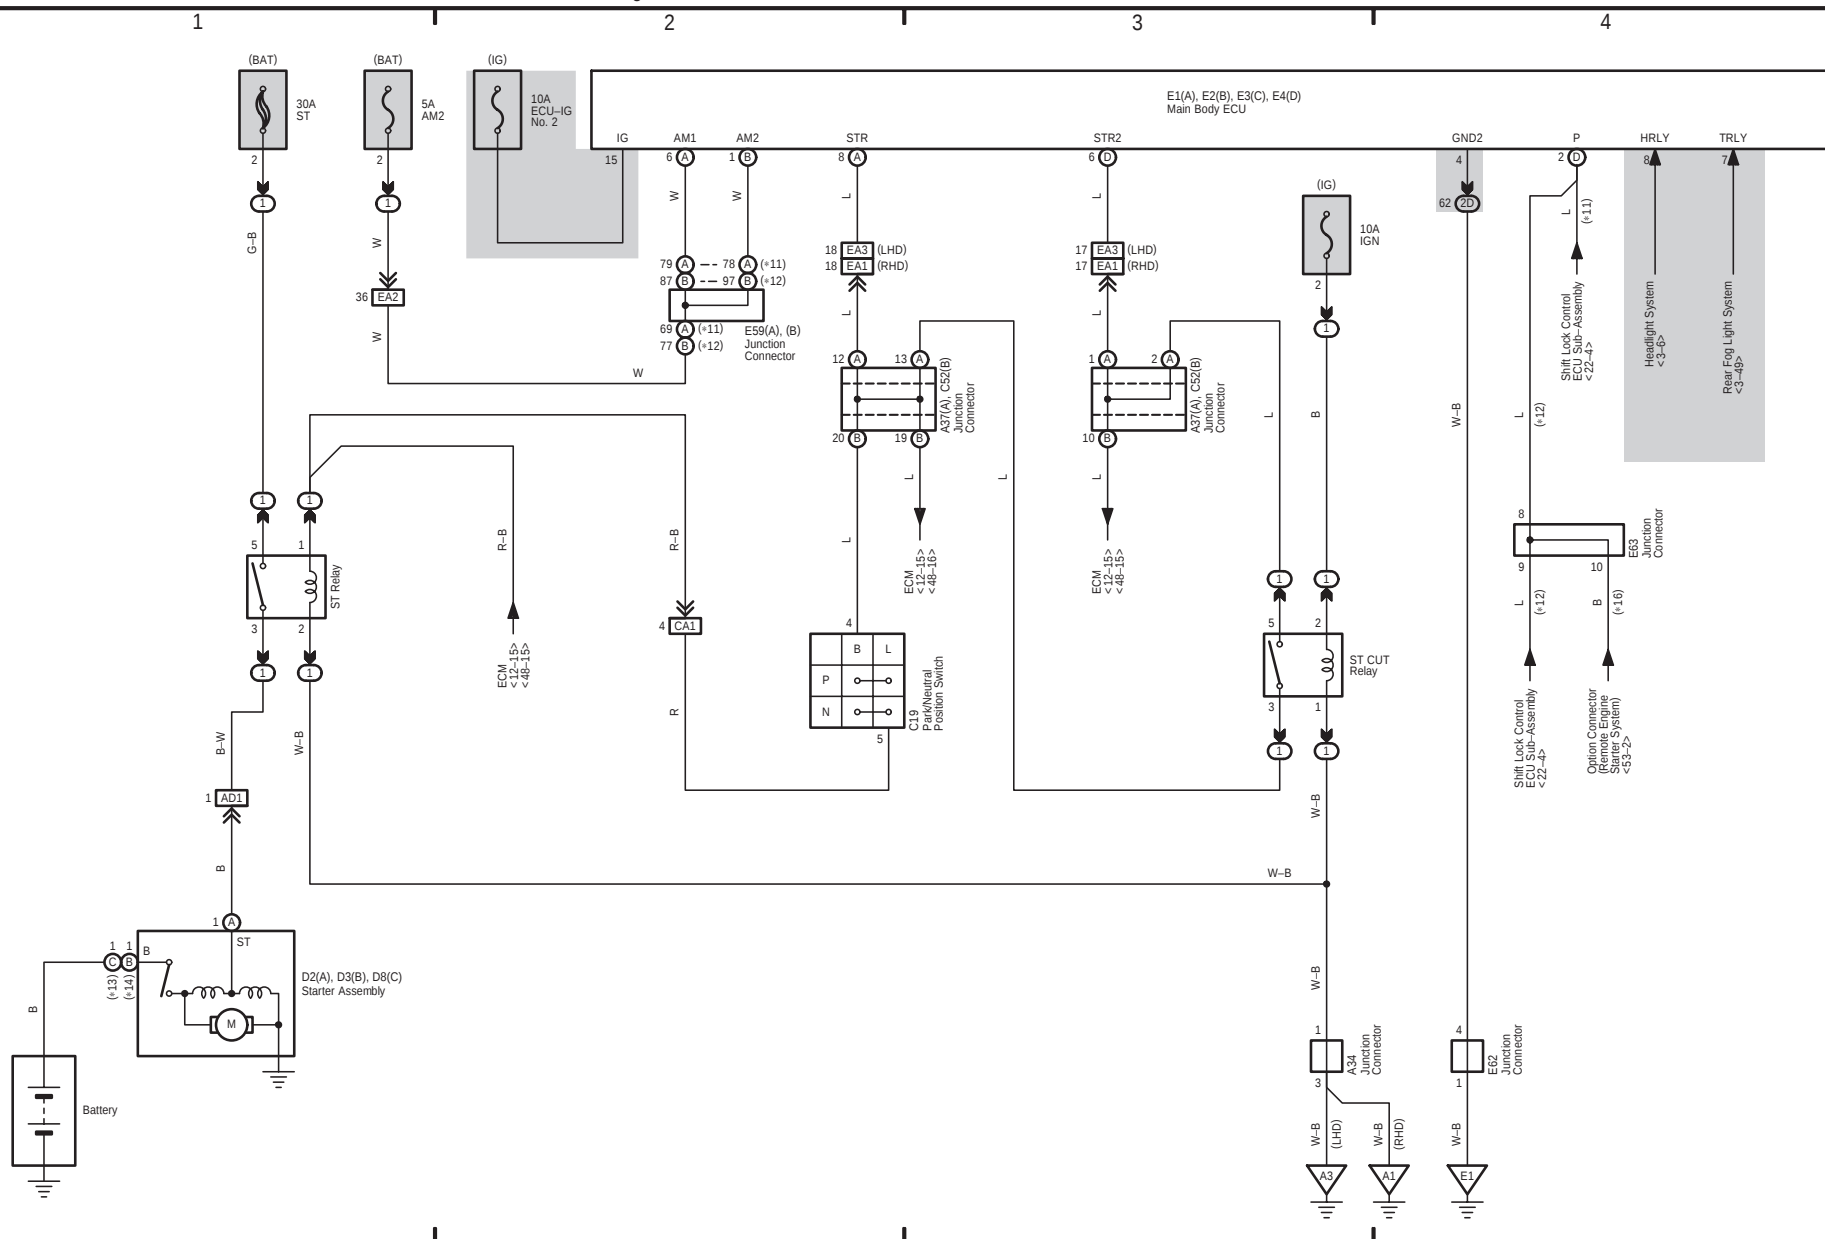


Engine Immobiliser System, Entry & Start System, Starting,
Steering Lock, Theft Deterrent and Wireless Door Lock Control*11 : Before Jan. 2012 Production
*12 : From Jan. 2012 Production

LEXUS LX 570 / LX 460 (EM08G5E)

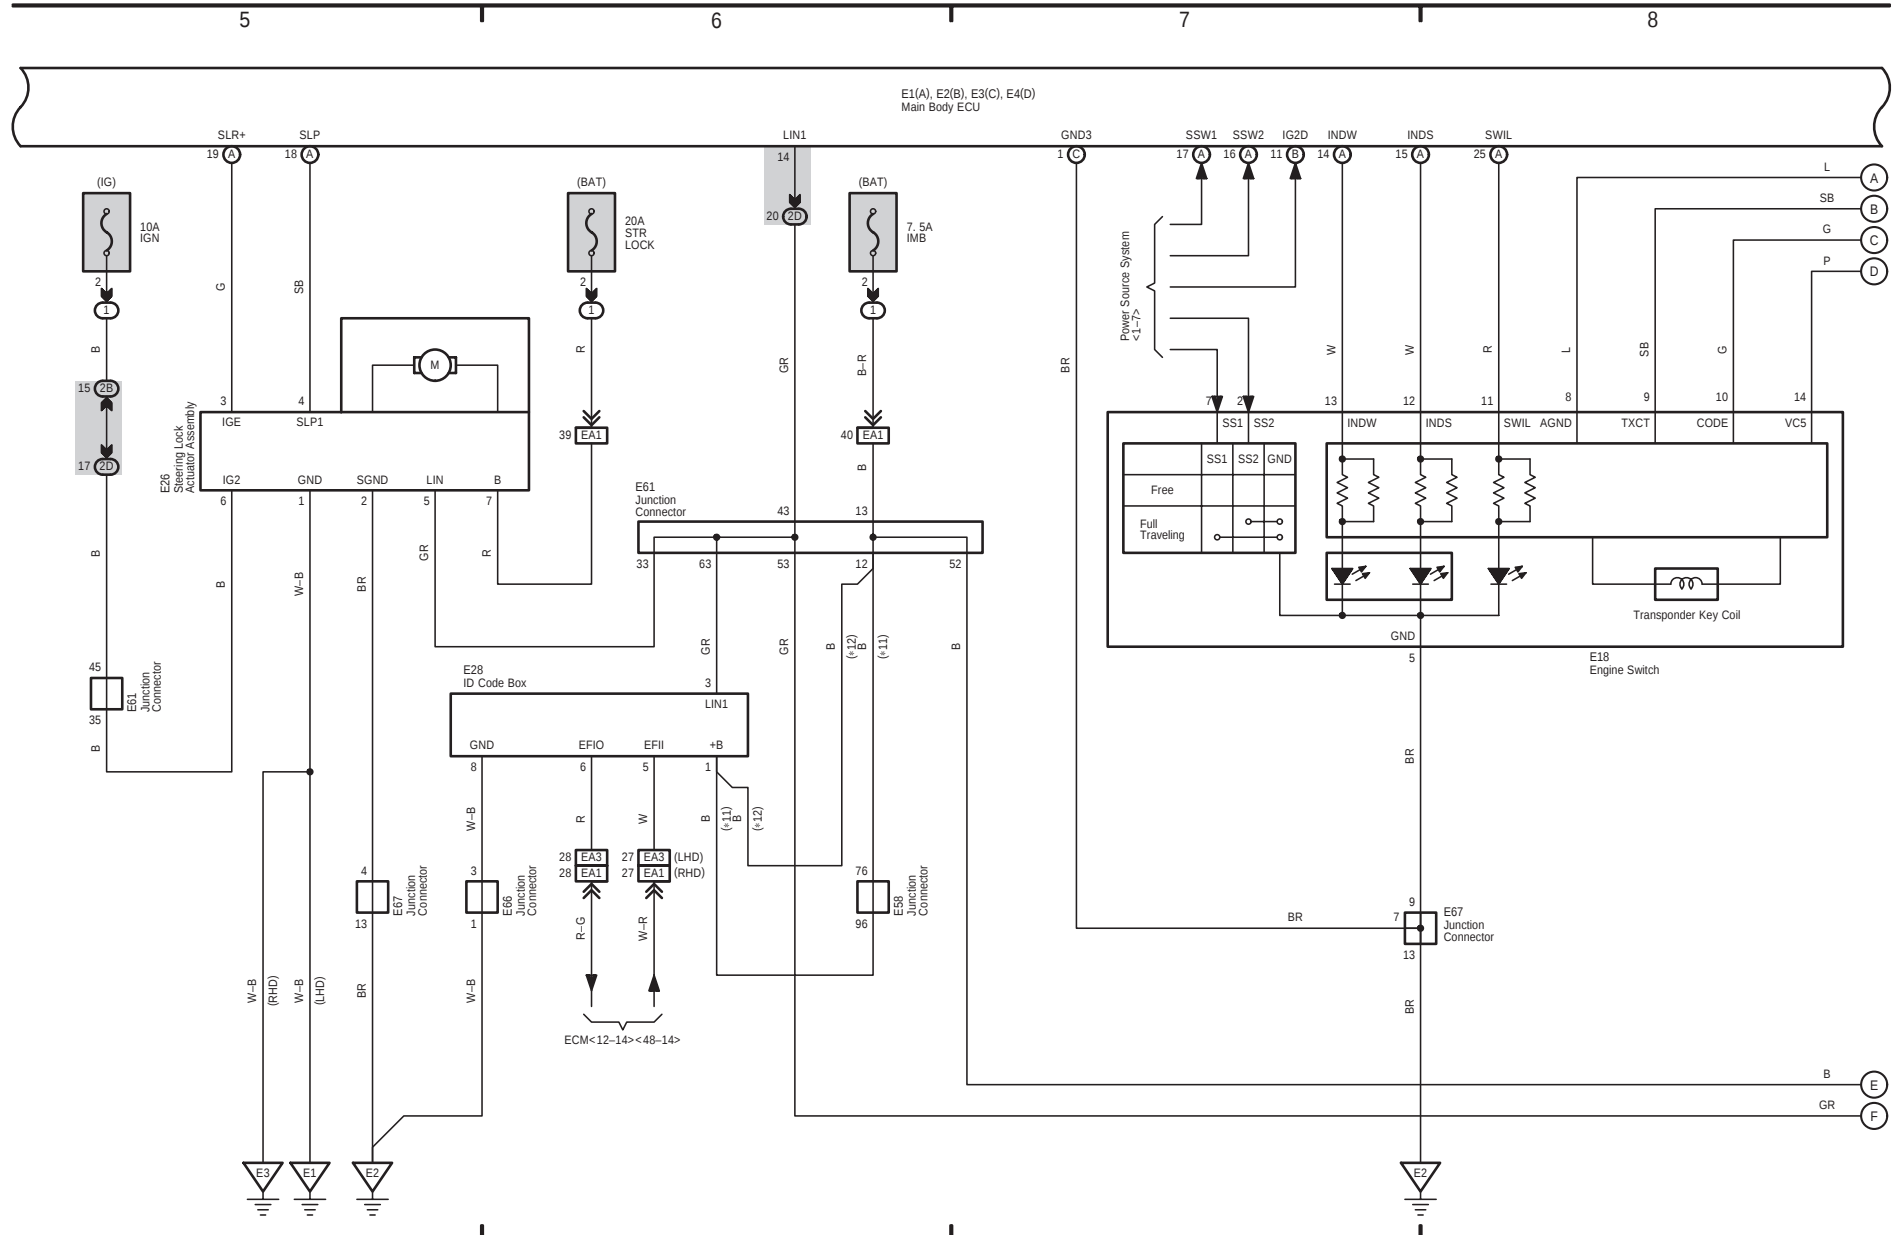

LEXUS LX 570 / LX 460 (EM08G5E)




The diagram illustrates the electrical system for the ECU Main Body, detailing connections from pin 8 to pin 19. Key components include:

- TACH**: Connected to ECM<12-15><4B-15>.
- ACCR**: Connected to ECM<12-15><4B-15>.
- STSW**: Connected to ECM<12-15><4B-15>.
- SPD**: Headlight System <3-11>.
- HAZ**: Headlight System <3-11><3-12>.
- DCTY**: Interior Light System <3-30><3-31><3-32>.
- PCTY**: Interior Light System <3-30><3-31><3-32>.
- RCTY**: Interior Light System <3-30><3-31><3-32>.
- STP**: Stop Light Switch Assembly <15-2>.
- HORN**: HORN Relay <34-3>.
- LCTY**: Interior Light System <3-30>.
- LSWL**: Door Lock Control System <3-18><3-19><3-20>.
- ACT+**: Door Lock Control System <3-18><3-19><3-20>.
- ACT-**: Door Lock Control System <3-18><3-19><3-20>.
- LSWD**: Door Lock Control System <3-17><3-18><3-20>.
- LSWP**: Door Lock Control System <3-17><3-18><3-20>.
- ACTD**: Door Lock Control System <3-17><3-18><3-20>.
- LSWR**: Door Lock Control System <3-17><3-18><3-20>.
- ACC**: ACC (7.5A) and IG (10A).
- BDSU**: Certification ECU Assembly.
- BCTY**: Certification ECU Assembly.
- TR+**: Certification ECU Assembly.

Additional notes and options:

- * 2 : w/o Power Back Door
- * 4 : Before Jul. 2009 Production
- * 5 : From Jul. 2009 Production
- * 9 : RHD, LHD Before Jul. 2009 Production
- * 10 : LHD From Jul. 2009 Production
- +11 : Before Jan. 2012 Production
- +12 : From Jan. 2012 Production
- +5 : RHD, LHD Before Jul. 2009 Production
- +6 : w/ Option Connector +12

The diagram also shows the internal wiring of the Front Door Electrical Key Oscillator LH and RH assemblies, including connections for TRG+, ANT2, ANT1, SGT, SEL, SENS, CLG, CLGB, B, GND, and W-B.

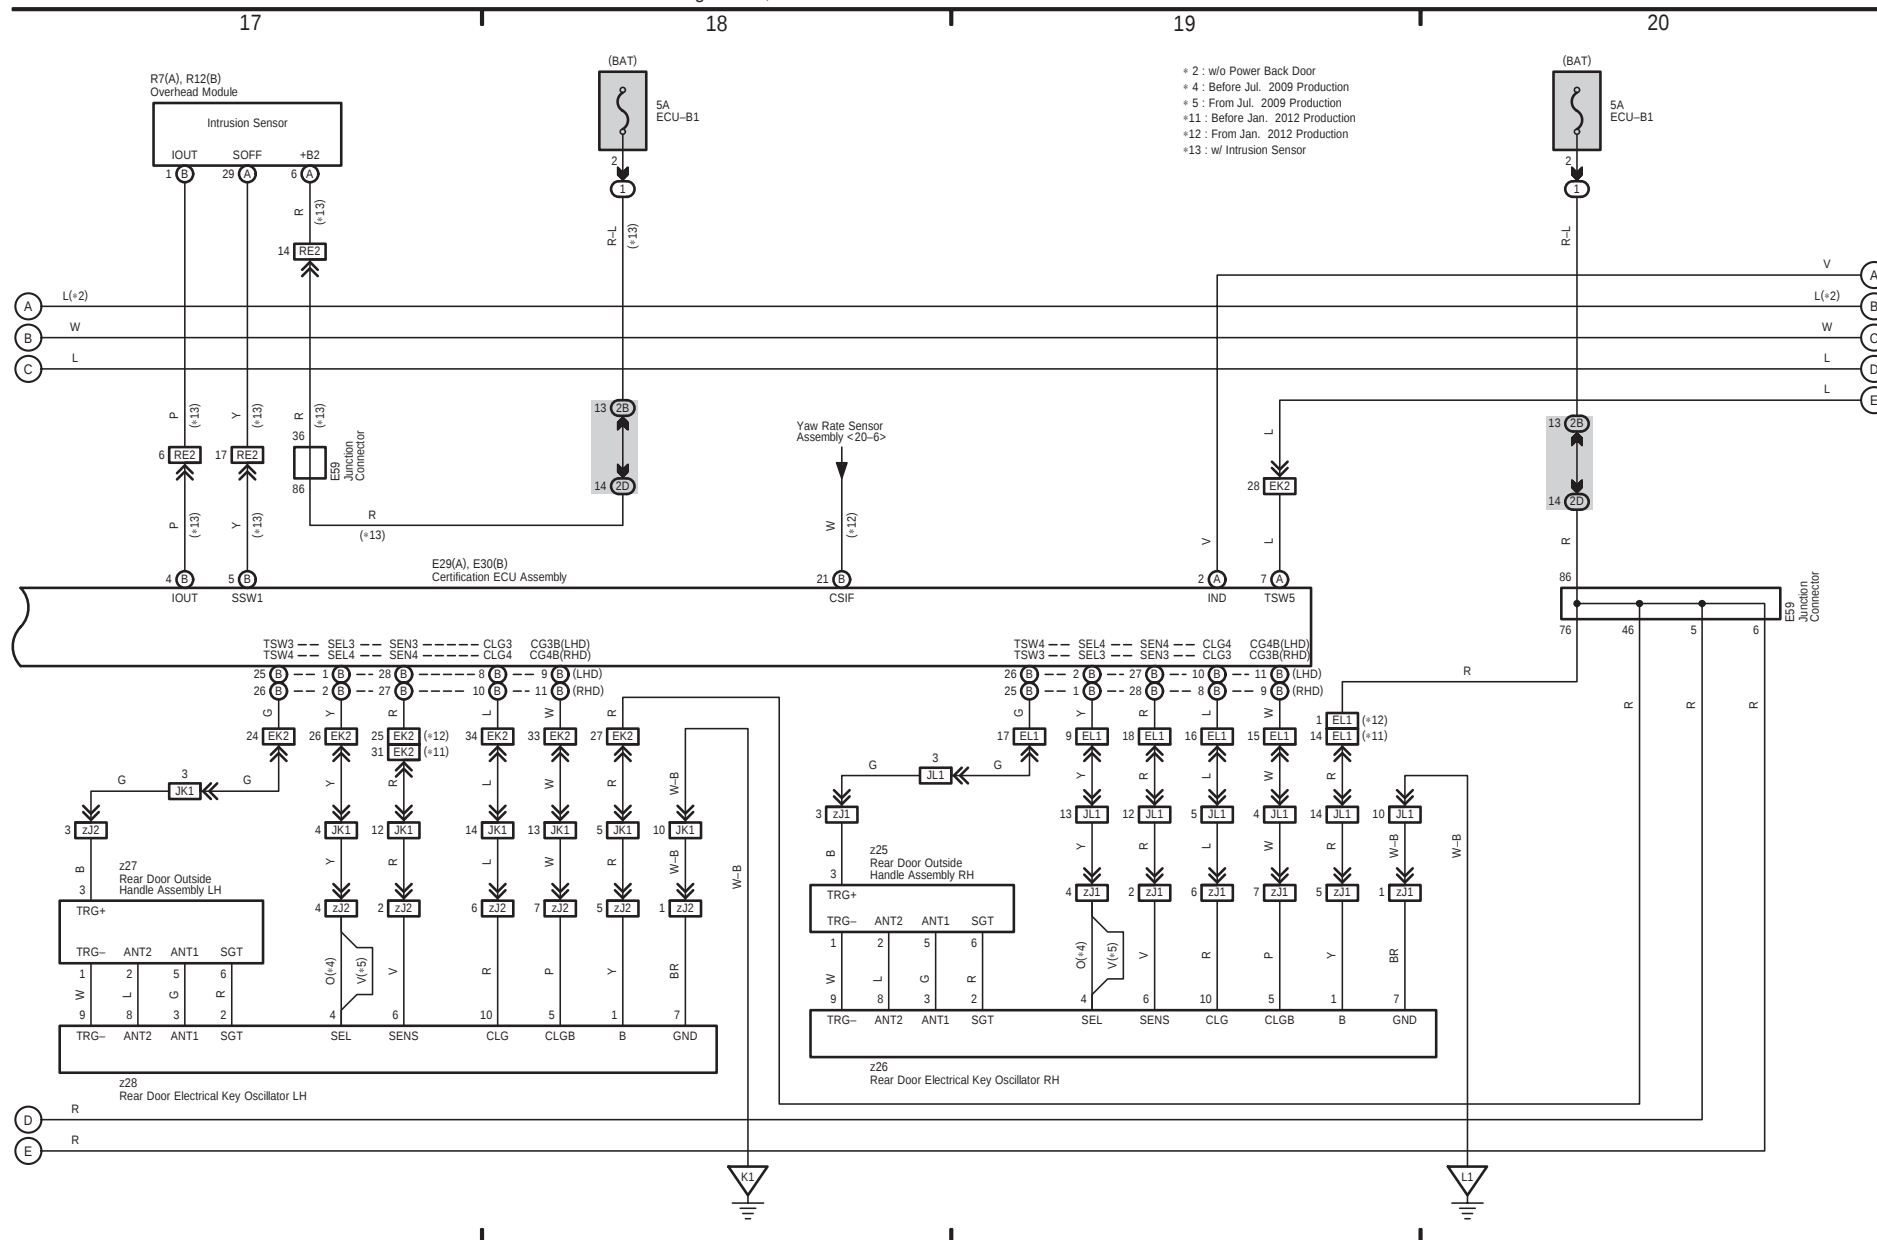Engine Immobiliser System, Entry & Start System, Starting,
Steering Lock, Theft Deterrent and Wireless Door Lock Control

- * 1 : w/ Power Back Door
- * 2 : w/o Power Back Door
- *11 : Before Jan. 2012 Production
- *12 : From Jan. 2012 Production

