


底板线束(1)


CV40-1

F01 横摆率传感器
- 4母/黑色(AMP_MQSWP_04F_B)

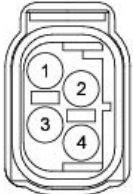



1. P 发动机室保险丝&继电器盒(保险丝-ABS) 3. Br CAN(低电位)
2. W CAN(高电位) 4. B 搭铁(GF02)

F04 驾驶席安全带拉紧器
- 2母/黑色(JST_040_02F_B_SQXW)



1. Br/B SRS控制模块(高电位) 2. R SRS控制模块(低电位)

F05 驾驶席窗帘式空气囊
- 2母/黑色(JST_040_02F_B_SQXW)



1. R SRS控制模块(低电位) 2. B SRS控制模块(高电位)

F06 驾驶席侧面空气囊
- 2母/黄色(KET_040WP_2F_Y_040II)



1. Gr SRS控制模块(高电位) 2. W/B SRS控制模块(低电位)

F07 驾驶席侧面碰撞传感器
- 2母/黄色(AMP_MQS_02F_Y_A)



1. O SRS控制模块(低电位) 2. G SRS控制模块(高电位)

F11 驾驶席车门开关
- 2母/白色(KET_070_02F_W)



1. B 搭铁(GF01) 2. Br 智能接线盒 (IPS控制模块)