

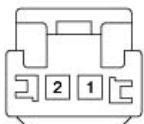


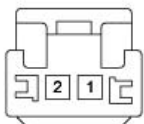





车顶线束(3)		CV60-3							
<p>R41-A 前天窗开关</p> <table border="1"> <tr> <td>端子编号</td> <td>-</td> </tr> <tr> <td>端子名称</td> <td>AMP_MQS_06F_W</td> </tr> </table>   <p>1. B 搭铁(GM01) 2. R 前天窗电机(信号-A) 3. Gr/B 前天窗电机(信号-B)</p> <p>4. Br/B 前天窗电机(信号-C) 5. - 6. -</p>	端子编号	-	端子名称	AMP_MQS_06F_W	<p>R43 麦克风(左舵)</p> <table border="1"> <tr> <td>端子编号</td> <td>-</td> </tr> <tr> <td>端子名称</td> <td>SUM_025_2F_W</td> </tr> </table>  <p>1. G 麦克风(+):音响 2. W 麦克风(-):音响</p>	端子编号	-	端子名称	SUM_025_2F_W
端子编号	-								
端子名称	AMP_MQS_06F_W								
端子编号	-								
端子名称	SUM_025_2F_W								
<p>R41-B 后天窗开关</p> <table border="1"> <tr> <td>端子编号</td> <td>-</td> </tr> <tr> <td>端子名称</td> <td>AMP_MQS_08F_B_A</td> </tr> </table>   <p>1. - 2. - 3. - 4. -</p> <p>5. L/B 后天窗电机(信号-A) 6. Br/B 后天窗电机(信号-C) 7. W 后天窗电机(信号-B) 8. B 搭铁(GM01)</p>	端子编号	-	端子名称	AMP_MQS_08F_B_A	<p>R43R 麦克风(右舵)</p> <table border="1"> <tr> <td>端子编号</td> <td>-</td> </tr> <tr> <td>端子名称</td> <td>SUM_025_2F_W</td> </tr> </table>  <p>1. G 麦克风(+):音响 2. W 麦克风(-):音响</p>	端子编号	-	端子名称	SUM_025_2F_W
端子编号	-								
端子名称	AMP_MQS_08F_B_A								
端子编号	-								
端子名称	SUM_025_2F_W								
<p>R42 后天窗开关</p> <table border="1"> <tr> <td>端子编号</td> <td>-</td> </tr> <tr> <td>端子名称</td> <td>AMP_MQS_06F_B</td> </tr> </table>   <p>1. B 搭铁(GM01) 2. W 后天窗电机(信号-B) 3. Br/B 后天窗电机(信号-C)</p> <p>4. L/B 后天窗电机(信号-D) 5. - 6. -</p>	端子编号	-	端子名称	AMP_MQS_06F_B	<p>R44 中央室内灯</p> <table border="1"> <tr> <td>端子编号</td> <td>1890103223AS</td> </tr> <tr> <td>端子名称</td> <td>KET_09011_03F_W</td> </tr> </table>  <p>1. W/O 车顶控制台灯(记忆电源) 2. B 搭铁(GM01)</p> <p>3. L 车顶控制台灯(室内+)</p>	端子编号	1890103223AS	端子名称	KET_09011_03F_W
端子编号	-								
端子名称	AMP_MQS_06F_B								
端子编号	1890103223AS								
端子名称	KET_09011_03F_W								