


后备箱门线束(5车门)(2)

CV62-2

R36 后除霜器(-)
- 1母/黑色(AMP_PLM2_01F_B)

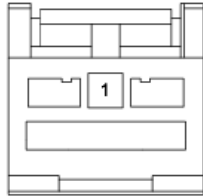


1. B 搭铁(GR01)

R37 后背箱门手柄开关
- 2母/黑色(FCI_APEXWP_2F_B)



1. B 搭铁(GR01) 2. Y 智能接线盒 (IPS控制模块)

R38 后备箱门电机
- 4母/黑色(KUM_NDWP_04F_B)



1. G	智能接线盒(IPS控制模块 -后备箱门开启开关)	3. R/O	智能接线盒(行李箱继电器)
2. B	搭铁(GR01)	4. B	搭铁(GR01)