


控制线束 (G4NA : NU 2.0L MPI) (11)

CV21-11

C230 ATM变速杆

- 10母/白色 (KET_090111_10F_W)

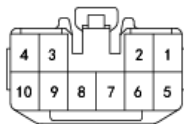

- | | | | |
|--------|--------------------|---------|---------------|
| 1. - | - | 6. W | PCM (选择开关) |
| 2. B | 搭铁 (GC203) | 7. P | PCM (降档) |
| 3. G | 智能钥匙控制模块 ('P'位置开关) | 8. - | - |
| 4. W/B | 智能接线盒 (保险丝-模块5) | 9. B | 搭铁 (GC203) |
| 5. Gr | PCM (升档) | 10. G/B | PCM (换挡锁止电磁阀) |

C231 前喷水器电机

- 3母/灰色 (KET_090111_WP_03F_GR)



- | | | | |
|-------|--------------|------|---|
| 1. B | 搭铁 (GC204) | 3. - | - |
| 2. Br | 组合开关 (喷水器开关) | | |

C232 电动转向开关

- 1母/黑色 (KUM_NMMIP_01F_B)



- | | |
|------|---------|
| 1. W | ECM/PCM |
|------|---------|

C234 前左轮速传感器

- 2公/黑色 (KET_090111_WP_02M_B)



- | | | | |
|------|------------------|------|-------------------|
| 1. G | ABS/ESP控制模块 (信号) | 2. 0 | ABS/ESP控制模块 (VCC) |
|------|------------------|------|-------------------|

C235 前右轮速传感器

- 2公/黑色 (KET_090111_WP_02M_B)



- | | | | |
|-------|-------------------|------|-------------------|
| 1. Br | ABS/ESP控制模块 (SIG) | 2. w | ABS/ESP控制模块 (VCC) |
|-------|-------------------|------|-------------------|

C236 离合器开关 (M/T)

- 2母/白色 (KET_250DL_02F_W)



- | | | | |
|------|------------|------|-----------------|
| 1. B | 搭铁 (GC201) | 2. W | ECM |
| | | W/B | [配备ESP] ESP控制模块 |