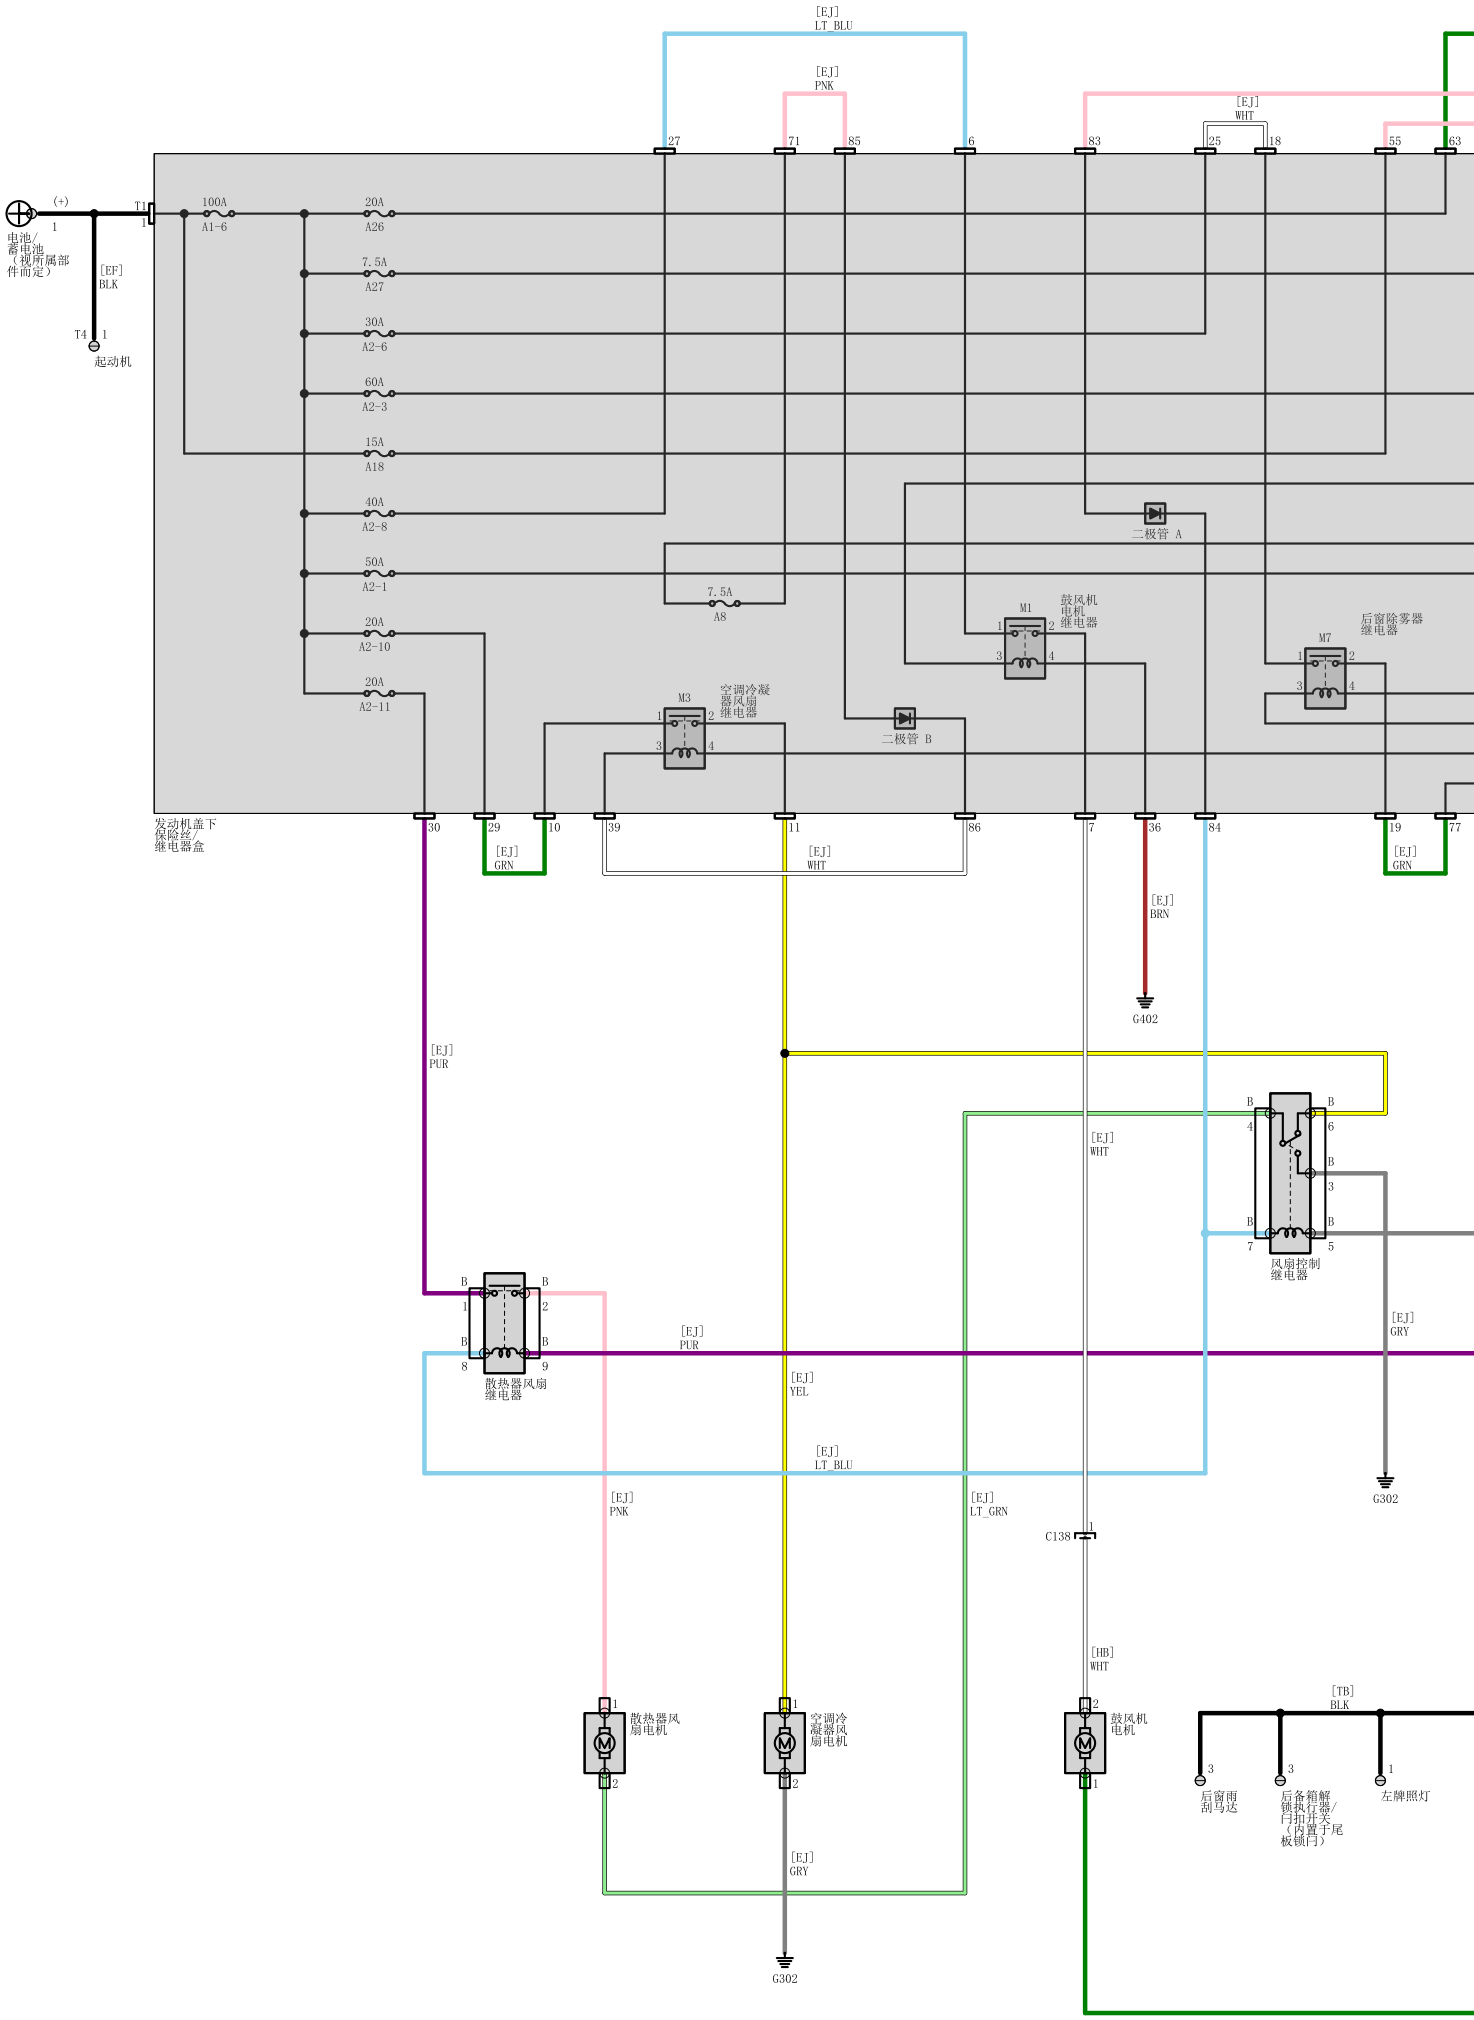
电池/
蓄电池
（视所属部
件而定）
(+)
T1
[EF]
BLK
T4
起动机
100A
A1-6
20A
A26
7.5A
A27
30A
A2-6
60A
A2-3
15A
A18
40A
A2-8
50A
A2-1
20A
A2-10
20A
A2-11
7.5A
A8
二极管 A
二极管 B
M1
鼓风机
电机
继电器
M3
空调冷凝
器风扇
继电器
M7
后窗除雾器
继电器
发动机盖下
保险丝/
继电器盒
[EJ]
LT BLU
[EJ]
PNK
[EJ]
WHT
[EJ]
GRN
[EJ]
BRN
G402
[EJ]
PUR
[EJ]
GRY
[EJ]
YEL
[EJ]
LT BLU
[EJ]
LT_GRN
C138
[HB]
WHT
散热器风
扇继电器
风扇控制
继电器
散热器风
扇电机
空调冷
凝器风
扇电机
鼓风机
电机
G302
[TB]
BLK
后窗雨
刮马达
后备箱解
锁执行器/
行扣开关
（内置于尾
板锁闩）
左牌照灯

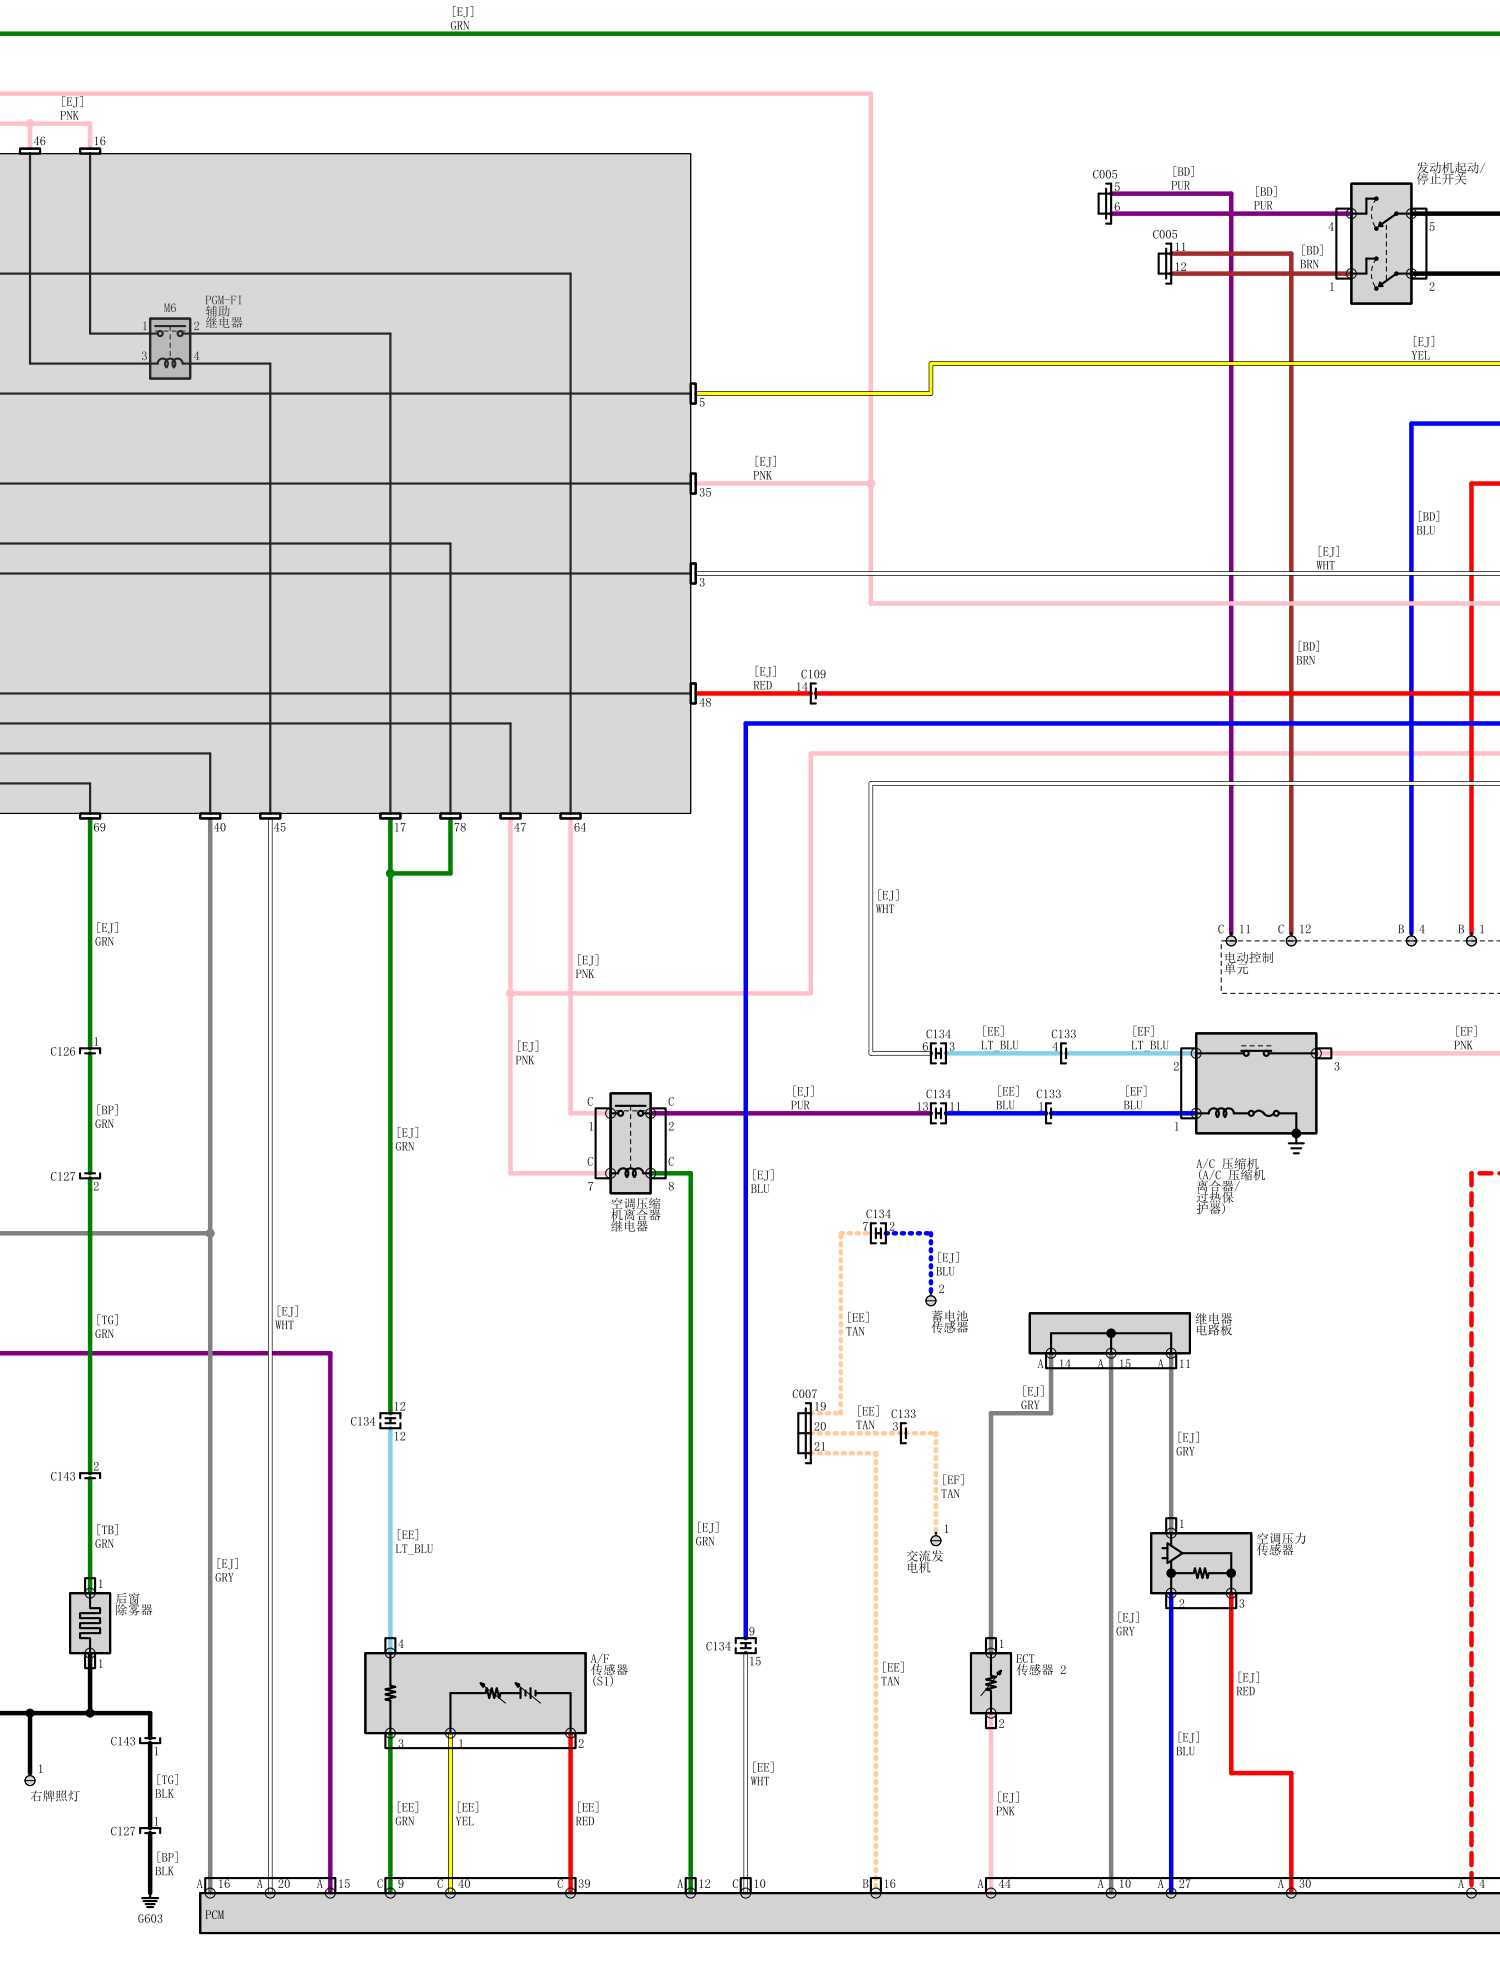
[EJ] GRN
[EJ] PNK
M6
PGM-FI 辅助 继电器
C005
[BD] PUR
[BD] BRN
发动机起动/停止开关
[EJ] YEL
[EJ] PNK
[BD] BLU
[EJ] WHT
[BD] BRN
[EJ] RED
C109
电动控制单元
C134
[EE] LT_BLU
C133
[EF] LT_BLU
[EF] PNK
[EJ] PUR
[EE] BLU
[EF] BLU
A/C 压缩机(A/C 压缩机离合器/过热保护器)
空调压缩机离合器继电器
[EJ] BLU
蓄电池传感器
[EE] TAN
继电器电路板
C007
[EF] TAN
交流发电机
[EJ] GRY
空调压力传感器
ECT 传感器 2
[EJ] RED
[EJ] BLU
C126
[BP] GRN
C127
[TG] GRN
C143
[TB] GRN
后窗除雾器
右牌照灯
[TG] BLK
[BP] BLK
G603
[EJ] WHT
[EJ] GRN
[EE] LT_BLU
A/F 传感器 (S1)
[EE] GRN
[EE] YEL
[EE] RED
[EE] WHT
PCM
[HB] GRN

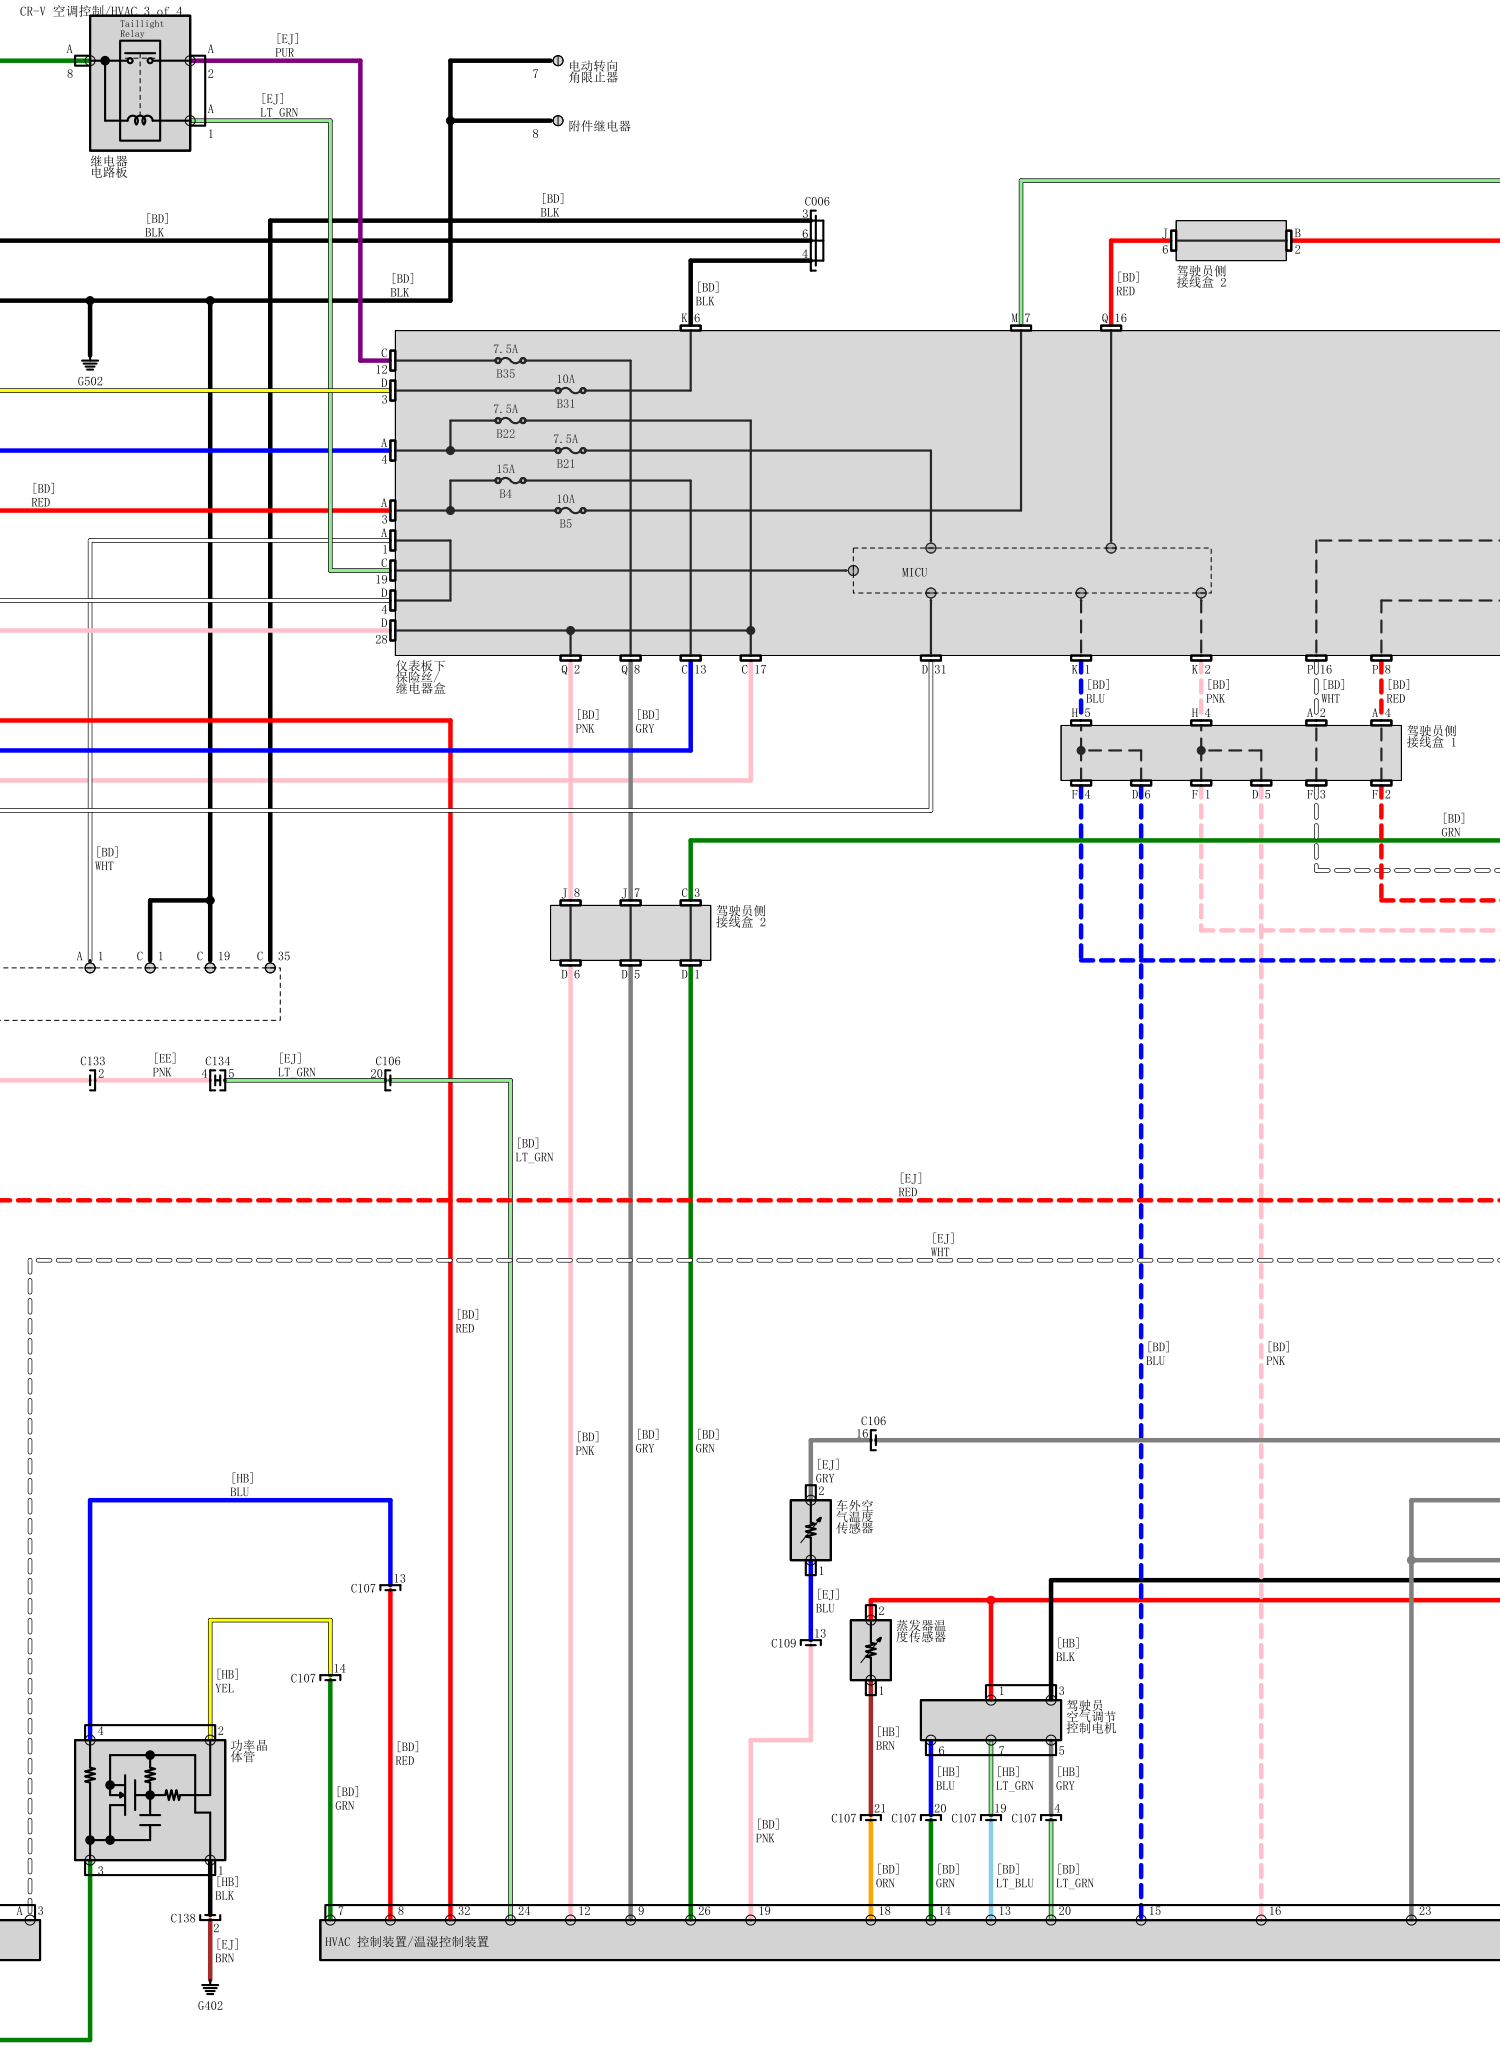
Taillight Relay
继电器电路板
[EJ] PUR
[EJ] LT_GRN
电动转向角限止器
附件继电器
[BD] BLK
C006
[BD] RED
驾驶员侧接线盒 2
G502
7.5A B35
10A B31
7.5A B22
7.5A B21
15A B4
10A B5
MICU
仪表板下保险丝/继电器盒
[BD] BLU
[BD] PNK
[BD] WHT
[BD] GRY
[BD] GRN
驾驶员侧接线盒 1
驾驶员侧接线盒 2
C133
[EE] PNK
C134
[EJ] LT_GRN
C106
[BD] LT_GRN
[EJ] RED
[EJ] WHT
[HB] BLU
C107
[HB] YEL
功率晶体管
[HB] BLK
C138
[EJ] BRN
G402
[EJ] GRY
车外空气温度传感器
[EJ] BLU
C109
蒸发器温度传感器
[HB] BRN
[HB] BLK
驾驶员空气调节控制电机
[HB] BLU
[HB] LT_GRN
[HB] GRY
[BD] ORN
[BD] LT_BLU
HVAC 控制装置/温湿控制装置

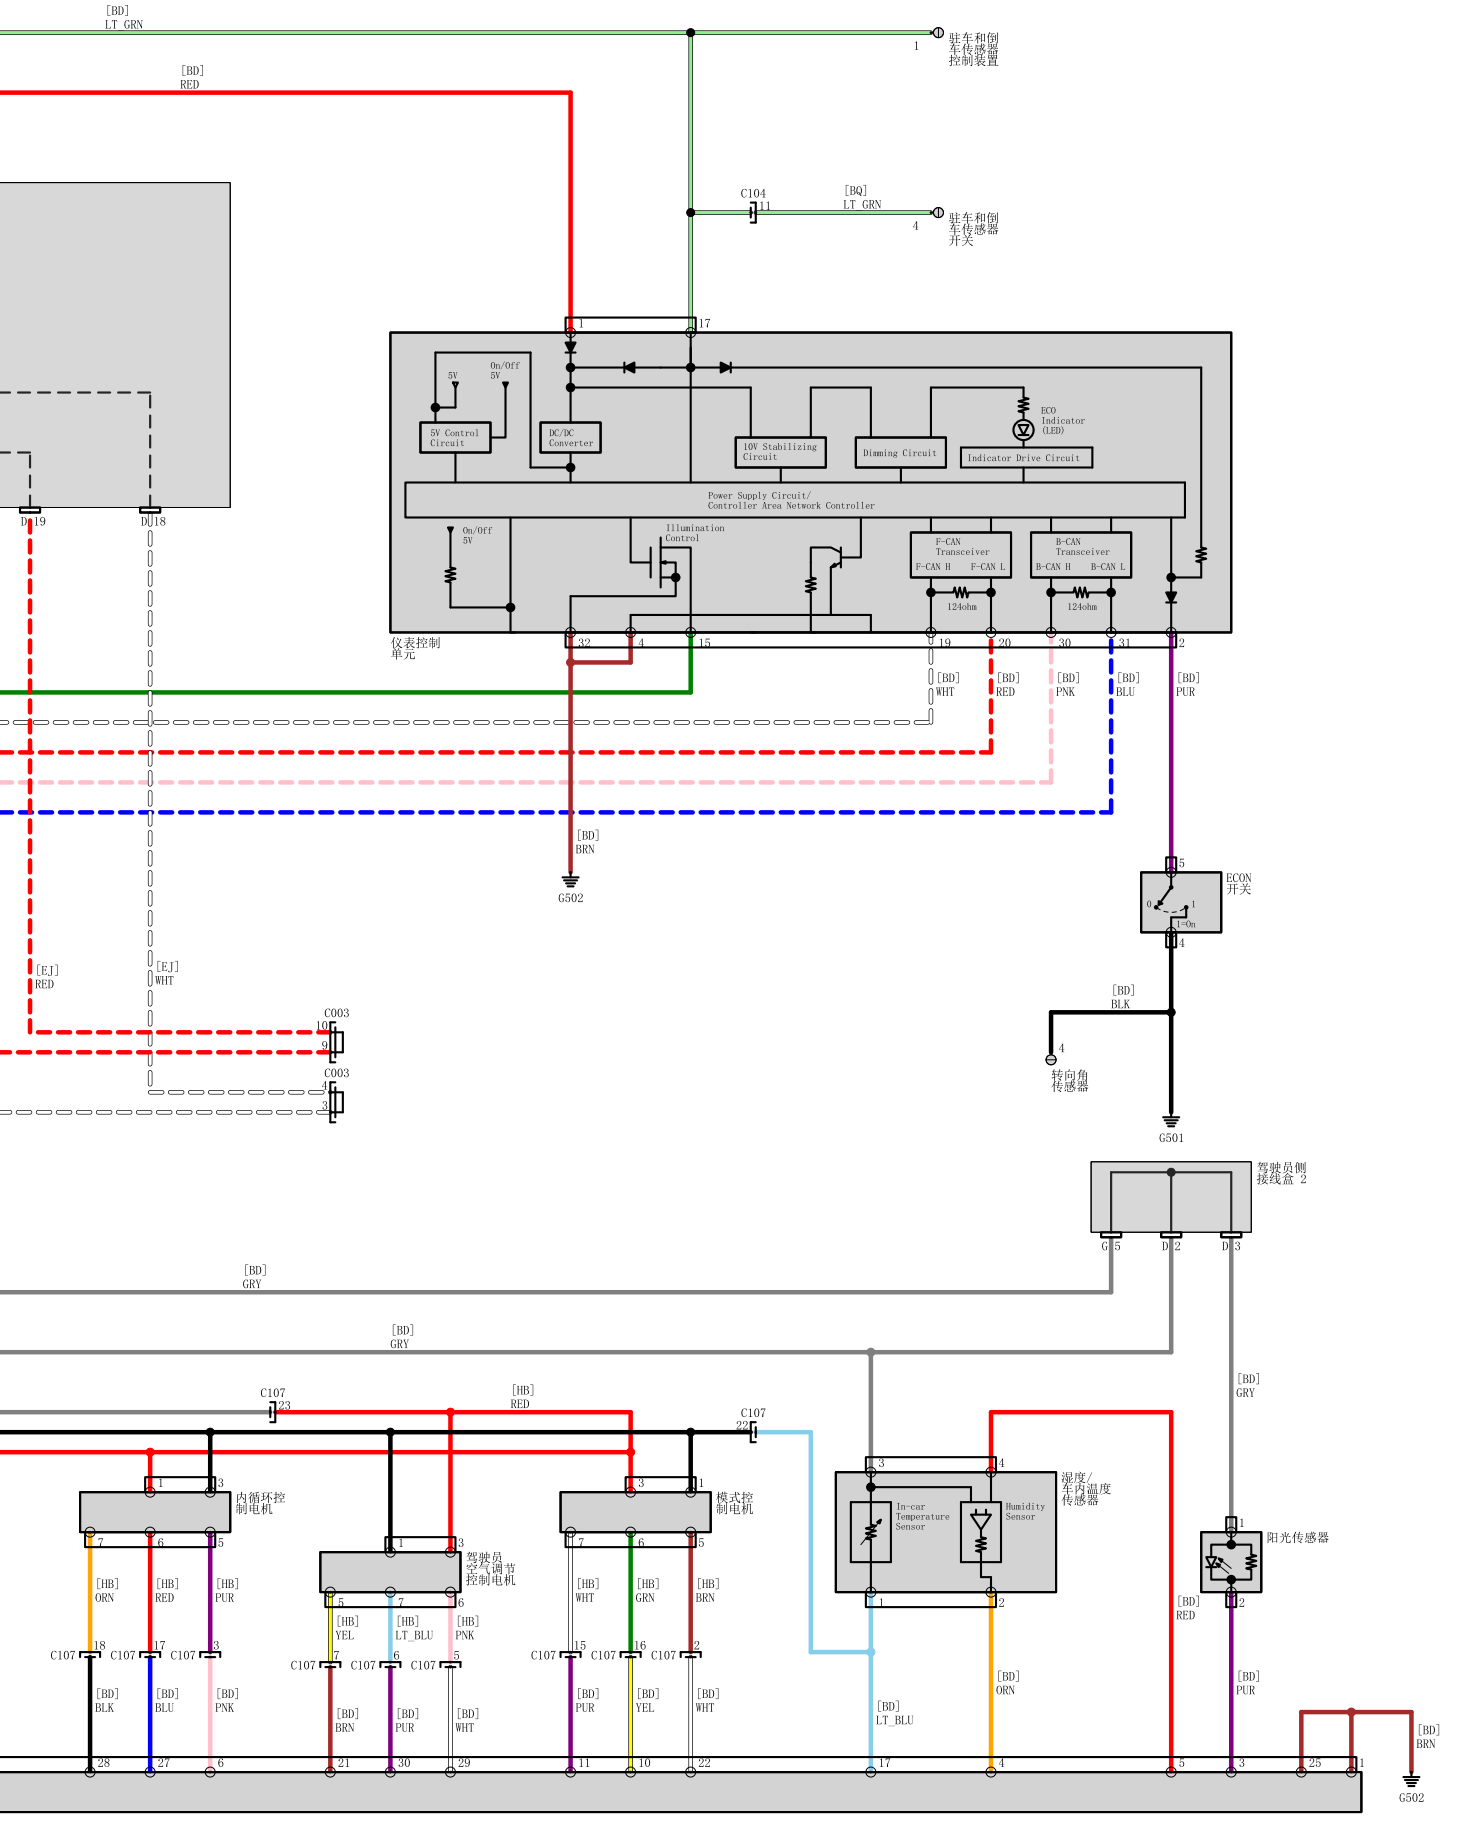
[BD] LT GRN
[BD] RED
驻车和倒车传感器控制装置
C104
[BQ] LT GRN
驻车和倒车传感器开关
5V Control Circuit
DC/DC Converter
10V Stabilizing Circuit
Dimming Circuit
ECO Indicator (LED)
Indicator Drive Circuit
Power Supply Circuit/ Controller Area Network Controller
Illumination Control
F-CAN Transceiver
B-CAN Transceiver
124ohm
仪表控制单元
[BD] WHT
[BD] RED
[BD] PNK
[BD] BLU
[BD] PUR
[BD] BRN
G502
ECON 开关
[BD] BLK
转向角传感器
G501
[EJ] RED
[EJ] WHT
C003
驾驶员侧接线盒 2
[BD] GRY
C107
[HB] RED
内循环控制电机
模式控制电机
驾驶员空气调节控制电机
[HB] ORN
[HB] PUR
[HB] YEL
[HB] LT_BLU
[HB] PNK
[HB] WHT
[HB] GRN
[HB] BRN
[BD] BLK
[BD] BLU
[BD] PNK
[BD] BRN
[BD] PUR
[BD] WHT
[BD] YEL
湿度/车内温度传感器
In-car Temperature Sensor
Humidity Sensor
[BD] LT_BLU
[BD] ORN
阳光传感器