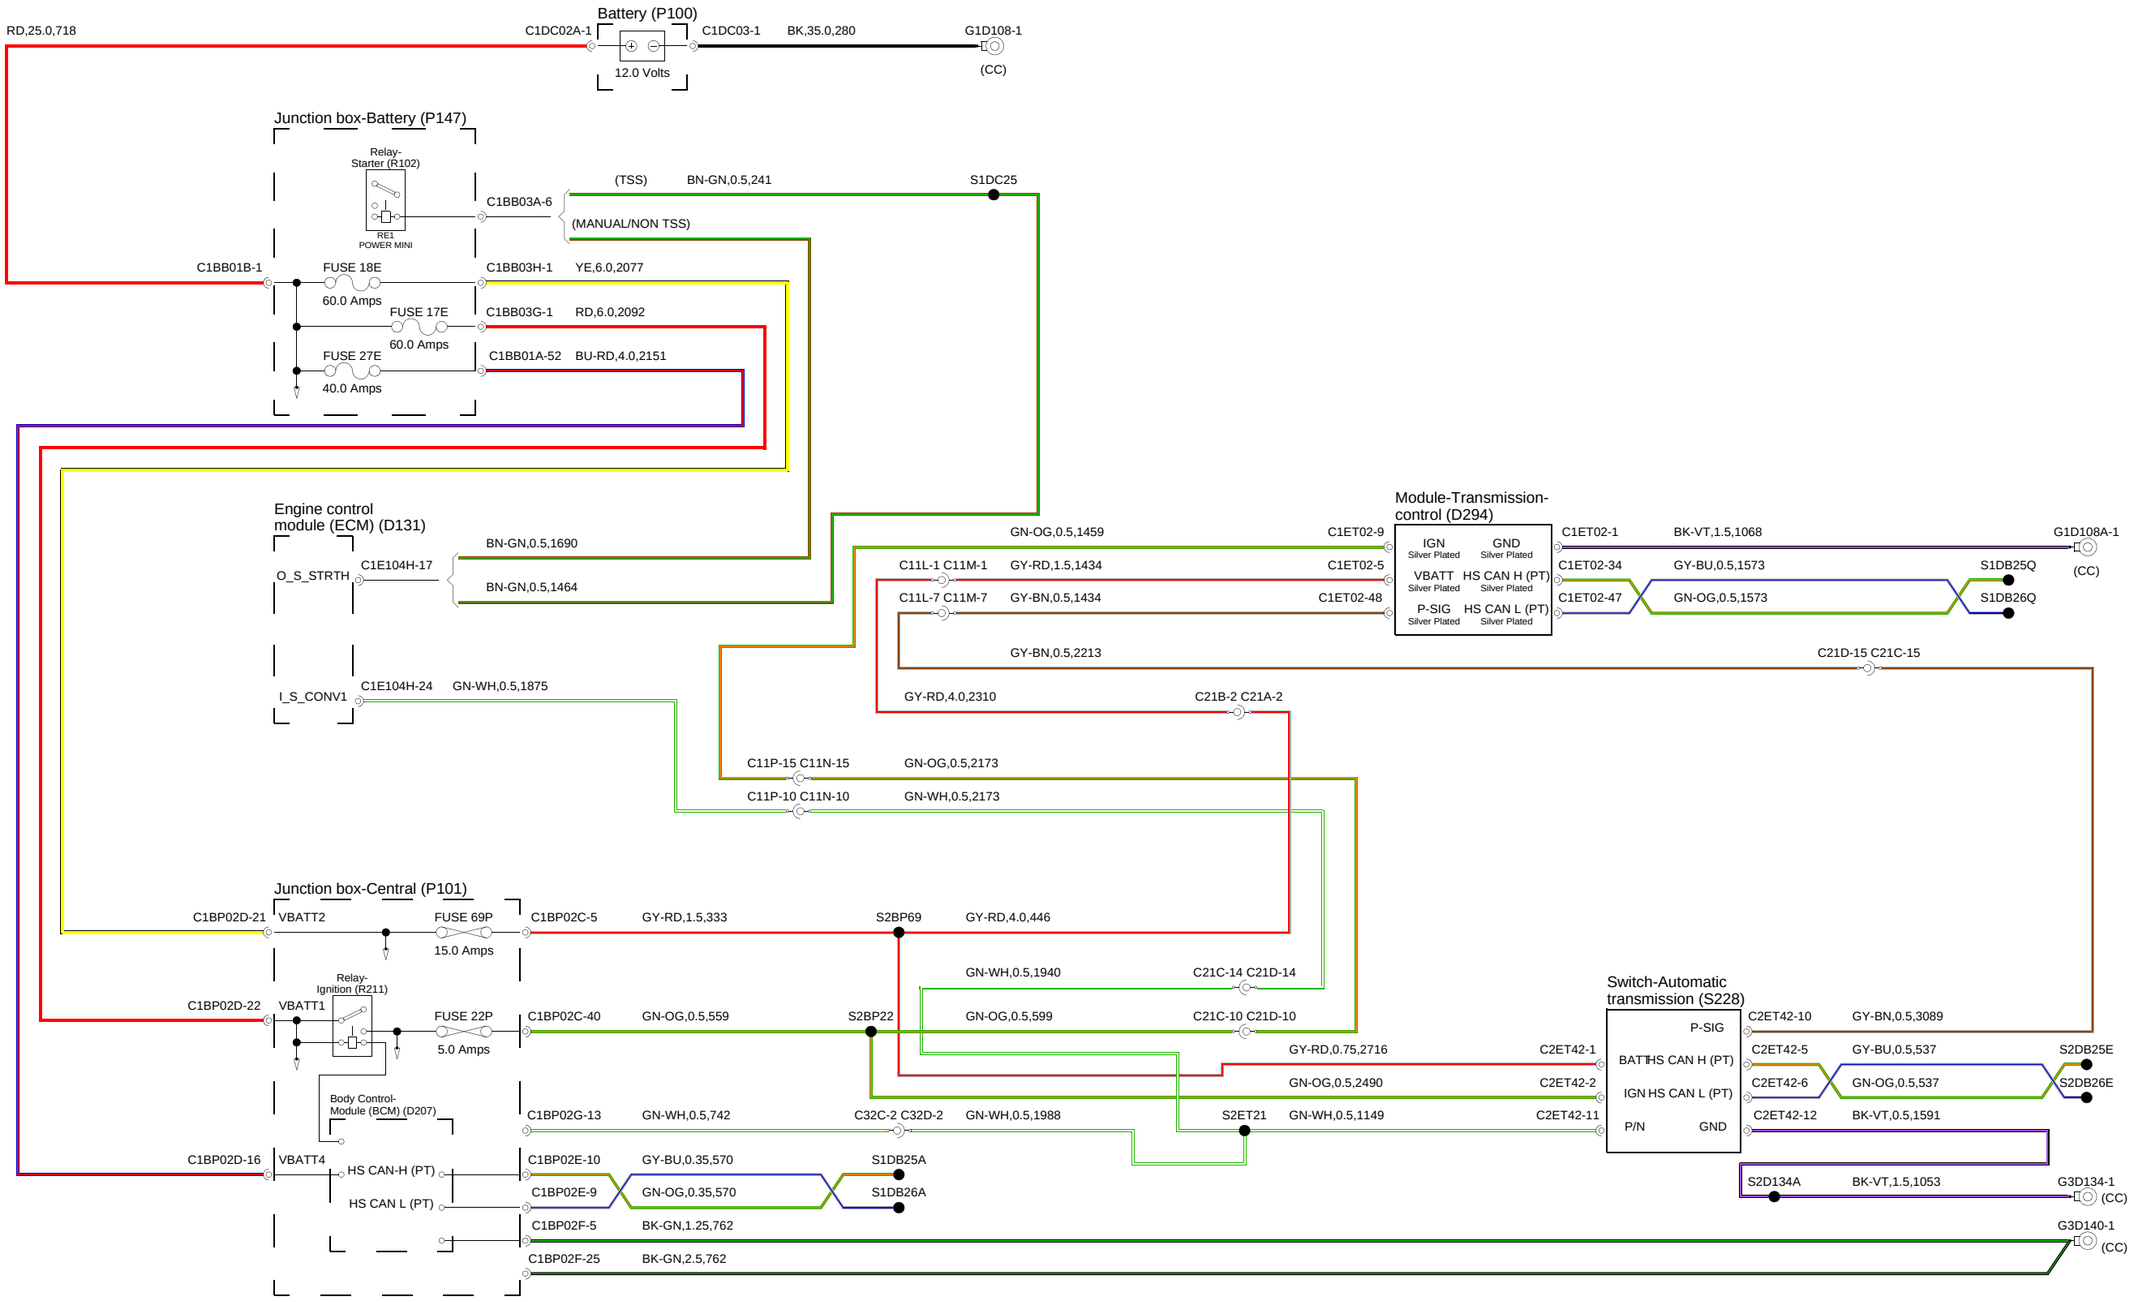
Battery (P100)
RD,25.0,718
C1DC02A-1
C1DC03-1
BK,35.0,280
G1D108-1
(CC)
12.0 Volts
Junction box-Battery (P147)
Relay-Starter (R102)
RE1 POWER MINI
C1BB03A-6
(TSS)
BN-GN,0.5,241
S1DC25
(MANUAL/NON TSS)
C1BB01B-1
FUSE 18E
60.0 Amps
C1BB03H-1
YE,6.0,2077
FUSE 17E
60.0 Amps
C1BB03G-1
RD,6.0,2092
FUSE 27E
40.0 Amps
C1BB01A-52
BU-RD,4.0,2151
Engine control module (ECM) (D131)
O_S_STRTH
C1E104H-17
BN-GN,0.5,1690
BN-GN,0.5,1464
I_S_CONV1
C1E104H-24
GN-WH,0.5,1875
Module-Transmission-control (D294)
IGN Silver Plated
GND Silver Plated
VBATT Silver Plated
HS CAN H (PT) Silver Plated
P-SIG Silver Plated
HS CAN L (PT) Silver Plated
GN-OG,0.5,1459
C1ET02-9
C11L-1 C11M-1
GY-RD,1.5,1434
C1ET02-5
C11L-7 C11M-7
GY-BN,0.5,1434
C1ET02-48
C1ET02-1
BK-VT,1.5,1068
G1D108A-1
(CC)
C1ET02-34
GY-BU,0.5,1573
S1DB25Q
C1ET02-47
GN-OG,0.5,1573
S1DB26Q
GY-BN,0.5,2213
C21D-15 C21C-15
GY-RD,4.0,2310
C21B-2 C21A-2
C11P-15 C11N-15
GN-OG,0.5,2173
C11P-10 C11N-10
GN-WH,0.5,2173
Junction box-Central (P101)
C1BP02D-21
VBATT2
FUSE 69P
15.0 Amps
C1BP02C-5
GY-RD,1.5,333
S2BP69
GY-RD,4.0,446
GN-WH,0.5,1940
C21C-14 C21D-14
Relay-Ignition (R211)
C1BP02D-22
VBATT1
FUSE 22P
5.0 Amps
C1BP02C-40
GN-OG,0.5,559
S2BP22
GN-OG,0.5,599
C21C-10 C21D-10
Switch-Automatic transmission (S228)
P-SIG
BATT
HS CAN H (PT)
IGN
HS CAN L (PT)
P/N
GND
C2ET42-10
GY-BN,0.5,3089
C2ET42-5
GY-BU,0.5,537
S2DB25E
C2ET42-6
GN-OG,0.5,537
S2DB26E
C2ET42-12
BK-VT,0.5,1591
GY-RD,0.75,2716
C2ET42-1
GN-OG,0.5,2490
C2ET42-2
Body Control-Module (BCM) (D207)
C1BP02G-13
GN-WH,0.5,742
C32C-2 C32D-2
GN-WH,0.5,1988
S2ET21
GN-WH,0.5,1149
C2ET42-11
C1BP02D-16
VBATT4
HS CAN-H (PT)
HS CAN L (PT)
C1BP02E-10
GY-BU,0.35,570
S1DB25A
C1BP02E-9
GN-OG,0.35,570
S1DB26A
S2D134A
BK-VT,1.5,1053
G3D134-1
(CC)
C1BP02F-5
BK-GN,1.25,762
G3D140-1
(CC)
C1BP02F-25
BK-GN,2.5,762

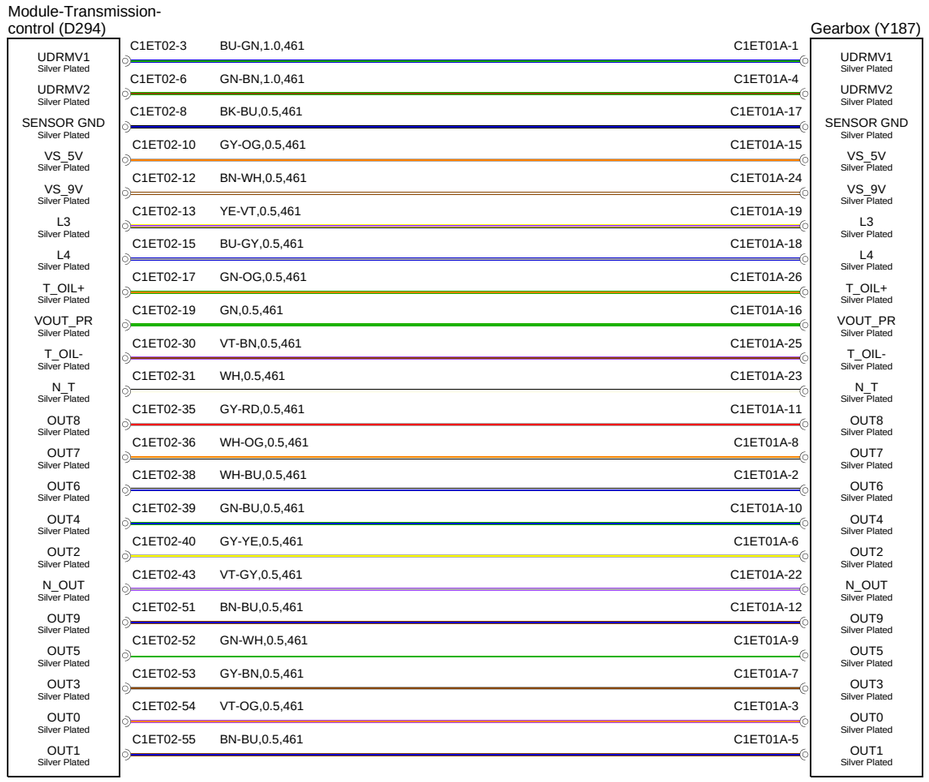
Module-Transmission-control (D294)
Gearbox (Y187)
UDRMV1 Silver Plated
UDRMV2 Silver Plated
SENSOR GND Silver Plated
VS_5V Silver Plated
VS_9V Silver Plated
L3 Silver Plated
L4 Silver Plated
T_OIL+ Silver Plated
VOUT_PR Silver Plated
T_OIL- Silver Plated
N_T Silver Plated
OUT8 Silver Plated
OUT7 Silver Plated
OUT6 Silver Plated
OUT4 Silver Plated
OUT2 Silver Plated
N_OUT Silver Plated
OUT9 Silver Plated
OUT5 Silver Plated
OUT3 Silver Plated
OUT0 Silver Plated
OUT1 Silver Plated
C1ET02-3 BU-GN,1.0,461 C1ET01A-1
C1ET02-6 GN-BN,1.0,461 C1ET01A-4
C1ET02-8 BK-BU,0.5,461 C1ET01A-17
C1ET02-10 GY-OG,0.5,461 C1ET01A-15
C1ET02-12 BN-WH,0.5,461 C1ET01A-24
C1ET02-13 YE-VT,0.5,461 C1ET01A-19
C1ET02-15 BU-GY,0.5,461 C1ET01A-18
C1ET02-17 GN-OG,0.5,461 C1ET01A-26
C1ET02-19 GN,0.5,461 C1ET01A-16
C1ET02-30 VT-BN,0.5,461 C1ET01A-25
C1ET02-31 WH,0.5,461 C1ET01A-23
C1ET02-35 GY-RD,0.5,461 C1ET01A-11
C1ET02-36 WH-OG,0.5,461 C1ET01A-8
C1ET02-38 WH-BU,0.5,461 C1ET01A-2
C1ET02-39 GN-BU,0.5,461 C1ET01A-10
C1ET02-40 GY-YE,0.5,461 C1ET01A-6
C1ET02-43 VT-GY,0.5,461 C1ET01A-22
C1ET02-51 BN-BU,0.5,461 C1ET01A-12
C1ET02-52 GN-WH,0.5,461 C1ET01A-9
C1ET02-53 GY-BN,0.5,461 C1ET01A-7
C1ET02-54 VT-OG,0.5,461 C1ET01A-3
C1ET02-55 BN-BU,0.5,461 C1ET01A-5

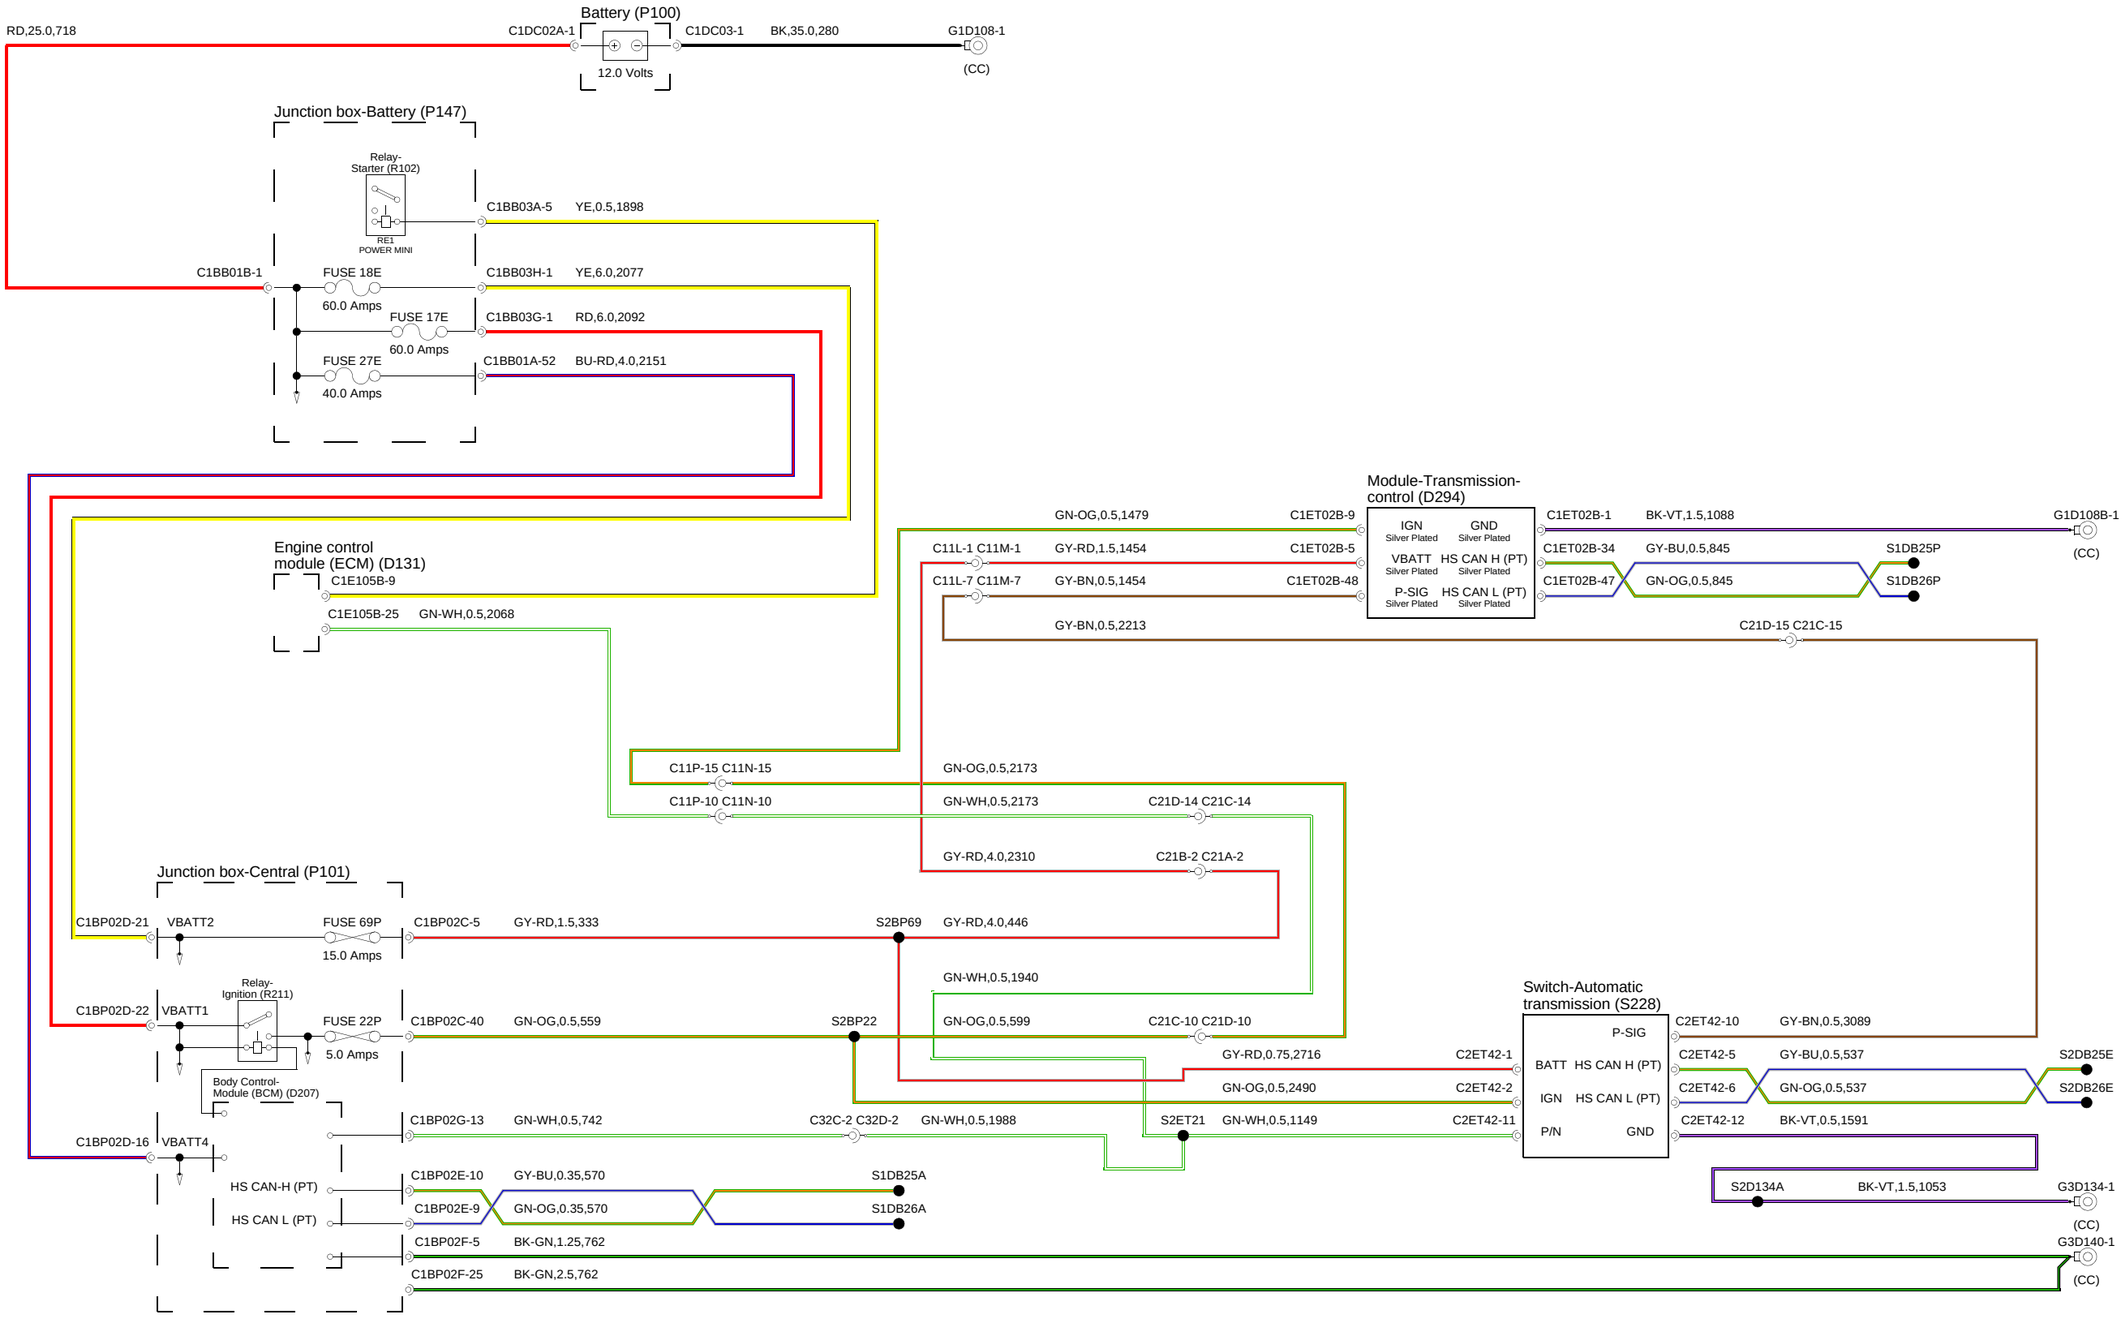
Battery (P100)
RD,25.0,718
C1DC02A-1
C1DC03-1
BK,35.0,280
G1D108-1
(CC)
12.0 Volts
Junction box-Battery (P147)
Relay-Starter (R102)
RE1 POWER MINI
C1BB03A-5
YE,0.5,1898
C1BB01B-1
FUSE 18E
60.0 Amps
C1BB03H-1
YE,6.0,2077
FUSE 17E
60.0 Amps
C1BB03G-1
RD,6.0,2092
FUSE 27E
40.0 Amps
C1BB01A-52
BU-RD,4.0,2151
Engine control module (ECM) (D131)
C1E105B-9
C1E105B-25
GN-WH,0.5,2068
Module-Transmission-control (D294)
GN-OG,0.5,1479
C1ET02B-9
IGN Silver Plated
GND Silver Plated
VBATT Silver Plated
HS CAN H (PT) Silver Plated
P-SIG Silver Plated
HS CAN L (PT) Silver Plated
C1ET02B-1
BK-VT,1.5,1088
G1D108B-1
(CC)
C11L-1 C11M-1
GY-RD,1.5,1454
C1ET02B-5
C1ET02B-34
GY-BU,0.5,845
S1DB25P
C11L-7 C11M-7
GY-BN,0.5,1454
C1ET02B-48
C1ET02B-47
GN-OG,0.5,845
S1DB26P
GY-BN,0.5,2213
C21D-15 C21C-15
C11P-15 C11N-15
GN-OG,0.5,2173
C11P-10 C11N-10
GN-WH,0.5,2173
C21D-14 C21C-14
GY-RD,4.0,2310
C21B-2 C21A-2
Junction box-Central (P101)
C1BP02D-21
VBATT2
FUSE 69P
15.0 Amps
C1BP02C-5
GY-RD,1.5,333
S2BP69
GY-RD,4.0,446
GN-WH,0.5,1940
Relay-Ignition (R211)
C1BP02D-22
VBATT1
FUSE 22P
5.0 Amps
C1BP02C-40
GN-OG,0.5,559
S2BP22
GN-OG,0.5,599
C21C-10 C21D-10
Switch-Automatic transmission (S228)
P-SIG
C2ET42-10
GY-BN,0.5,3089
GY-RD,0.75,2716
C2ET42-1
BATT
HS CAN H (PT)
C2ET42-5
GY-BU,0.5,537
S2DB25E
GN-OG,0.5,2490
C2ET42-2
IGN
HS CAN L (PT)
C2ET42-6
GN-OG,0.5,537
S2DB26E
Body Control-Module (BCM) (D207)
C1BP02G-13
GN-WH,0.5,742
C32C-2 C32D-2
GN-WH,0.5,1988
S2ET21
GN-WH,0.5,1149
C2ET42-11
P/N
GND
C2ET42-12
BK-VT,0.5,1591
C1BP02D-16
VBATT4
HS CAN-H (PT)
C1BP02E-10
GY-BU,0.35,570
S1DB25A
HS CAN L (PT)
C1BP02E-9
GN-OG,0.35,570
S1DB26A
S2D134A
BK-VT,1.5,1053
G3D134-1
(CC)
C1BP02F-5
BK-GN,1.25,762
G3D140-1
C1BP02F-25
BK-GN,2.5,762
(CC)

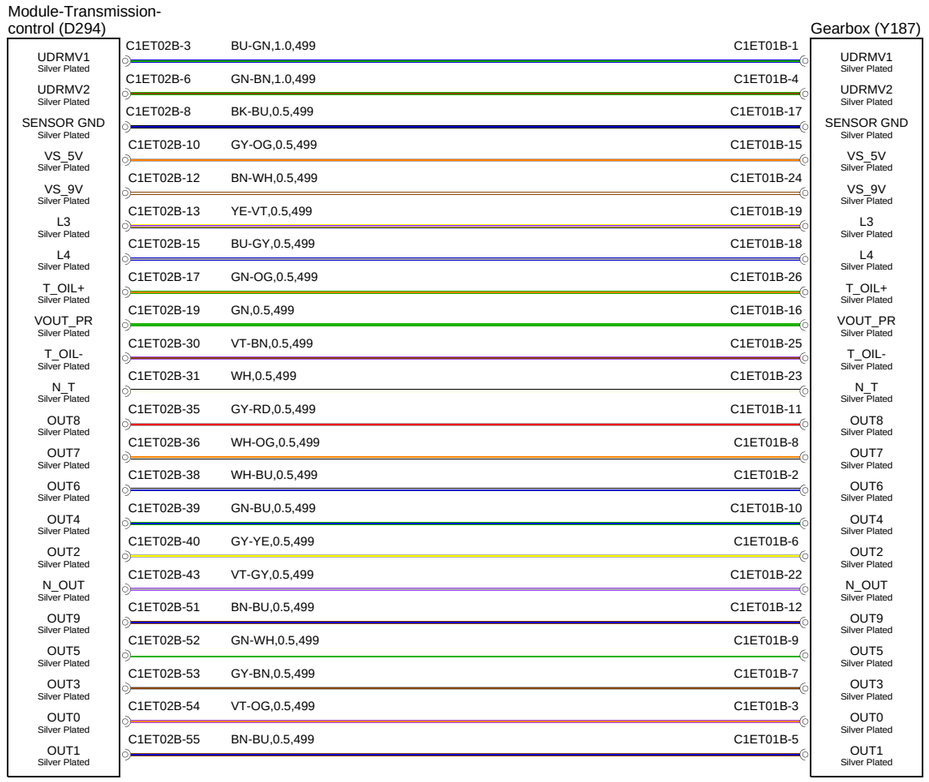
Module-Transmission-control (D294)
Gearbox (Y187)
UDRMV1 Silver Plated
UDRMV2 Silver Plated
SENSOR GND Silver Plated
VS_5V Silver Plated
VS_9V Silver Plated
L3 Silver Plated
L4 Silver Plated
T_OIL+ Silver Plated
VOUT_PR Silver Plated
T_OIL- Silver Plated
N_T Silver Plated
OUT8 Silver Plated
OUT7 Silver Plated
OUT6 Silver Plated
OUT4 Silver Plated
OUT2 Silver Plated
N_OUT Silver Plated
OUT9 Silver Plated
OUT5 Silver Plated
OUT3 Silver Plated
OUT0 Silver Plated
OUT1 Silver Plated
C1ET02B-3 BU-GN,1.0,499 C1ET01B-1
C1ET02B-6 GN-BN,1.0,499 C1ET01B-4
C1ET02B-8 BK-BU,0.5,499 C1ET01B-17
C1ET02B-10 GY-OG,0.5,499 C1ET01B-15
C1ET02B-12 BN-WH,0.5,499 C1ET01B-24
C1ET02B-13 YE-VT,0.5,499 C1ET01B-19
C1ET02B-15 BU-GY,0.5,499 C1ET01B-18
C1ET02B-17 GN-OG,0.5,499 C1ET01B-26
C1ET02B-19 GN,0.5,499 C1ET01B-16
C1ET02B-30 VT-BN,0.5,499 C1ET01B-25
C1ET02B-31 WH,0.5,499 C1ET01B-23
C1ET02B-35 GY-RD,0.5,499 C1ET01B-11
C1ET02B-36 WH-OG,0.5,499 C1ET01B-8
C1ET02B-38 WH-BU,0.5,499 C1ET01B-2
C1ET02B-39 GN-BU,0.5,499 C1ET01B-10
C1ET02B-40 GY-YE,0.5,499 C1ET01B-6
C1ET02B-43 VT-GY,0.5,499 C1ET01B-22
C1ET02B-51 BN-BU,0.5,499 C1ET01B-12
C1ET02B-52 GN-WH,0.5,499 C1ET01B-9
C1ET02B-53 GY-BN,0.5,499 C1ET01B-7
C1ET02B-54 VT-OG,0.5,499 C1ET01B-3
C1ET02B-55 BN-BU,0.5,499 C1ET01B-5