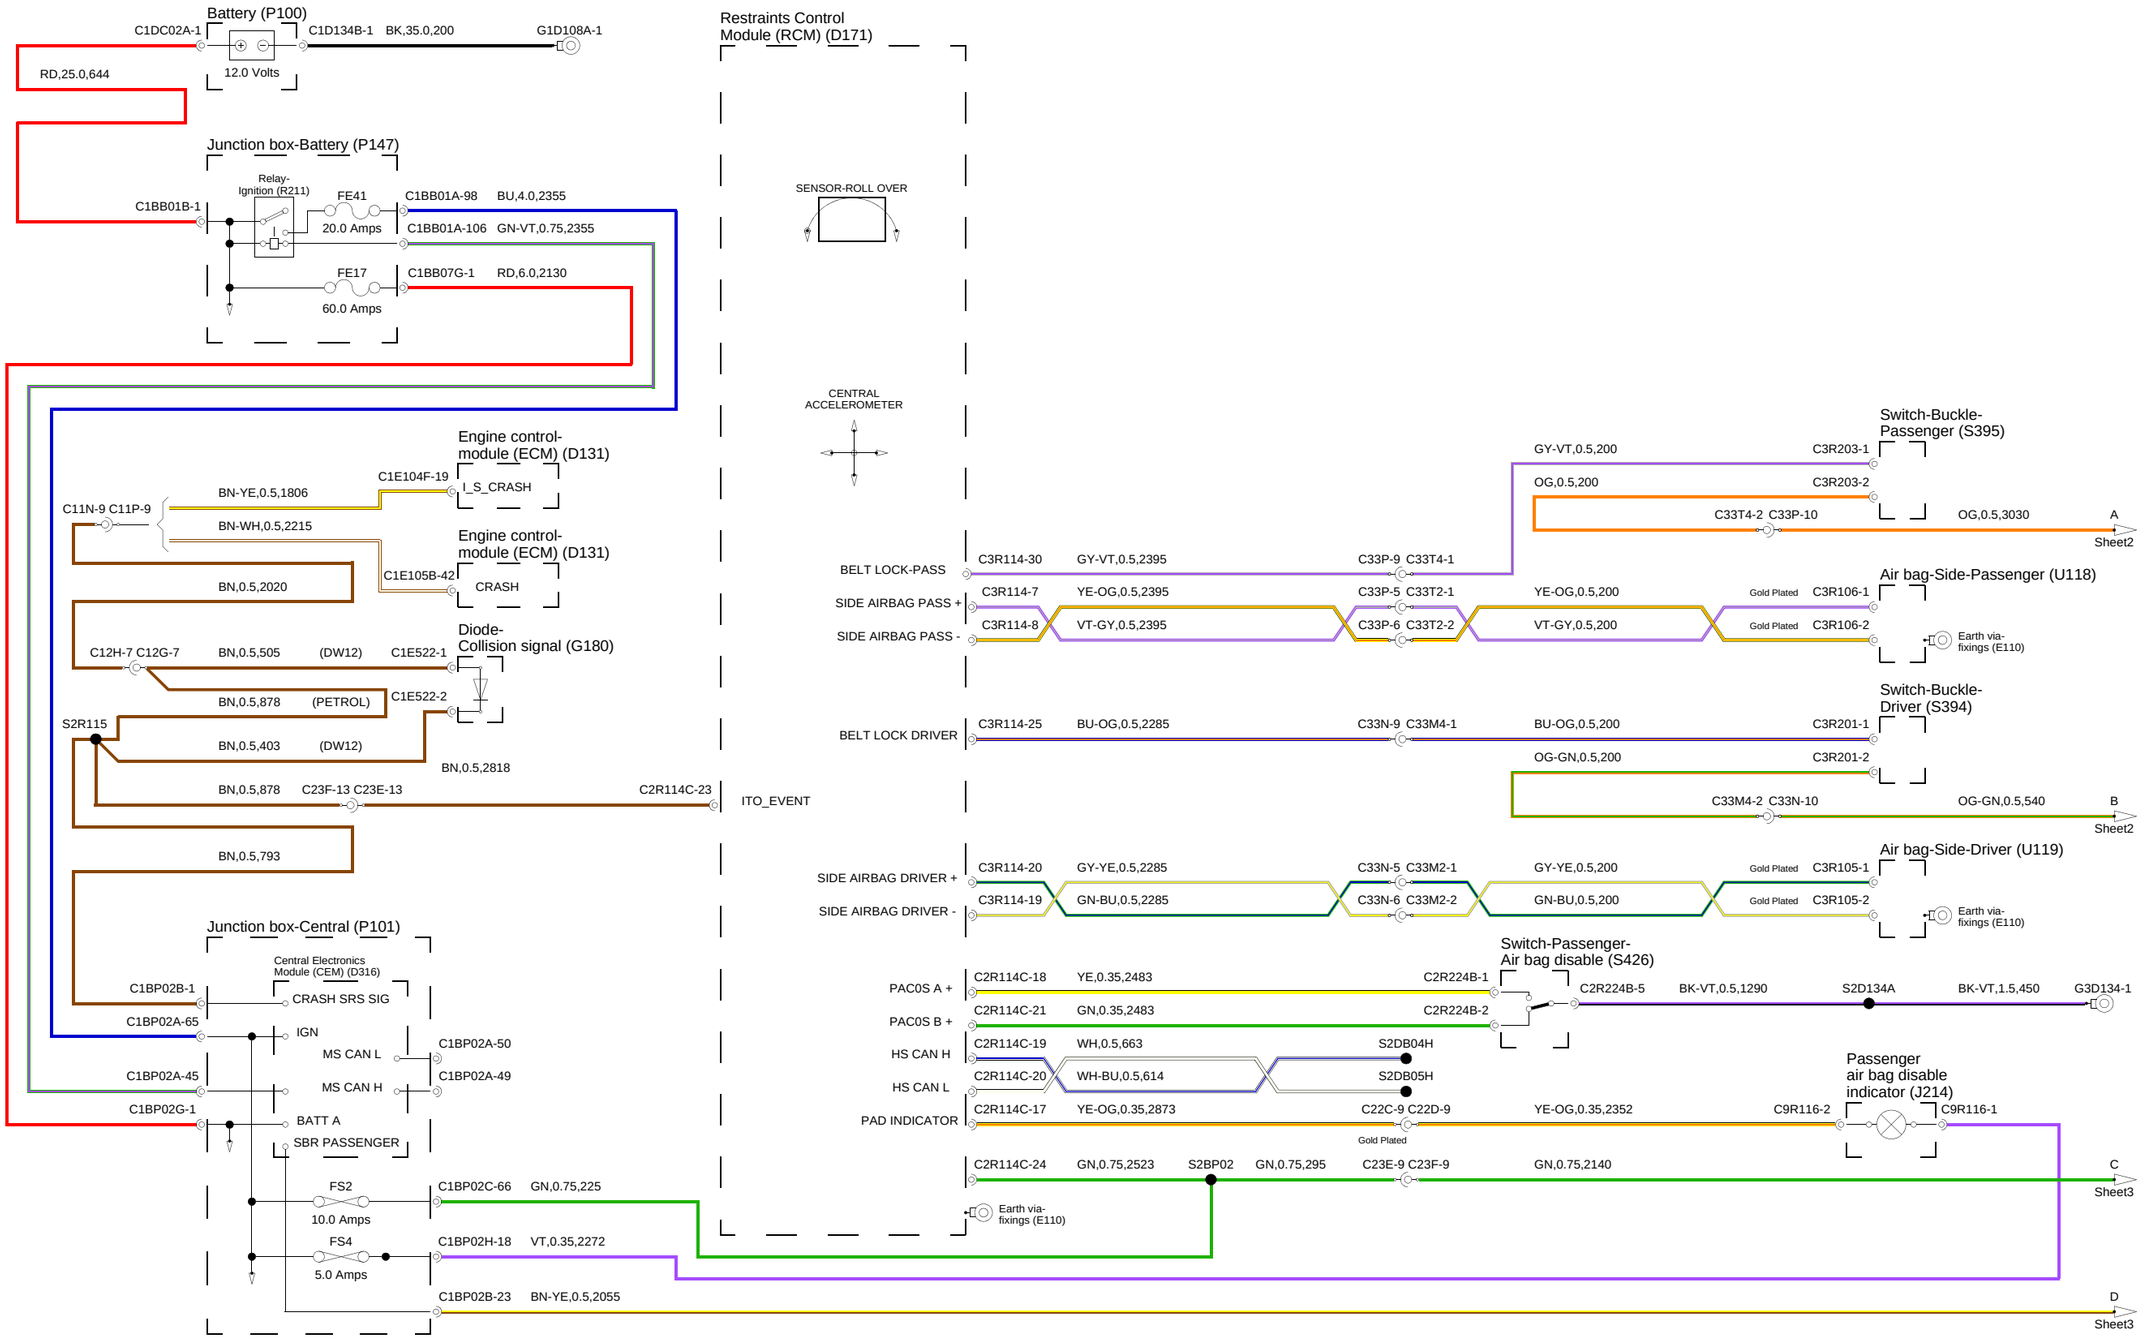
Battery (P100)
C1DC02A-1
C1D134B-1
BK,35.0,200
G1D108A-1
12.0 Volts
RD,25.0,644
Junction box-Battery (P147)
Relay-Ignition (R211)
C1BB01B-1
FE41
20.0 Amps
C1BB01A-98
BU,4.0,2355
C1BB01A-106
GN-VT,0.75,2355
FE17
60.0 Amps
C1BB07G-1
RD,6.0,2130
Restraints Control Module (RCM) (D171)
SENSOR-ROLL OVER
CENTRAL ACCELEROMETER
Engine control-module (ECM) (D131)
C1E104F-19
I_S_CRASH
C11N-9 C11P-9
BN-YE,0.5,1806
BN-WH,0.5,2215
Engine control-module (ECM) (D131)
C1E105B-42
CRASH
BN,0.5,2020
Diode-Collision signal (G180)
C12H-7 C12G-7
BN,0.5,505
(DW12)
C1E522-1
BN,0.5,878
(PETROL)
C1E522-2
S2R115
BN,0.5,403
(DW12)
BN,0.5,2818
BN,0.5,878
C23F-13 C23E-13
C2R114C-23
ITO_EVENT
BN,0.5,793
Junction box-Central (P101)
Central Electronics Module (CEM) (D316)
C1BP02B-1
CRASH SRS SIG
C1BP02A-65
IGN
MS CAN L
C1BP02A-50
C1BP02A-45
MS CAN H
C1BP02A-49
C1BP02G-1
BATT A
SBR PASSENGER
FS2
10.0 Amps
C1BP02C-66
GN,0.75,225
FS4
5.0 Amps
C1BP02H-18
VT,0.35,2272
C1BP02B-23
BN-YE,0.5,2055
D
Sheet3
BELT LOCK-PASS
C3R114-30
GY-VT,0.5,2395
C33P-9 C33T4-1
GY-VT,0.5,200
C3R203-1
Switch-Buckle-Passenger (S395)
OG,0.5,200
C3R203-2
C33T4-2 C33P-10
OG,0.5,3030
A
Sheet2
SIDE AIRBAG PASS +
C3R114-7
YE-OG,0.5,2395
C33P-5 C33T2-1
YE-OG,0.5,200
Gold Plated
C3R106-1
Air bag-Side-Passenger (U118)
SIDE AIRBAG PASS -
C3R114-8
VT-GY,0.5,2395
C33P-6 C33T2-2
VT-GY,0.5,200
Gold Plated
C3R106-2
Earth via-fixings (E110)
BELT LOCK DRIVER
C3R114-25
BU-OG,0.5,2285
C33N-9 C33M4-1
BU-OG,0.5,200
C3R201-1
Switch-Buckle-Driver (S394)
OG-GN,0.5,200
C3R201-2
C33M4-2 C33N-10
OG-GN,0.5,540
B
Sheet2
SIDE AIRBAG DRIVER +
C3R114-20
GY-YE,0.5,2285
C33N-5 C33M2-1
GY-YE,0.5,200
Gold Plated
C3R105-1
Air bag-Side-Driver (U119)
SIDE AIRBAG DRIVER -
C3R114-19
GN-BU,0.5,2285
C33N-6 C33M2-2
GN-BU,0.5,200
Gold Plated
C3R105-2
Earth via-fixings (E110)
Switch-Passenger-Air bag disable (S426)
PAC0S A +
C2R114C-18
YE,0.35,2483
C2R224B-1
C2R224B-5
BK-VT,0.5,1290
S2D134A
BK-VT,1.5,450
G3D134-1
PAC0S B +
C2R114C-21
GN,0.35,2483
C2R224B-2
HS CAN H
C2R114C-19
WH,0.5,663
S2DB04H
HS CAN L
C2R114C-20
WH-BU,0.5,614
S2DB05H
Passenger air bag disable indicator (J214)
PAD INDICATOR
C2R114C-17
YE-OG,0.35,2873
C22C-9 C22D-9
Gold Plated
YE-OG,0.35,2352
C9R116-2
C9R116-1
C2R114C-24
GN,0.75,2523
S2BP02
GN,0.75,295
C23E-9 C23F-9
GN,0.75,2140
C
Sheet3
Earth via-fixings (E110)

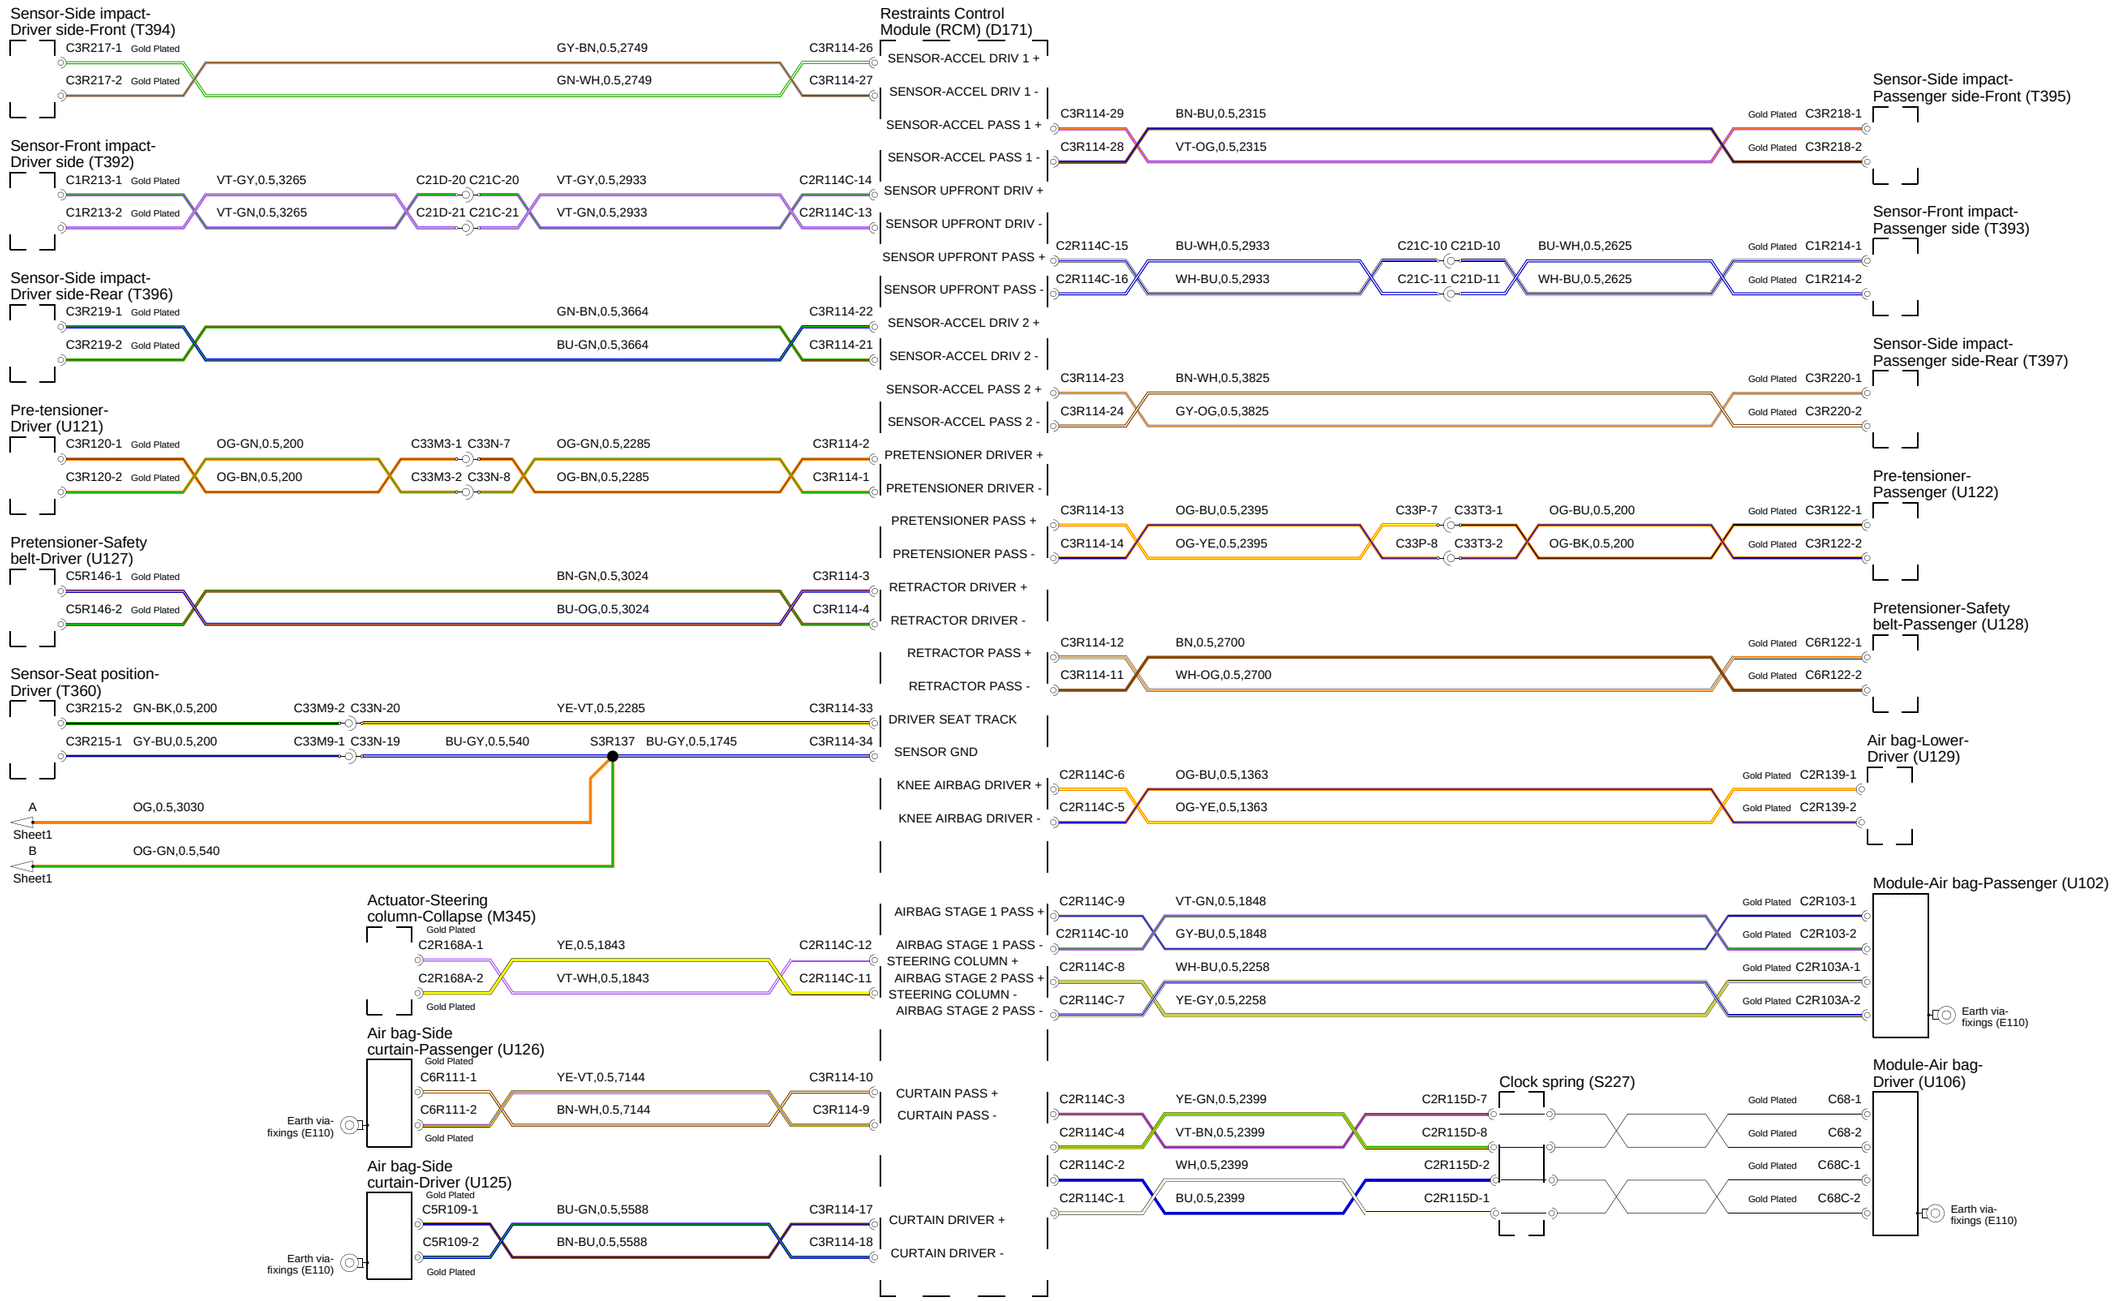
Sensor-Side impact-Driver side-Front (T394)
C3R217-1 Gold Plated
C3R217-2 Gold Plated
GY-BN,0.5,2749
GN-WH,0.5,2749
C3R114-26
C3R114-27
Sensor-Front impact-Driver side (T392)
C1R213-1 Gold Plated
C1R213-2 Gold Plated
VT-GY,0.5,3265
VT-GN,0.5,3265
C21D-20 C21C-20
C21D-21 C21C-21
VT-GY,0.5,2933
VT-GN,0.5,2933
C2R114C-14
C2R114C-13
Sensor-Side impact-Driver side-Rear (T396)
C3R219-1 Gold Plated
C3R219-2 Gold Plated
GN-BN,0.5,3664
BU-GN,0.5,3664
C3R114-22
C3R114-21
Pre-tensioner-Driver (U121)
C3R120-1 Gold Plated
C3R120-2 Gold Plated
OG-GN,0.5,200
OG-BN,0.5,200
C33M3-1 C33N-7
C33M3-2 C33N-8
OG-GN,0.5,2285
OG-BN,0.5,2285
C3R114-2
C3R114-1
Pretensioner-Safety belt-Driver (U127)
C5R146-1 Gold Plated
C5R146-2 Gold Plated
BN-GN,0.5,3024
BU-OG,0.5,3024
C3R114-3
C3R114-4
Sensor-Seat position-Driver (T360)
C3R215-2 GN-BK,0.5,200
C33M9-2 C33N-20
YE-VT,0.5,2285
C3R114-33
C3R215-1 GY-BU,0.5,200
C33M9-1 C33N-19
BU-GY,0.5,540
S3R137
BU-GY,0.5,1745
C3R114-34
A
OG,0.5,3030
Sheet1
B
OG-GN,0.5,540
Sheet1
Restraints Control Module (RCM) (D171)
SENSOR-ACCEL DRIV 1 +
SENSOR-ACCEL DRIV 1 -
SENSOR-ACCEL PASS 1 +
SENSOR-ACCEL PASS 1 -
SENSOR UPFRONT DRIV +
SENSOR UPFRONT DRIV -
SENSOR UPFRONT PASS +
SENSOR UPFRONT PASS -
SENSOR-ACCEL DRIV 2 +
SENSOR-ACCEL DRIV 2 -
SENSOR-ACCEL PASS 2 +
SENSOR-ACCEL PASS 2 -
PRETENSIONER DRIVER +
PRETENSIONER DRIVER -
PRETENSIONER PASS +
PRETENSIONER PASS -
RETRACTOR DRIVER +
RETRACTOR DRIVER -
RETRACTOR PASS +
RETRACTOR PASS -
DRIVER SEAT TRACK
SENSOR GND
KNEE AIRBAG DRIVER +
KNEE AIRBAG DRIVER -
AIRBAG STAGE 1 PASS +
AIRBAG STAGE 1 PASS -
STEERING COLUMN +
AIRBAG STAGE 2 PASS +
STEERING COLUMN -
AIRBAG STAGE 2 PASS -
CURTAIN PASS +
CURTAIN PASS -
CURTAIN DRIVER +
CURTAIN DRIVER -
Sensor-Side impact-Passenger side-Front (T395)
C3R114-29
C3R114-28
BN-BU,0.5,2315
VT-OG,0.5,2315
Gold Plated C3R218-1
Gold Plated C3R218-2
Sensor-Front impact-Passenger side (T393)
C2R114C-15
C2R114C-16
BU-WH,0.5,2933
WH-BU,0.5,2933
C21C-10 C21D-10
C21C-11 C21D-11
BU-WH,0.5,2625
WH-BU,0.5,2625
Gold Plated C1R214-1
Gold Plated C1R214-2
Sensor-Side impact-Passenger side-Rear (T397)
C3R114-23
C3R114-24
BN-WH,0.5,3825
GY-OG,0.5,3825
Gold Plated C3R220-1
Gold Plated C3R220-2
Pre-tensioner-Passenger (U122)
C3R114-13
C3R114-14
OG-BU,0.5,2395
OG-YE,0.5,2395
C33P-7 C33T3-1
C33P-8 C33T3-2
OG-BU,0.5,200
OG-BK,0.5,200
Gold Plated C3R122-1
Gold Plated C3R122-2
Pretensioner-Safety belt-Passenger (U128)
C3R114-12
C3R114-11
BN,0.5,2700
WH-OG,0.5,2700
Gold Plated C6R122-1
Gold Plated C6R122-2
Air bag-Lower-Driver (U129)
C2R114C-6
C2R114C-5
OG-BU,0.5,1363
OG-YE,0.5,1363
Gold Plated C2R139-1
Gold Plated C2R139-2
Module-Air bag-Passenger (U102)
C2R114C-9
C2R114C-10
VT-GN,0.5,1848
GY-BU,0.5,1848
Gold Plated C2R103-1
Gold Plated C2R103-2
C2R114C-8
C2R114C-7
WH-BU,0.5,2258
YE-GY,0.5,2258
Gold Plated C2R103A-1
Gold Plated C2R103A-2
Earth via-fixings (E110)
Actuator-Steering column-Collapse (M345)
Gold Plated
C2R168A-1
C2R168A-2
YE,0.5,1843
VT-WH,0.5,1843
C2R114C-12
C2R114C-11
Gold Plated
Air bag-Side curtain-Passenger (U126)
Gold Plated
C6R111-1
C6R111-2
YE-VT,0.5,7144
BN-WH,0.5,7144
C3R114-10
C3R114-9
Gold Plated
Earth via-fixings (E110)
Air bag-Side curtain-Driver (U125)
Gold Plated
C5R109-1
C5R109-2
BU-GN,0.5,5588
BN-BU,0.5,5588
C3R114-17
C3R114-18
Gold Plated
Earth via-fixings (E110)
Clock spring (S227)
C2R114C-3
C2R114C-4
C2R114C-2
C2R114C-1
YE-GN,0.5,2399
VT-BN,0.5,2399
WH,0.5,2399
BU,0.5,2399
C2R115D-7
C2R115D-8
C2R115D-2
C2R115D-1
Module-Air bag-Driver (U106)
Gold Plated C68-1
Gold Plated C68-2
Gold Plated C68C-1
Gold Plated C68C-2
Earth via-fixings (E110)

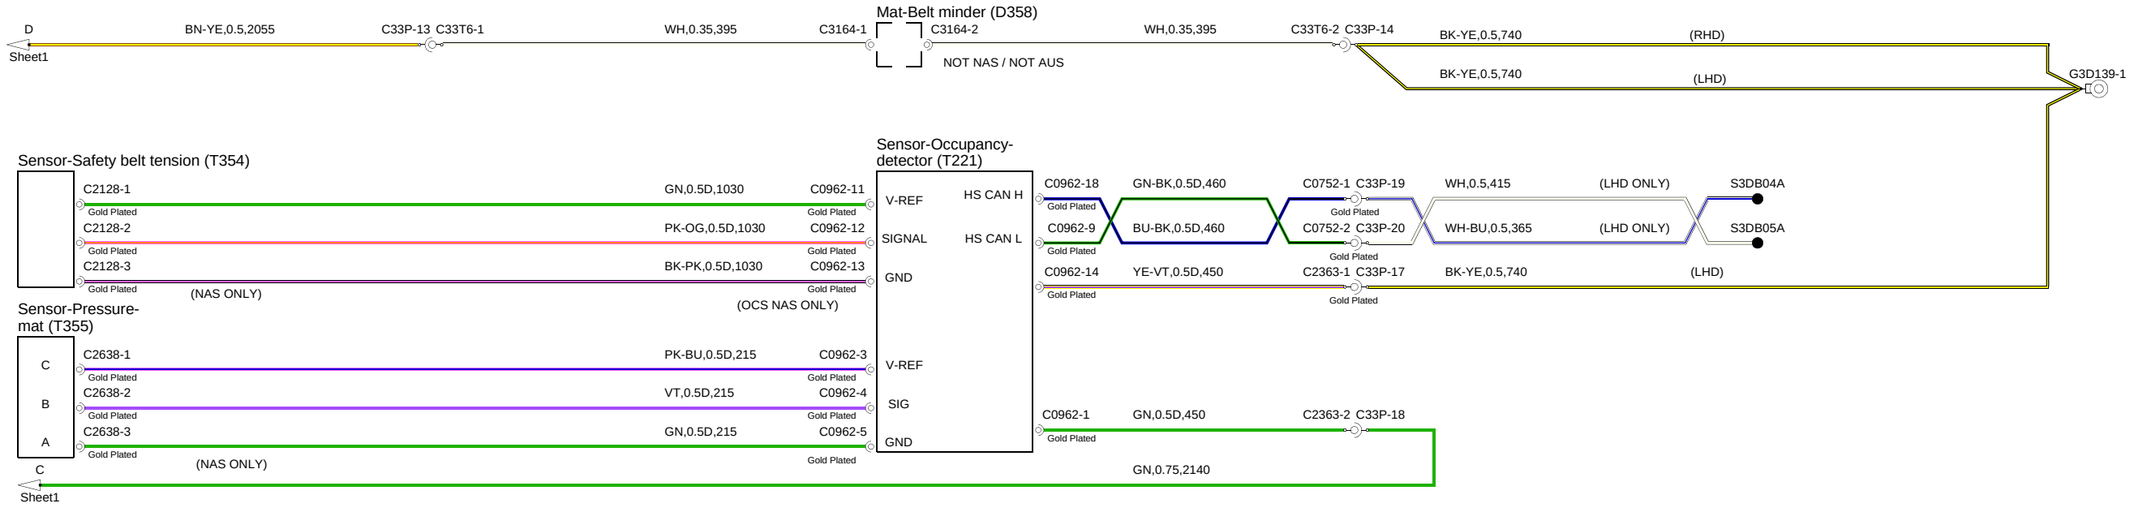
Mat-Belt minder (D358)
D
Sheet1
BN-YE,0.5,2055
C33P-13 C33T6-1
WH,0.35,395
C3164-1
C3164-2
NOT NAS / NOT AUS
WH,0.35,395
C33T6-2 C33P-14
BK-YE,0.5,740
(RHD)
BK-YE,0.5,740
(LHD)
G3D139-1
Sensor-Safety belt tension (T354)
C2128-1
Gold Plated
GN,0.5D,1030
C0962-11
Gold Plated
C2128-2
Gold Plated
PK-OG,0.5D,1030
C0962-12
Gold Plated
C2128-3
Gold Plated
BK-PK,0.5D,1030
C0962-13
Gold Plated
(NAS ONLY)
(OCS NAS ONLY)
Sensor-Occupancy-detector (T221)
V-REF
HS CAN H
SIGNAL
HS CAN L
GND
C0962-18
Gold Plated
GN-BK,0.5D,460
C0752-1 C33P-19
Gold Plated
WH,0.5,415
(LHD ONLY)
S3DB04A
C0962-9
Gold Plated
BU-BK,0.5D,460
C0752-2 C33P-20
Gold Plated
WH-BU,0.5,365
(LHD ONLY)
S3DB05A
C0962-14
Gold Plated
YE-VT,0.5D,450
C2363-1 C33P-17
Gold Plated
BK-YE,0.5,740
(LHD)
Sensor-Pressure-mat (T355)
C
B
A
C2638-1
Gold Plated
PK-BU,0.5D,215
C0962-3
Gold Plated
V-REF
C2638-2
Gold Plated
VT,0.5D,215
C0962-4
Gold Plated
SIG
C2638-3
Gold Plated
GN,0.5D,215
C0962-5
Gold Plated
GND
(NAS ONLY)
C0962-1
Gold Plated
GN,0.5D,450
C2363-2 C33P-18
GN,0.75,2140
C
Sheet1

Published by Technical Communications, Land Rover
Publication Part No. JLR 17 09 21_1E