

## CIRCUIT INSPECTION

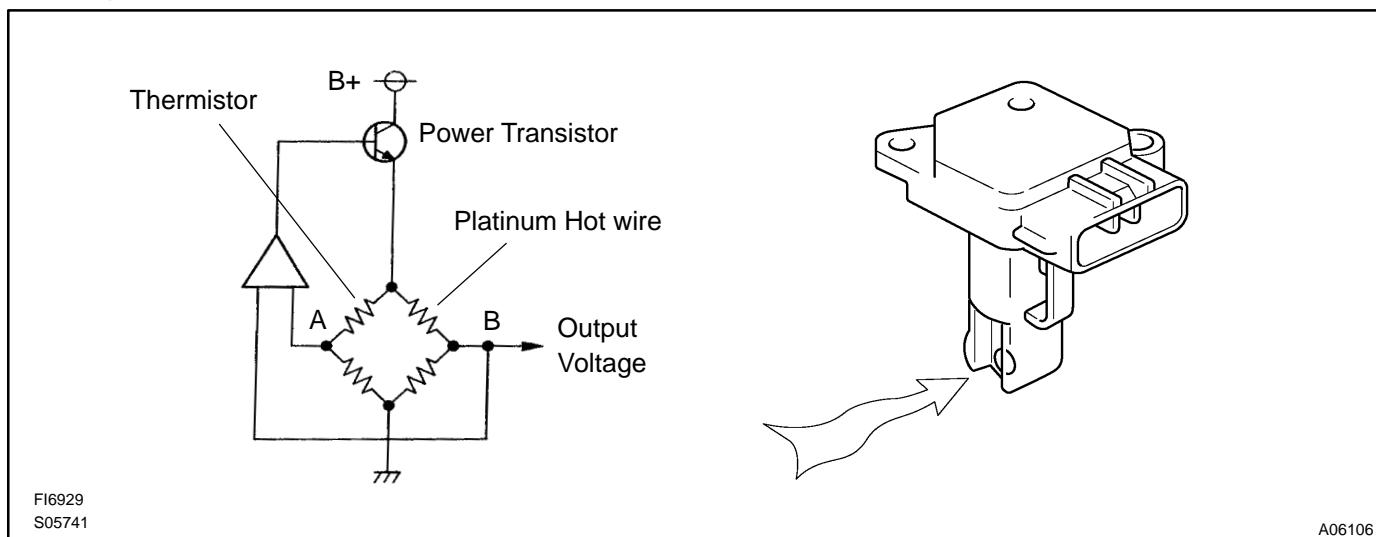
<b>DTC</b>	<b>P0100</b>	<b>Mass Air Flow Circuit Malfunction</b>
------------	--------------	--

### CIRCUIT DESCRIPTION

The mass air flow meter uses a platinum hot wire. The hot wire air flow meter consists of a platinum hot wire, thermistor and a control circuit installed in a plastic housing. The hot wire air flow meter works in principle that the hot wire and thermistor located in the intake air bypass of the housing detect any changes in the intake air temperature.

The hot wire is maintained at the set temperature by controlling the current flow through the hot wire. This current flow is then measured as the output voltage of the air flow meter.

The circuit is constructed so that the platinum hot wire and thermistor can provide a bridge circuit with the power transistor, and controlled so that the potential of A and B can remain equal in order to maintain the set temperature.



DTC No.	DTC Detecting Condition	Trouble Area
P0100	Open or short in mass air flow meter circuit with more than 3 sec. engine speed 4,000 rpm or less	<ul style="list-style-type: none"> <li>Open or short in mass air flow meter circuit</li> <li>Mass air flow meter</li> <li>ECM</li> </ul>

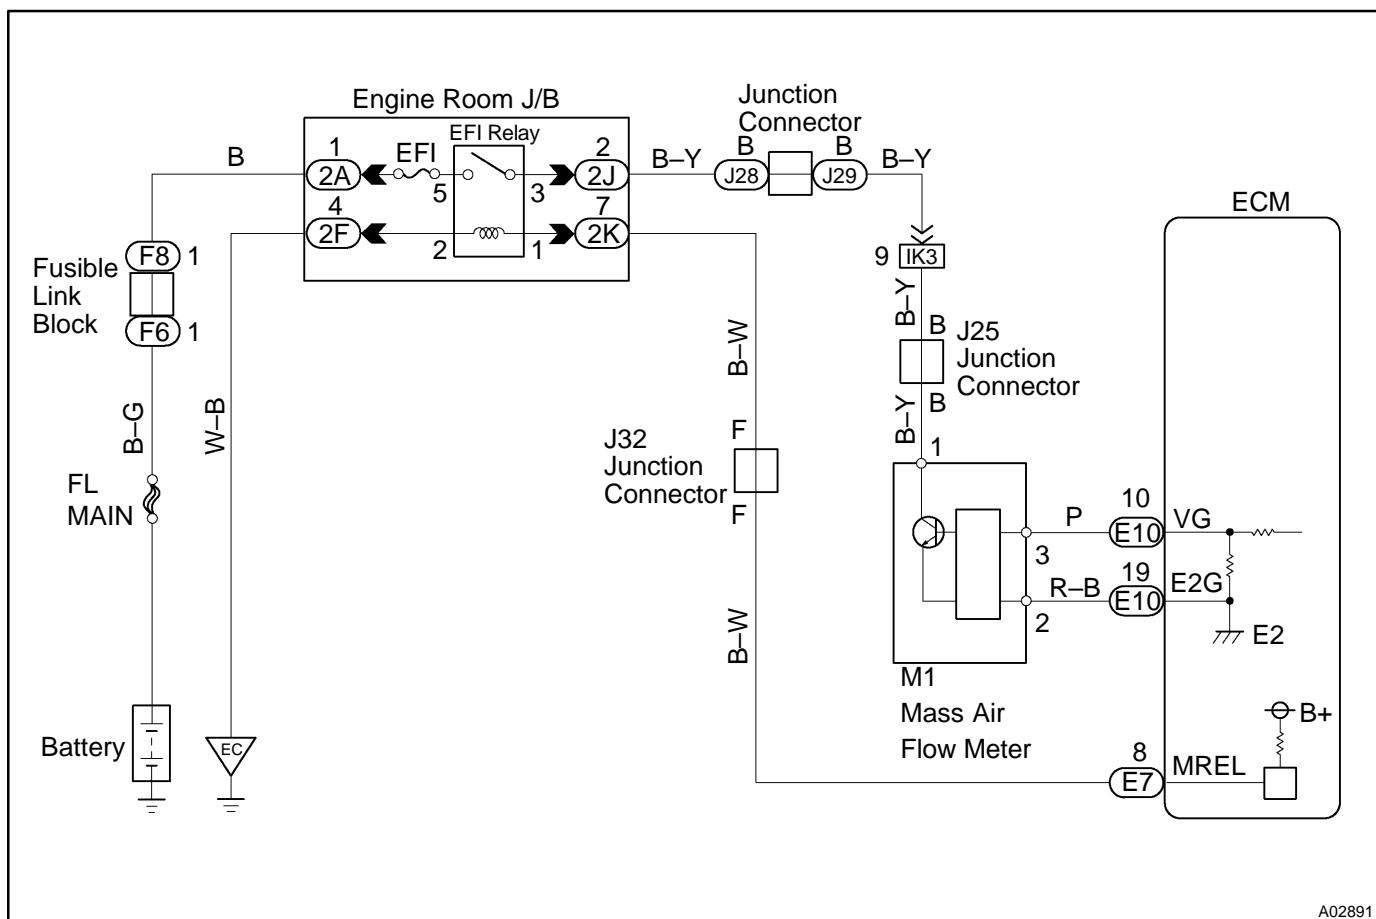
If the ECM detects DTC P0100 it operates the fail-safe function, keeping the ignition timing and injection volume constantly and making it possible to drive the vehicle.

#### HINT:

After confirming DTC P0100, use the OBD II scan tool or LEXUS hand-held tester to confirm the mass air flow ratio from the CURRENT DATA.

Mass Air Flow Value (gm/sec.)	Malfunction
0.0	<ul style="list-style-type: none"> <li>Mass air flow meter power source circuit open</li> <li>VG circuit open or short</li> </ul>
271.0 or more	<ul style="list-style-type: none"> <li>E2G circuit open</li> </ul>

## WIRING DIAGRAM



A02891

## **INSPECTION PROCEDURE**

**HINT:**

Read freeze frame data using LEXUS hand-held tester or OBD II scan tool, as freeze frame data records the engine conditions when the malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

- 1 Connect OBD II scan tool or LEXUS hand-held tester, and read value of mass air flow rate.

## PREPARATION-

- (a) Connect the OBD II scan tool or LEXUS hand-held tester to the DLC3.
- (b) Turn the ignition switch ON and push the OBD II scan tool or LEXUS hand-held tester main switch ON.
- (c) Start the engine.

**CHECK:**

Read the mass air flow rate on the OBD II scan tool or LEXUS hand-held tester.

## Read the **RESULT:**

	Type I	Type II
Mass Air Flow Rate (gm/sec.)	0.0	271.0 or more

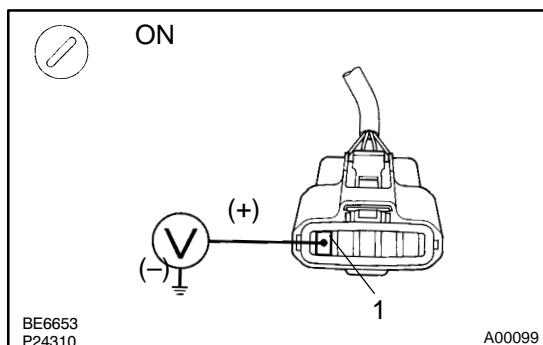


Type II

Go to step 5.

2

Check voltage of mass air flow meter power source.

**PREPARATION:**

- (a) Disconnect the mass air flow meter connector.
- (b) Turn the ignition switch ON.

**CHECK:**

Measure the voltage between terminal 1 of the mass air flow meter connector and the body ground.

**OK:**

**Voltage: 9 – 14 V**

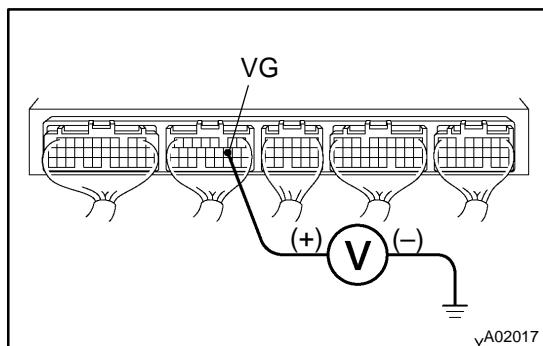


**Check for open in harness and connector between EFI main relay (Marking: EFI) and mass air flow meter (See page [IN-31](#)).**

OK

3

Check voltage between terminal VG of ECM connector and body ground.

**PREPARATION:**

- (a) Remove the glove compartment (See page [SF-79](#)).
- (b) Start the engine.

**CHECK:**

Measure the voltage between terminal VG of the ECM connector and the body ground while the engine is idling.

**OK:**

**Voltage:  
1.1 – 1.5 V (P or N position and A/C switch OFF)**



**Check and replace ECM (See page [IN-31](#)).**

NG

4

Check for open and short in harness and connector between mass air flow meter and ECM (See page [IN-31](#)).

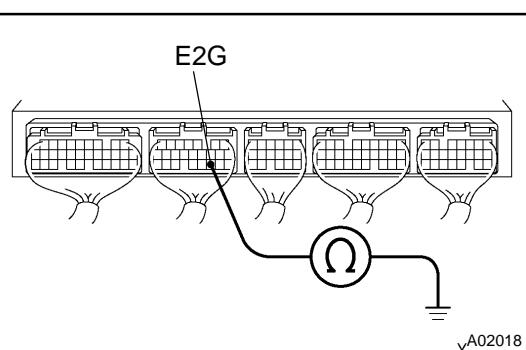
**Repair or replace harness or connector.**

OK

Replace mass air flow meter.

5 Check continuity between terminal E2G of ECM connector and body ground.

E2G

**PREPARATION:**Remove the glove compartment (See page [SF-79](#)).**CHECK:**

Check the continuity between terminal E2G of the ECM connector and the body ground.

**OK:**

Continuity (1 Ω or less)

NG

Check and replace ECM (See page [IN-31](#)).

OK

6 Check for open in harness and connector between mass air flow meter and ECM (See page [IN-31](#)).

NG

Repair or replace harness or connector.

OK

Replace mass air flow meter.