


	3. Communication line error (Open/Short etc.) 4. Invalid message from SMARTRA to PCM(ECM)	
Antenna coil fault	1. Antenna coil open/short circuit	P1691 (Antenna coil error)
Immobilizer indicator lamp fault	1. Immobilizer indicator lamp error (Cluster)	P1692 (Immobilizer lamp error)
Transponder key fault	1. Corrupted data from transponder 2. More than one transponder in the magnetic field (Antenna coil) 3. No transponder (Key without transponder) in the magnetic field (Antenna coil)	P1693 (Transponder no response error/invalid response)
PCM(ECM) fault	1. Request from PCM(ECM) is invalid (Protocol layer violation- Invalid request, check sum error etc.)	P1694 (PCM(ECM) message error)
PCM(ECM) internal permanent memory (EEPROM) fault	1. PCM(ECM) internal permanent memory (EEPROM) fault 2. Invalid write operation to permanent memory (EEPROM)	P1695 (PCM(ECM) memory error)
Invalid key fault	1. Virgin transponder at PCM(ECM) status "Learnt" Learnt (Invalid) Transponder at PCM (ECM) status "Learnt" (Authentication fail)	P1696 (Authentication fail)
Hi-Scan fault	1. Hi-Scan message error	P1697
Locked by timer	1. Exceeding the maximum limit of Twice IGN ON ( $\geq$ 32 times)	P1699 (Twice IG ON over trial)

## Body Electrical System > Button Engine Start System > Components and Components Location


### Component Location

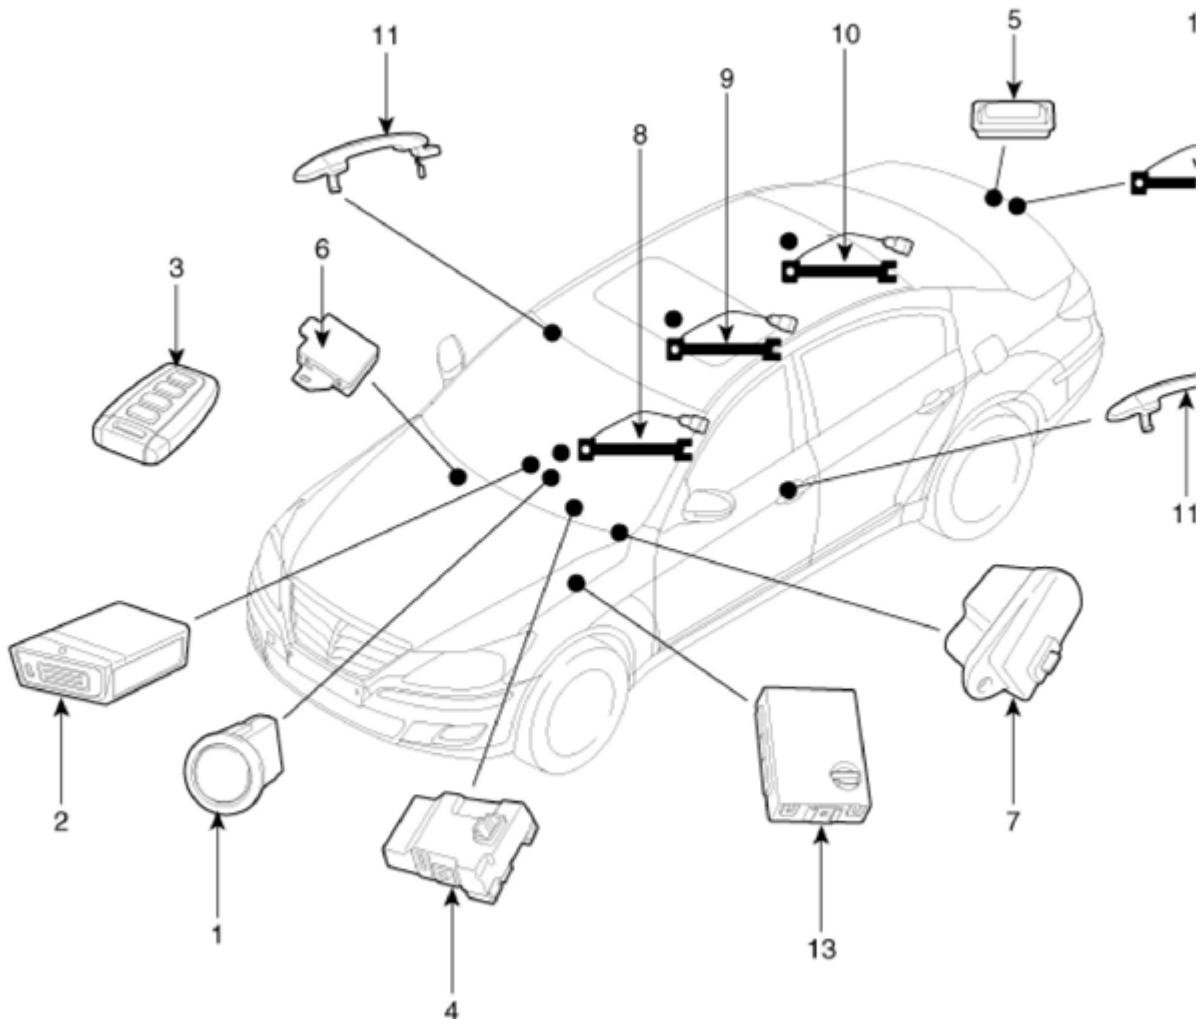

1. Start Stop Button(SSB)	8. Interior antenna 1
2. FOB key holder	9. Interior antenna 2
3. FOB key	10. Interior antenna 3
4. PDM(Power Distribution Module)	11. Door handle & door antenna
5. Trunk lid switch	12. Bumper antenna
6. RF receiver	
7. ESCL(Electrical Steering Column Lock)	13. IPM(Instrument Panel Module)

## Body Electrical System > Button Engine Start System > Schematic Diagrams

Circuit Diagram

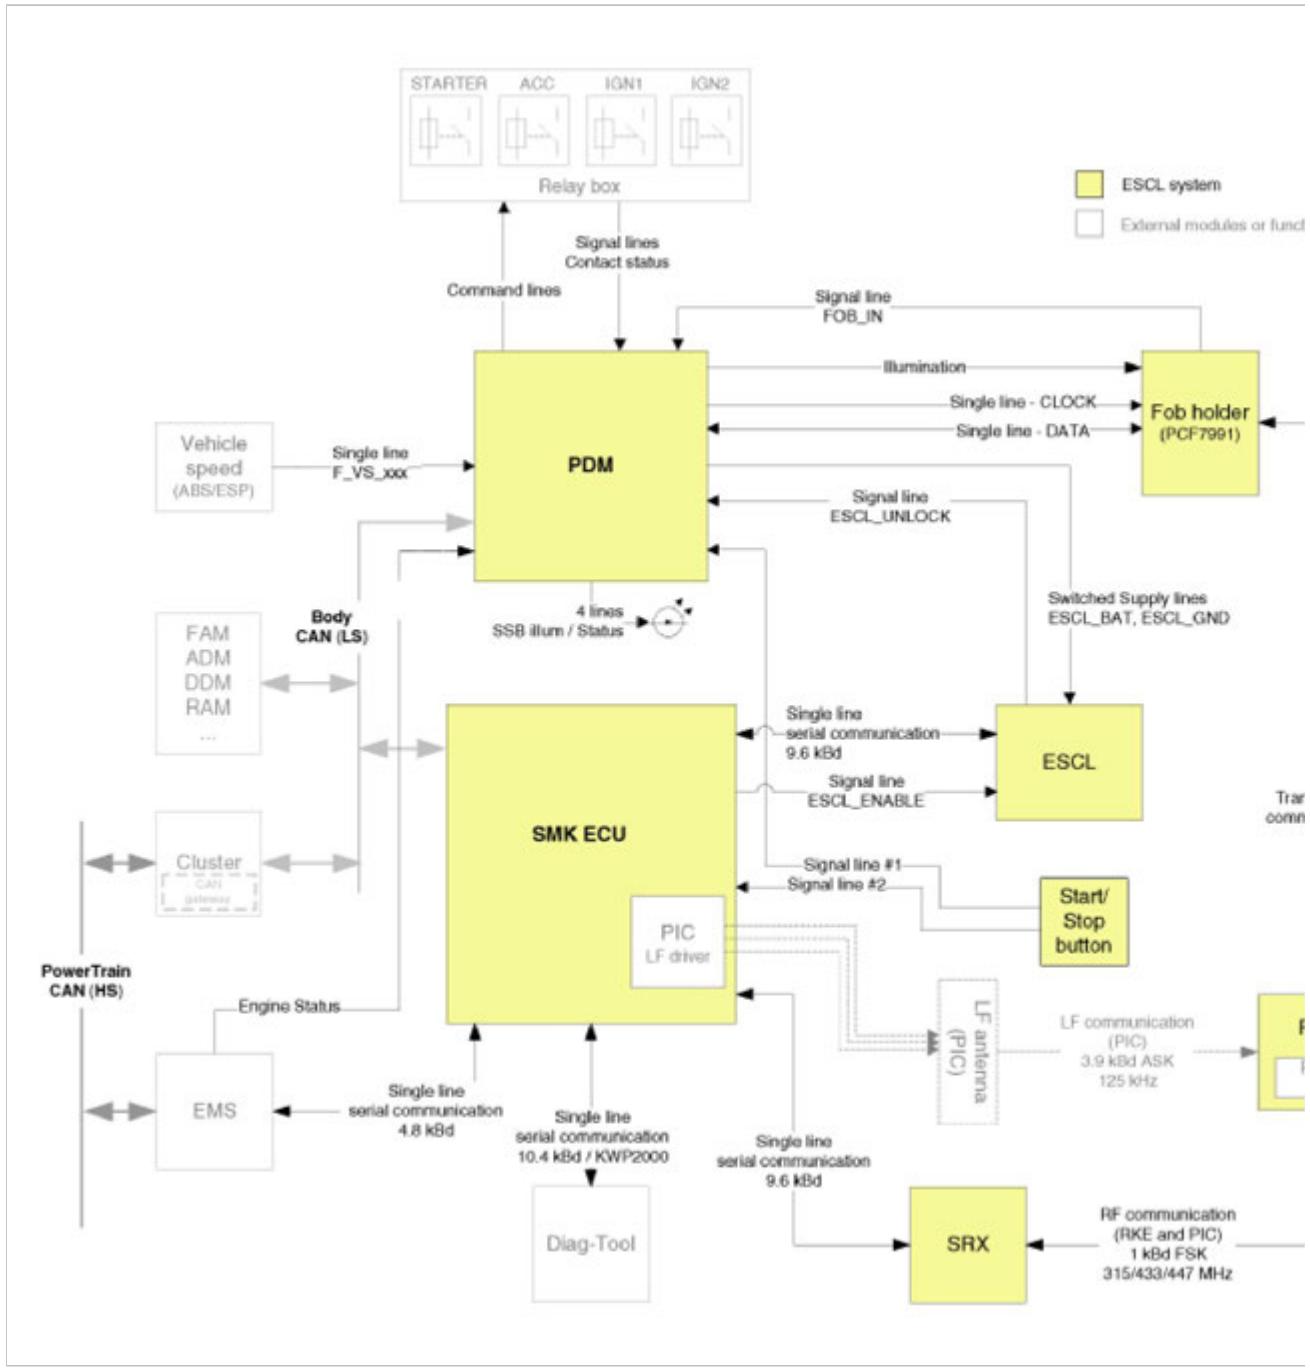

## Body Electrical System > Button Engine Start System > Description and Operation

### Description

#### System Overview

The System offers the following features:

- Human machine interface through a 1-stage button, for terminal switching and engine start.
- Control of external relays for ACC / IGN1 / IGN2 terminal switching and STARTER, without use of mechanical ignition switch.
- Steering column locking with an ESCL device; Monitoring of the vehicle status to insure safe activation of the ESCL.
- Indication of vehicle status through LED or explicit messages on display.
- Immobilizer function by LF transponder communication between fob and fob holder.
- Redundant architecture for high system dependability .

- Interface with Low Speed CAN vehicle communication network.
- Interface with LIN vehicle communication network depending on platform .

The RKE and SMART KEY functions are not considered part of this Button Engine Start system and are specified in separated system.

## System Main Function

- Steering column locking/unlocking with ESCL.
- Switching of ACC / IGN1 / IGN2 terminals.
- Control of the STARTER relay BAT line (high side) based on communication with EMS ECU.
- Management of the Immobilizer function.
- Management of BES warning function.

## Button Engine Start System

The Button Start System allows the driver to operate the vehicle by simply pressing a button (called as SSB) instead of using a standard mechanical key. It also manages the locking and the unlocking of the steering column (called as ESCL) without any specific actions by the driver.

If the driver press the SSB while prerequisites on brakes, fob authentication and transmission status are satisfied, the BES System will proceed with the locking/unlocking of the steering column, the control of the terminal, and the cranking of the engine.


The driver can release the SSB as soon as this sequence initiated. After positive response from immobilizer interrogation, the system will activate the starter motor and communicate with the EMS to check the engine running status for starter release.

The driver will be able to stop the engine by a short push on the SSB if the vehicle is already in standstill.

Emergency engine stop will be possible by a long press of the SSB or 3 consecutive presses in case the vehicle is in ENGINE RUNNING.

If the conditions for engine cranking are not satisfied while a push on the SSB is detected and a valid fob authenticated, the system will unlock the steering column and switch the terminals to IGN. Another push on the SSB will be necessary to start the engine.

In case of a vehicle equipped with SMART KEY system, fob authentication will not require any action from the driver. For limp home start or in case of vehicle without SMART KEY, the driver will have to insert the fob into the fob holder.

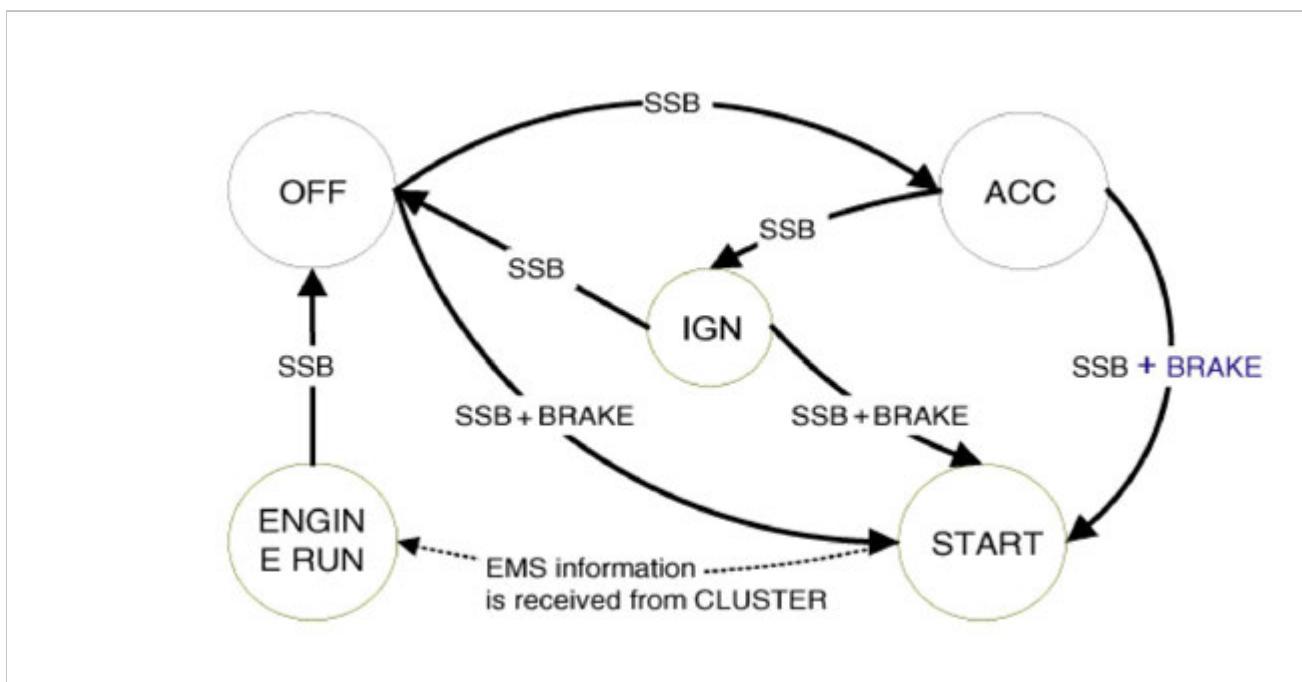

- Control Ignition and engine ON/OFF by Sending signal to IPM and PDM.
- Display status by LED Lamp ON/OFF. (Amber or Blue)

### Indicator ON/OFF Condition At Ignition Key Off Condition


No.	Character lamp	Conditions

1	Indicator Lamp ON	Door open, Tail lamp ON, ACC, IG ON
2	Indicator Lamp 30sec ON → Lamp OFF	Door close, Tail lamp OFF, IG OFF
3	Indicator Lamp OFF	Remote LOCK, Passive LOCK
4	Rheostat at tail lamp ON (Illumination lamp)	

#### Indicator ON/OFF Condition According To Ignition Key's Position

No.	Ignition conditions	Start Button LED status
1	IG OFF	LED OFF
2	IG ACC	Amber color LED ON
3	IG ON (Engine OFF)	Blue color LED ON
4	Cranking	Maintain LED status before cranking
5	Engine running	LED OFF

#### The shift of Ignition Position

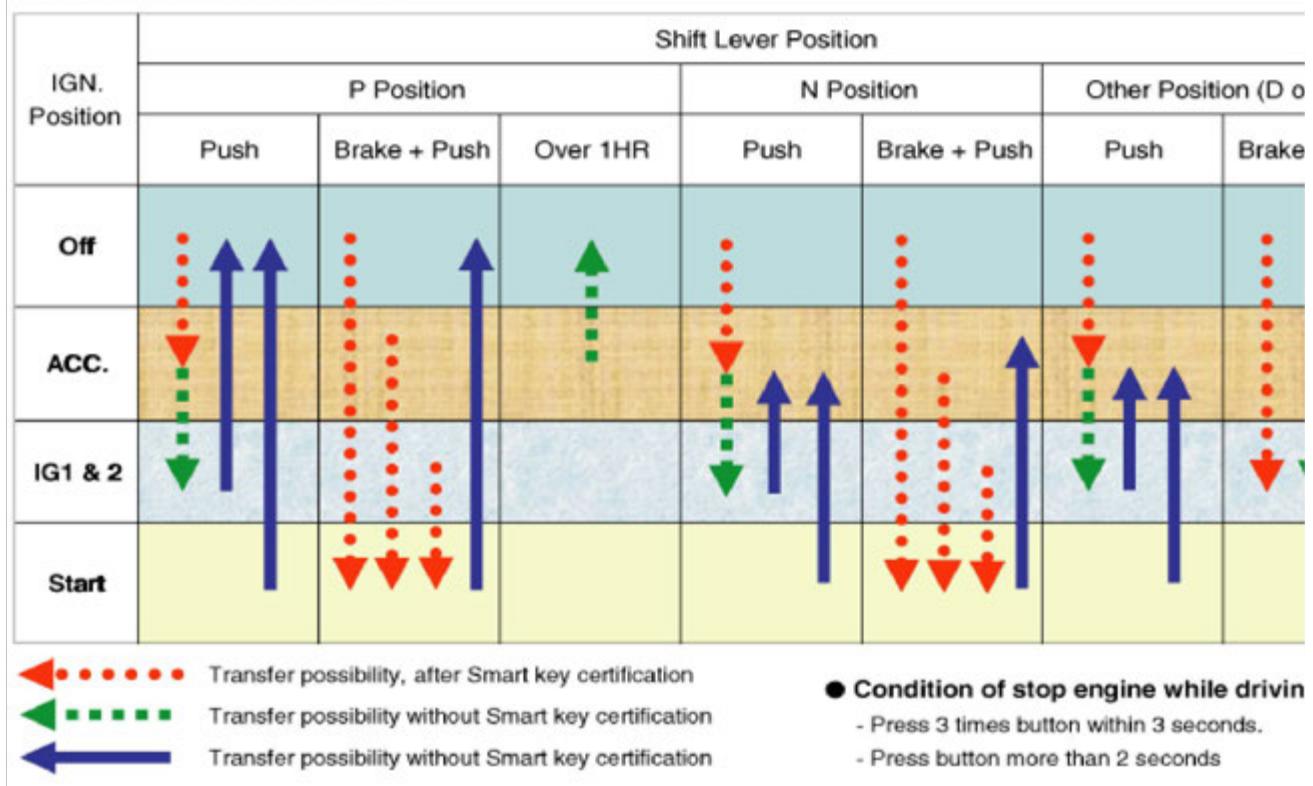

#### Wireless Communication

Electromagnetic waves are used to exchange information between the vehicle and the FOB. Two types of RKE Key can supplement the BES system:

- Non-smart key RKE
- SMART KEY FOB

Currently the BES system comprises with SMART KEY FOB always.


The transmitter, receiver and antennas required for the communication between the fob and the vehicle will differ depending on functionalities and regional areas.

The RKE and SMART KEY functions are in separated documents. Refer to Smart key system for more detailed information about SMART KEY function.

#### Smart Key

The SMK manages all function related to:

- "Start Stop Button (SSB) monitoring",
- "Immobilizer communication" (with Engine Management System unit for immobilizer release),
- "ESCL control",
- "Authentication server" (Validity of Transponder and in case of Smart Key option Passive Fob authentication ),
- "System consistency monitoring",
- "System diagnosis",
- Control of display message / warning buzzer .

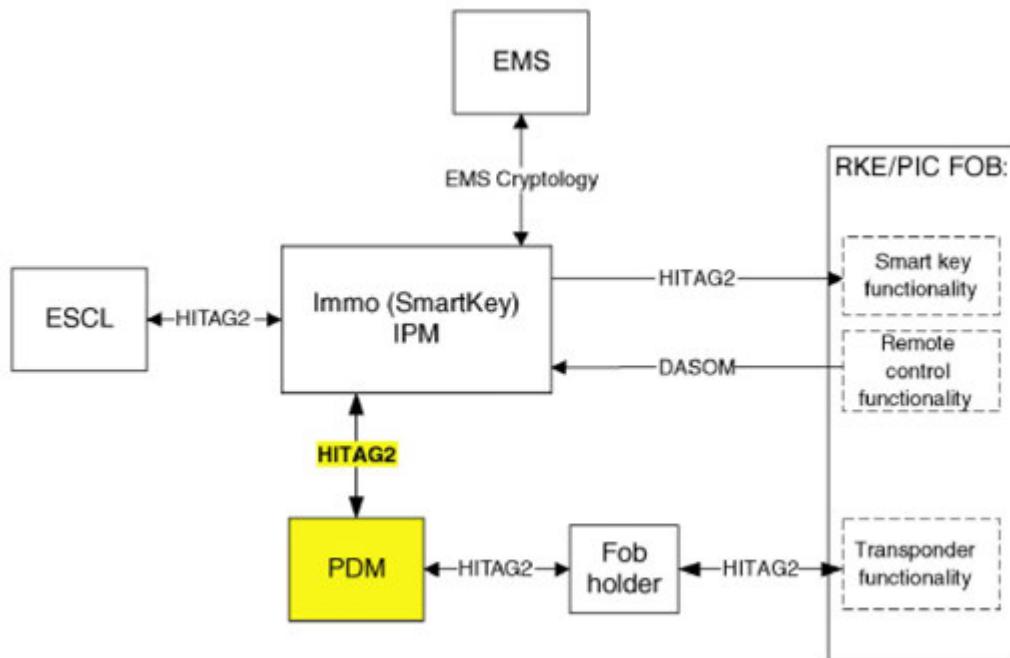


The unit behaves as Master role in the whole system.

In case of SMART KEY application, for example "Passive Access" , "Passive Locking" and "Passive Authorization are integrated for ESCL/Terminal switching Operations" .

It collects information about vehicle status from other modules (vehicle speed, alarm status, driver door open...), reads the inputs (e.g. SSB, Lock Button, PARK position Switch), controls the outputs (e.g. exterior and interior antennas), and communicates with others devices via the CAN network as well as a single line interfaces.

The diagnosis and learning of the components of the BES System are also handled by the SMK.

## PDM

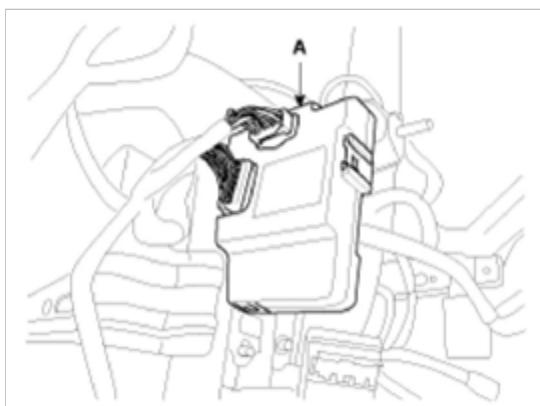

The PDM (A) manages the functions related to the "terminal control" by activating external relays for ACC, IGN1 and IGN2. This unit is also responsible for the control of the STARTER relay.

It controls also the power supply of the ESCL by switching the power and ground ESCL supply lines depending on vehicle status. The purpose of this function is to prevent the ESCL to be energized if ACC or IGN are switched on.

The PDM is also controlling the illumination of the SSB as well as the "system status indicator", which consists of 2 LEDs of different color. The illumination of the fob holder is also managed by the PDM.

The PDM reads the inputs (Engine fob\_in, vehicle speed, relays contact status, ESCL lock status), controls the outputs (Engine relay output drivers, ESCL power), and communicates with others devices via the CAN.

The internal architecture of the PDM is defined in a way that the control of the terminal and of the ESCL power is secured even in case of failure of one of the two microcontrollers, system inconsistency or interruption of communication on the CAN network.


In case, failure of one of the two controllers, the remaining controller shall disable the starter relay and the ESCL power supply. The IGN1 and IGN2 terminals relays shall be maintained in the state memorized before the failure and the driver shall be able to switch those IGN terminals off by pressing the SSB with EMERGENCY\_STOP pressing sequence. However, engine restart will not be allowed. The state of the ACC relay will depend on the type of failure.

The PDM is diagnosed through theSMK MUT service, using the CAN network.

The main functions of the PDM are:

- Control of Terminal relays
- Monitoring of the Vehicle speed received from sensor or ABS/ESP ECU.
- Control of SSB LEDs (illumination, clamp state) and FOB HOLDER illumination.
- Control of ESCL power lines and monitoring of the ESCL unlock status
- Control of the base station located in fob holder through direct serial interface.
- System consistency monitoring to diagnose SMK failure and to switch to relevant limp home mode.
- Providing vehicle speed information

## Fob Holder

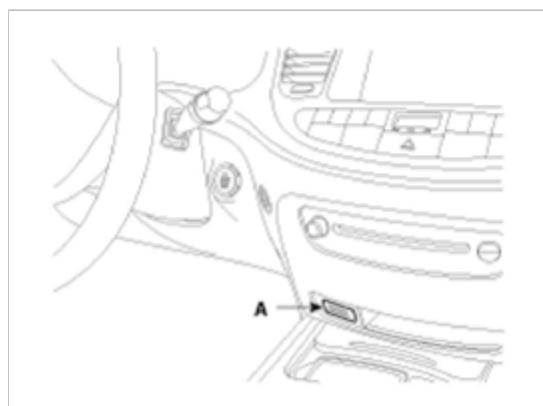

This unit is used for transponder authentication. In case of a vehicle equipped with Smart key, this transponder authentication is necessary in case of failure of the passive fob authentication (Engine loss of RF or LF link with the fob).

The Fob holder module integrates a slot where to insert the fob. The fob is maintained in position with a push-push mechanical locking (not electrically driven) and a signal (FOB\_IN) is sent back to the PDM as soon as its insertion is detected.

The power supply of the fob holder is active only if a communication is initiated by the PDM.


The insertion of the fob into the holder and the communication with the transponder should be possible regardless of the insertion direction of fob to the holder (buttons facing up or bottom).

A lighting device is also integrated for illumination of the Fob Holder and it is driven directly by the PDM,

The main functions of the Fob holder are:

- Transponder base station
- Fob mechanical lock
- Illumination

## Transponder

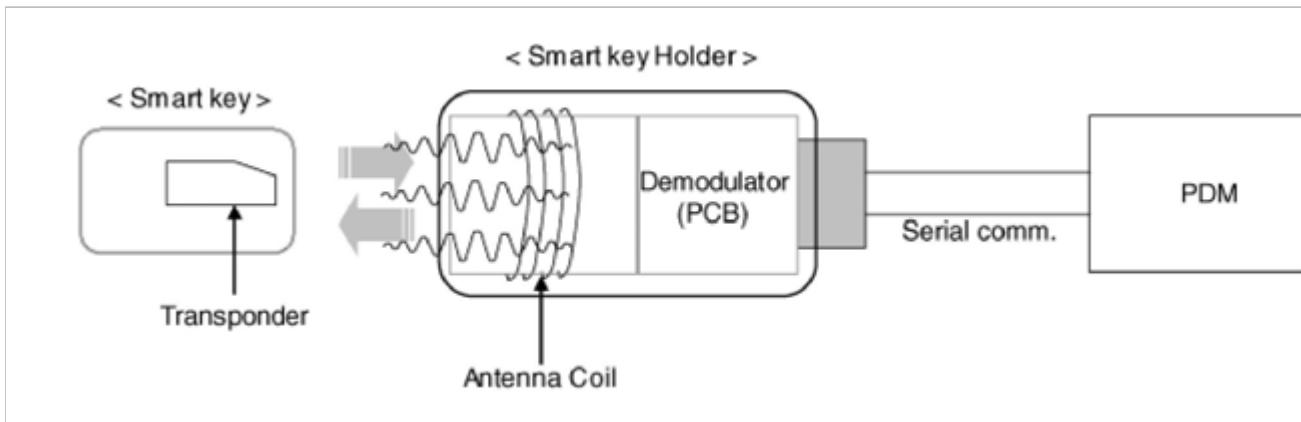

### External Receiver(SRX)



The data transmitted by the RKE or Smart key Fob is received by an external RF receiver called as SRX. This receiver will be same as that one for the SMK applications, with respect to electronics, housing, connector and software.

This receiver is connected to the SMK via a serial communication line.

### Terminal And Starter Relays

Relays will be used to switch the terminals ACC / IGN1 / IGN2. Those normally-open relays will be driven by the PDM and located either in the passenger or engine compartment depending on the vehicle architecture.

Only one relay coil is connected to the terminal outputs of the PDM.

Those relays should integrate a resistor connected in parallel to the coil in order to reduce the transients during commutation.


### Start/Stop Button(SSB)

A single stage push button is used for the driver to operate the vehicle. Pressing this button allows:

- To activate the power modes 'Off', 'Accessory', 'Ignition' and 'Start' by switching the corresponding terminals
- To start the engine
- To stop the engine

The contact will be insured by a micro-switch and a backlighting is provided to highlight the marking of the button whenever necessary.


Two (2) LED colors are located in the center of the button to display of the status of the system. Another illumination LED is also integrated into the SSB for the lighting of the "Engine Start/Stop" characters.

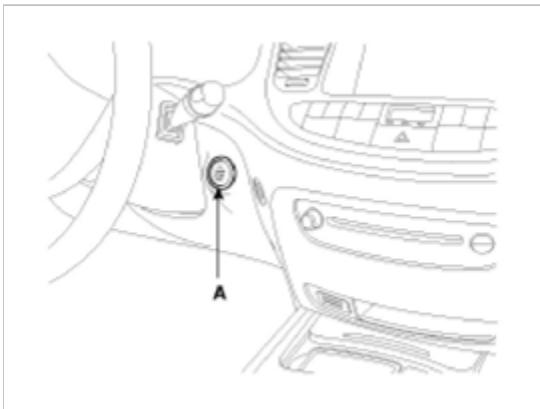

## Electronic Steering Column Lock (ESCL)

The ESCL(A) is needed to lock the steering column in order to prevent unauthorized usage of the vehicle. In order to achieve the required safety integrity level, the ESCL is controlled and monitored by 2 independent units, the SMK and the PDM. Such redundant architecture guarantees that the ESCL motor is supplied only during locking/unlocking operation and that it is disconnected from the battery and ground lines otherwise to avoid unexpected operation while the vehicle is in motion.

Data are exchanged between the ESCL and SMK through an encrypted serial communication interface.

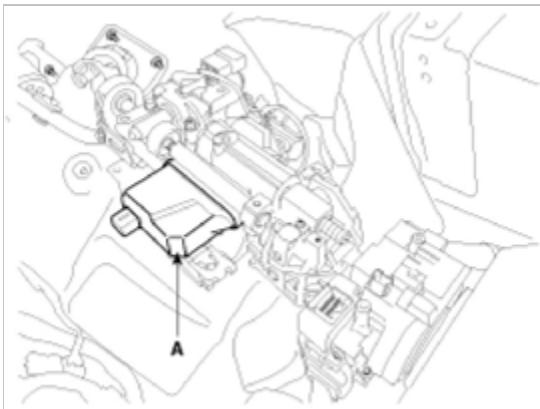

## BES System State Chart

### System STATES in LEARNED MODE

In learned mode, the BES System can be set in 6 different states, depending on the status of the terminals, ESCL and Engine status:

System State	Terminal Status	ESCL Status	Engine status
1. OFF - Locked	OFF	Locked	Stopped
2. OFF - Unlocked	OFF	Unlocked	Stopped
3. ACC	ACC	Unlocked	Stopped
4. IGN	IGN1, IGN2, ACC	Unlocked	Stopped
5. Start	IGN1, Start	Unlocked	Cranking
6. IGN - Engine	IGN1, IGN2, ACC	Unlocked	Running (means "self-running")

Referring to the terminals, the system states described in the table above are same as those one found in a system based on a mechanical ignition switch. The one of distinction with Mechanical-Ignition-Switch based system is that the BES system allows specific transition from [OFF] to [START] without going through [ACC] and [IGN] states.

### System STATES IN VIRGIN MODE

The BES System can be set in 5 different states (OFF LOCKED is not available in virgin mode), depending on


the status of the terminals, ESCL and Engine status:


System State	Terminal Status	ESCL Status	Engine status
1. OFF - UNLOCKED	OFF	Unlocked	Stopped
2. ACC	ACC	Unlocked	Stopped
3. IGN	IGN1, IGN2, ACC	Unlocked	Stopped
4. Start	IGN1, START with special pattern of activation see Chap 6.2.1 for details	Unlocked	Cranking
5. IGN - Engine	IGN1, IGN2, ACC	Unlocked	Running (means "self-running")

Referring to the terminals, the system states described in the table above are same as those one found in a system based on a mechanical ignition switch. The one of distinction with Mechanical-Ignition-Switch based system is that the BES system allows specific transition from [OFF] to [START] without going through [ACC] and [IGN] states.

## **Body Electrical System > Button Engine Start System > Start/Stop Button > Components and Components Location**

### **Component**

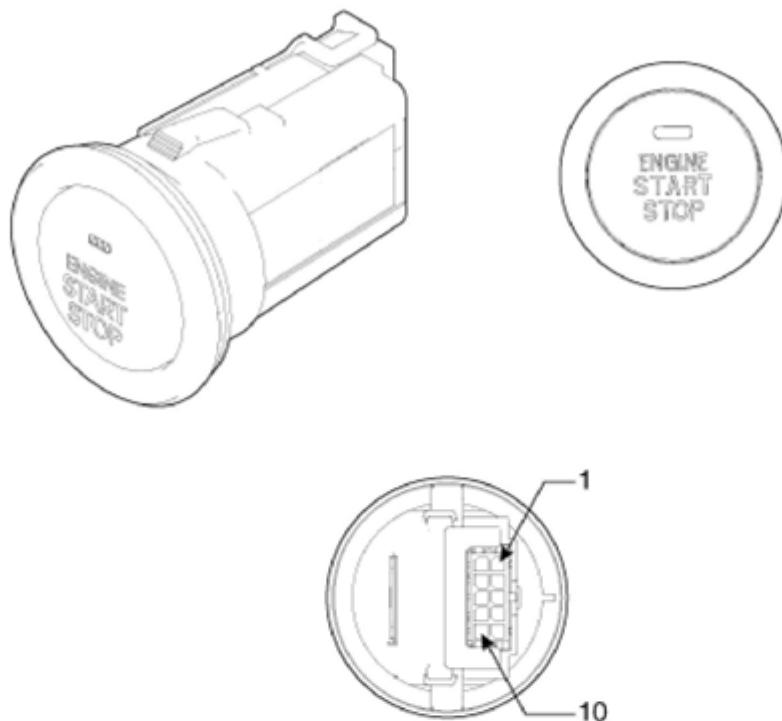

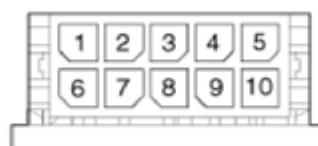Connector (10 pins)			
Pin No.	Description	Pin No.	Description
1	Start/Stop button switch1(PDM)	6	Battery
2	Battery illumination	7	Start/Stop button switch2(IPM)
3	Start/Stop button LED Amber(PDM)	8	Start/Stop button LED Blue(PDM)
4	Start/Stop button illum. GND(PDM)	9	Rheostat
5	Start/Stop button illum. power	10	-


## Body Electrical System > Button Engine Start System > Start/Stop Button > Repair procedures

### Removal

1. Disconnect the negative(-) battery terminal.
2. Remove the crash pad lower panel(A). (Refer to Body group-"Crash pad")



3. Remove the start/stop button (A) after loosening a mounting screw and connector.

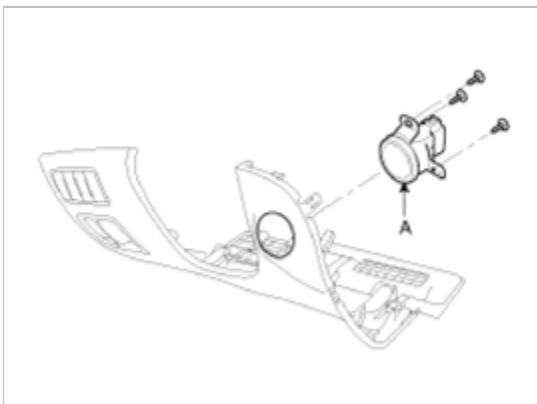


### Installation

1. Install the connector.
2. Install the start/stop button.
3. Install the crash pad lower panel.

## Body Electrical System > Button Engine Start System > Fob Holder > Components and Components Location

### Component

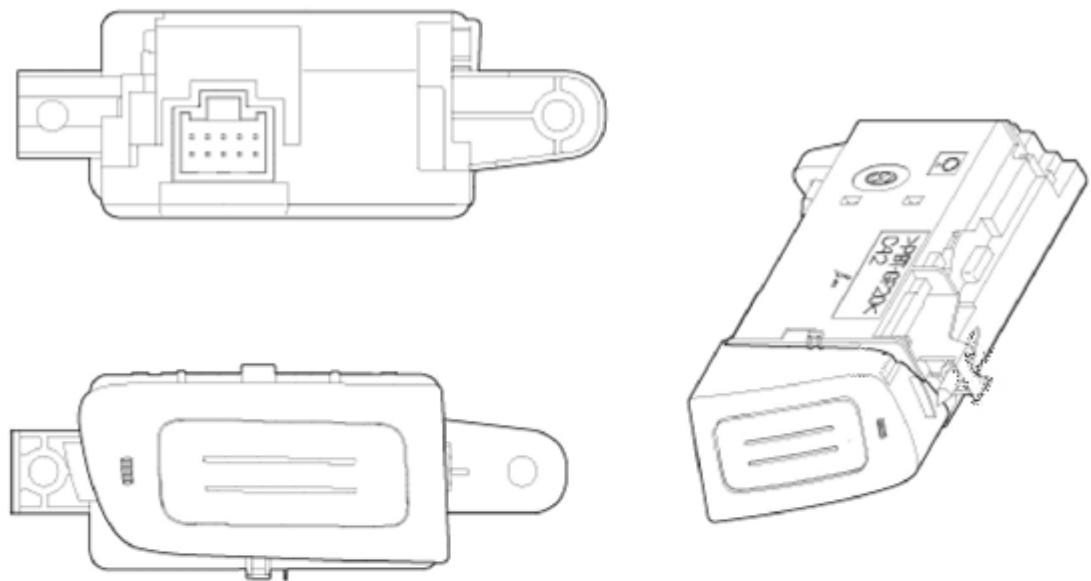


Connector (10 pins)			
Pin No.	Description	Pin No.	Description
1	-	6	Battery
2	Immobilizer clock	7	Immobilizer data
3	Holder illumination(PDM)	8	Illumination battery
4	-	9	Fob in (PDM)
5	GND	10	-


## Body Electrical System > Button Engine Start System > Fob Holder > Repair procedures

### Removal

1. Disconnect the negative(-) battery terminal.
2. Remove the crash pad lower panel(A). (Refer to Body group-"Crash pad")

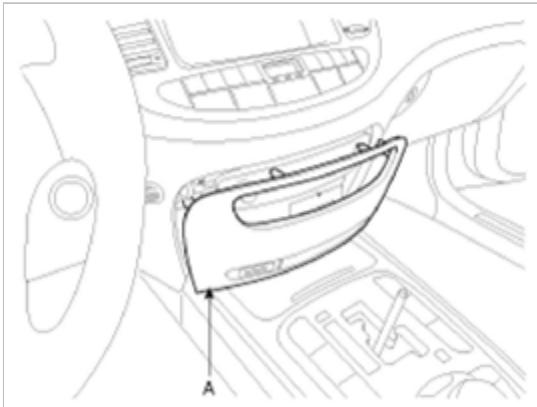

3. Remove the connector (A).

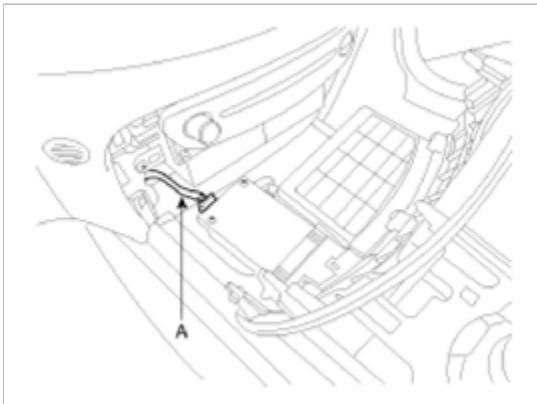

4. Remove the Fob holder assembly(A) after loosening the mounting screw.




## Installation

1. Install the fob holder assembly.
2. Install the crash pad lower panel.

**Body Electrical System > Button Engine Start System > ESCL (Electronic Steering Column Lock) > Components and Components Location**

## Component

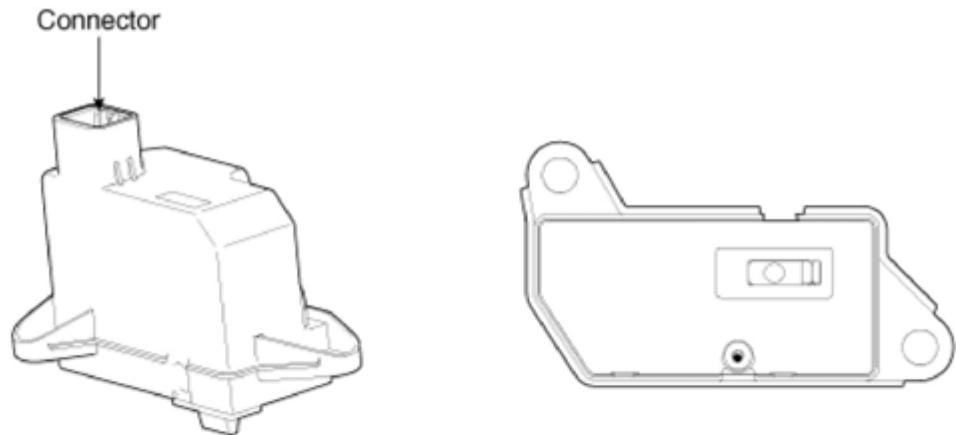


  
**Connector (6 pins)**

Pin No.	Description
1	-
2	Ground
3	Power(12V)
4	ESCL-Enable (Lock)
5	ESCL- Unlock
6	Data line


## Body Electrical System > Button Engine Start System > ESCL (Electronic Steering Column Lock) > Repair procedures

### Removal


1. Disconnect the negative(-) battery terminal.
2. Remove the crash pad lower panel(A). (Refer to Body group-"Crash pad")



3. Disconnect the electronic steering column lock connector(A).

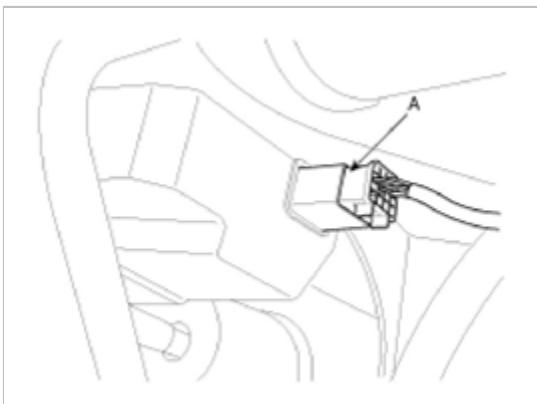

4. Remove the electronic steering column lock(A). (Refer to Steering system - "Steering column and shaft")

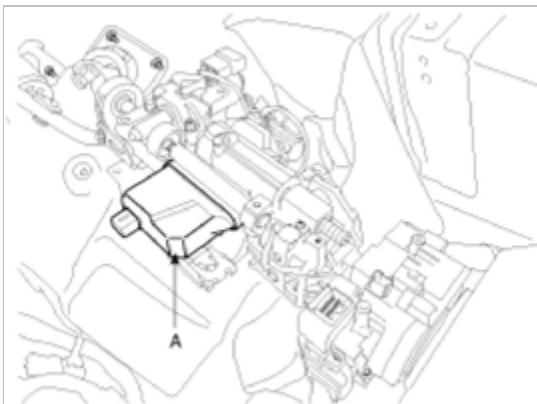




## Installation

1. Install the electronic steering column lock.
2. Install the crash pad lower panel.

**Body Electrical System > Button Engine Start System > PDM (Power Distribution Module) > Components and Components Location**


## Component

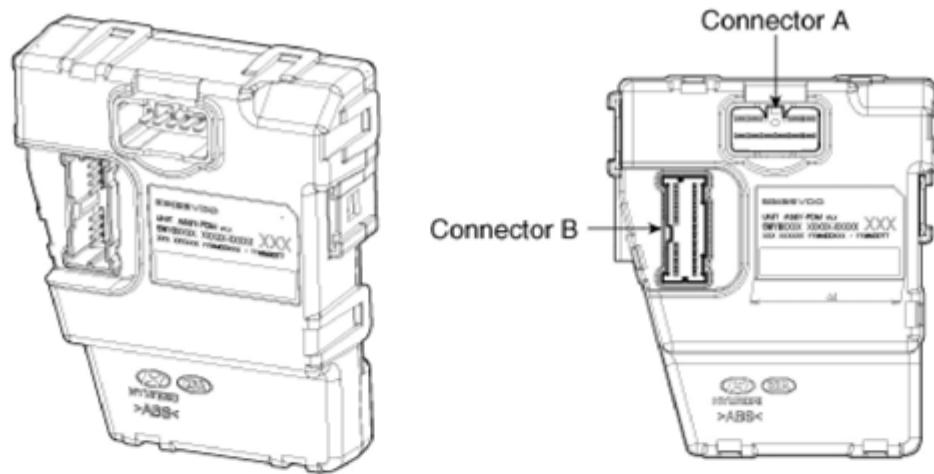

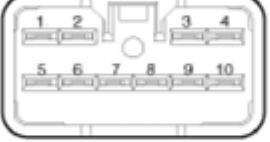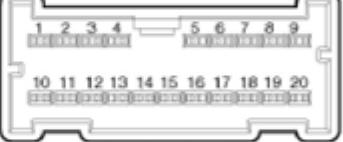		
Pin No.	Connector A (10 pin)	Connector B (20 pin)
1	Power ground 1	IGN2
2	Power ground 2	Immobilizer clock
3	-	Immobilizer data
4	ESCL battery	ACC
5	ESCL ground	-
6	Starter relay	SSB switch1
7	IGN1 relay	SSB illumination ground
8	IGN2 relay	SSB LED blue
9	ACC relay	IGN1
10	Battery load	CAN L
11		CAN H
12		Fob in
13		ESCL unlock
14		Vehicle speed/ ABS
15		Start Feed back
16		RPM data (EMS)
17		SSB LED amber
18		SSB illumination power
19		Holder illumination
20		CPU battery

## Body Electrical System > Button Engine Start System > PDM (Power Distribution Module) > Schematic Diagrams

System circuit diagram

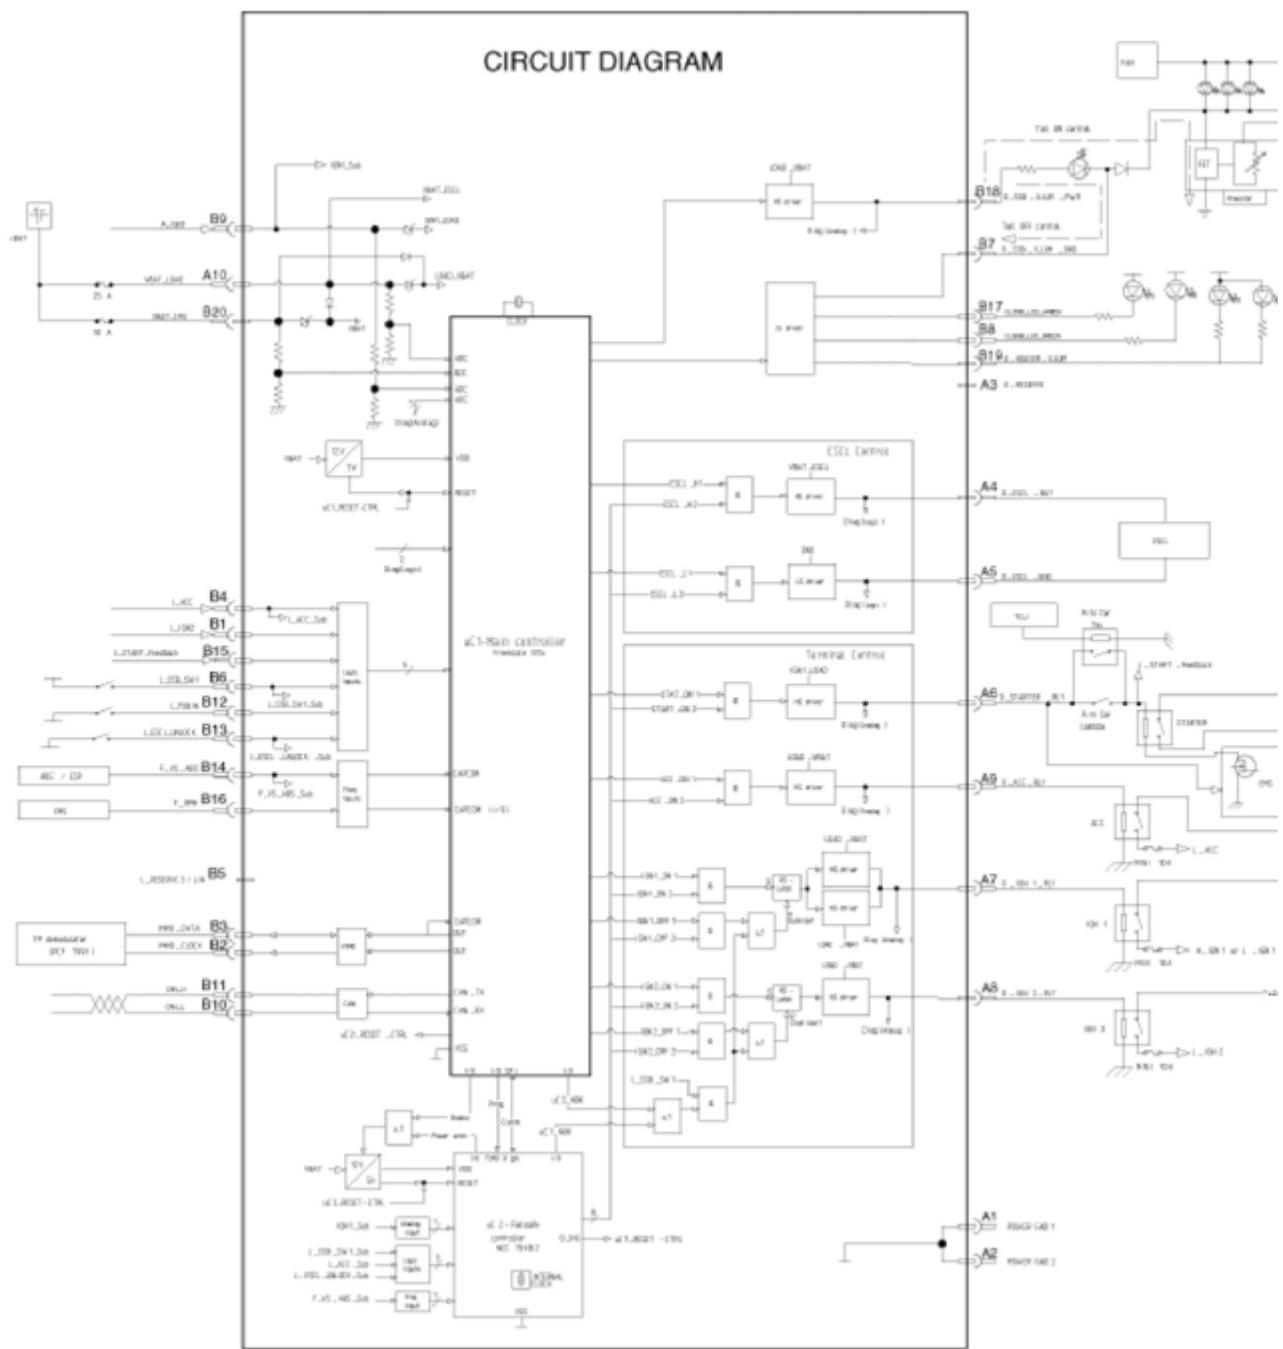

## **Body Electrical System > Button Engine Start System > PDM (Power Distribution Module) > Repair procedures**

## Removal


1. Disconnect the negative(-) battery terminal.
2. Remove the crash pad lower panel(A). (Refer to Body group-"Crash pad")



3. Remove the reinforcing panel (A).



4. Remove the power distribution module(A) after loosening a bolt and nut.

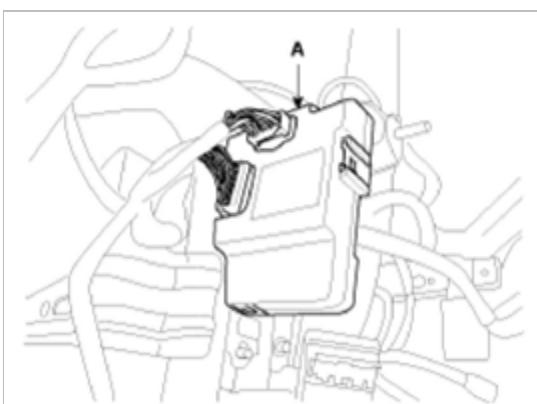

## Installation

1. Install the power distribution module.
2. Install the crash pad lower panel.

## Inspection

### PDM Diagnosis With Scan Tool

1. It will be able to diagnose defects of Smart key with scan tool quickly. Scan tool can operates actuator forcefully, input/output value monitoring and self diagnosis.
2. Select model and "Body control module" menu if you want to check PDM.

1. HYUNDAI VEHICLE DIAGNOSIS ▾
MODEL : GENESIS
84. SRS-AIRBAG
85. FULL AUTO AIR/CON.
86. ELEC. POWER STEERING
87. ELEC. CONTROL SUSPENSION
88. ELEC. PARKING BRAKE
89. AUTO HEAD LEVELING
10. SMART CRUISE CONTROL
<b>11. BODY CONTROL MODULE</b>

3. Select "PDM" in the manu.

1. HYUNDAI VEHICLE DIAGNOSIS ▾
MODEL : GENESIS
SYSTEM : BODY CONTROL MODULE
86. CLUC(CLUSTER)
87. MFSW(MULTIFUNCTION SW)
88. PSM(POWER SEAT)
89. SCM(TILT & TELE)
10. FBWS(FRONT&BACK WARNING)
11. PTM(POWER TRUNK)
12. ECW(ELEC. CONTROL WIPER)
<b>13. PDM(POWER DISTRIBUTION)</b>

4. Select Input/output monitoring", if you want to check current data of PDM. It provides the input/output status of each module.

1. HYUNDAI VEHICLE DIAGNOSIS
MODEL : GENESIS
SYSTEM : BODY CONTROL MODULE
PDM(POWER DISTRIBUTION)
81. DIAGNOSTIC TROUBLE CODES
<b>82. INPUT/OUTPUT MONITORING</b>
83. FLIGHT RECORD
84. ACTUATION TEST
85. SIMU-SCAN
86. ESCL OPEN STATE CHECK
87. IDENTIFICATION CHECK
88. DATA SETUP(UNIT CONV.)

. INPUT/OUTPUT MONITORING
81. POWER
<b>82. INPUT/OUTPUT</b>

1.11 CURRENT DATA 09/34	
IGM2 RELAY L INPUT	3648OFF
FOB IN SWITCH	3649RELEASE
START RELAY L INPUT	3650OFF
<b>SSB EMBER LED OUTPUT</b>	<b>3651OFF</b>
SSB BLUE LED OUTPUT	3652OFF
FOB HOLDER ILLUMINAT	3653OFF
SSB ILLUMINATION OUT	3654OFF
ACC RELAY S1 OUTPUT	3655OFF

FIX SCRN FULL PART GRPH HELP

5. If you want to check PDM data operation forcefully, select "Actuation test".

1. HYUNDAI VEHICLE DIAGNOSIS	
MODEL :	GENESIS
SYSTEM :	BODY CONTROL MODULE
	PDM(POWER DISTRIBUTION)
81.	DIAGNOSTIC TROUBLE CODES
82.	INPUT/OUTPUT MONITORING
83.	FLIGHT RECORD
<b>84.</b>	<b>ACTUATION TEST</b>
85.	SIMU-SCAN
86.	ESCL OPEN STATE CHECK
87.	IDENTIFICATION CHECK
88.	DATA SETUP(UNIT CONV.)

1.4 ACTUATION TEST 01/08	
<b>SSB EMBER LED</b>	
DURATION	5 TIMES
METHOD	ACTIVATION
CONDITION	IG. KEY ON OR OFF ENGINE OFF
PRESS [STRT], IF YOU ARE READY !	
SELECT TEST ITEM USING UP/DOWN KEY	
<b>STRT</b>	

#### Input/output Current Data

NO	Description	Unit
1	Load Battery Voltage	V
2	Abs Speed Sensor(main)	Km/h
3	Start Stop Button SW	OFF/ON
4	ACC input	OFF/ON
5	IGN1 Input	OFF/ON
6	IGN2 Input	OFF/ON
7	Fob In Switch	RELEASE/INSERT
8	Start Relay Monitoring Input	
9	SSB Ember LED Output	OFF/ON
10	SSB Blue LED Output	OFF/ON
11	Fob Holder Illumination Output	OFF/ON