

SECTION BCS

BODY CONTROL SYSTEM

CONTENTS

BASIC INSPECTION	3	COMMON ITEM	18
INSPECTION AND ADJUSTMENT	3	COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)	18
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM)	3	DOOR LOCK	19
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Description	3	DOOR LOCK : CONSULT-III Function (BCM - DOOR LOCK)	19
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Work Procedure	3	REAR WINDOW DEFOGGER	20
CONFIGURATION (BCM)	3	REAR WINDOW DEFOGGER : CONSULT-III Function (BCM - REAR DEFOGGER)	21
CONFIGURATION (BCM) : Description	4	BUZZER	21
CONFIGURATION (BCM) : Work Procedure	4	BUZZER : CONSULT-III Function (BCM - BUZZER)	21
CONFIGURATION (BCM) : Configuration list	5	INT LAMP	21
TRANSIT MODE CANCEL OPERATION	7	INT LAMP : CONSULT-III Function (BCM - INT LAMP)	22
Description	7	HEADLAMP	23
Work Procedure	7	HEADLAMP : CONSULT-III Function (BCM - HEAD LAMP)	23
SYSTEM DESCRIPTION	8	WIPER	25
BODY CONTROL SYSTEM	8	WIPER : CONSULT-III Function (BCM - WIPER)	25
System Description	8	FLASHER	26
Component Parts Location	9	FLASHER : CONSULT-III Function (BCM - FLASHER)	26
COMBINATION SWITCH READING SYSTEM	10	INTELLIGENT KEY	27
System Diagram	10	INTELLIGENT KEY : CONSULT-III Function (BCM - INTELLIGENT KEY)	27
System Description	10	COMB SW	31
SIGNAL BUFFER SYSTEM	14	COMB SW : CONSULT-III Function (BCM - COMB SW)	31
System Diagram	14	BCM	31
System Description	14	BCM : CONSULT-III Function (BCM - BCM)	32
POWER CONSUMPTION CONTROL SYSTEM	15	IMMU	32
System Diagram	15	IMMU : CONSULT-III Function (BCM - IMMU)	32
System Description	15		
Component Parts Location	17		
DIAGNOSIS SYSTEM (BCM)	18		

A
B
C
D
EF
G
H
I
J

BCS

N
O
P

BATTERY SAVER	32	POWER SUPPLY AND GROUND CIRCUIT	42
BATTERY SAVER : CONSULT-III Function (BCM - BATTERY SAVER)	32	Diagnosis Procedure	42
TRUNK	33	COMBINATION SWITCH INPUT CIRCUIT	43
TRUNK : CONSULT-III Function (BCM - TRUNK)..	33	Diagnosis Procedure	43
THEFT ALM	34	COMBINATION SWITCH OUTPUT CIRCUIT ...	45
THEFT ALM : CONSULT-III Function (BCM - THEFT)	34	Diagnosis Procedure	45
RETAININD PWR	35	ECU DIAGNOSIS INFORMATION	47
RETAININD PWR : CONSULT-III Function (BCM - RETAINED PWR)	35	BCM (BODY CONTROL MODULE)	47
SIGNAL BUFFER	35	Reference Value	47
SIGNAL BUFFER : CONSULT-III Function (BCM - SIGNAL BUFFER)	35	Wiring Diagram - BCM -	71
AIR PRESSURE MONITOR	36	Fail-safe	77
AIR PRESSURE MONITOR : CONSULT-III Func- tion (BCM - AIR PRESSURE MONITOR)	36	DTC Inspection Priority Chart	79
DTC/CIRCUIT DIAGNOSIS	38	DTC Index	80
U1000 CAN COMM CIRCUIT	38	SYMPTOM DIAGNOSIS	83
Description	38	COMBINATION SWITCH SYSTEM SYMP- TOMS	83
DTC Logic	38	Symptom Table	83
Diagnosis Procedure	38	NORMAL OPERATING CONDITION	84
U1010 CONTROL UNIT (CAN)	39	Description	84
DTC Logic	39	PRECAUTION	85
Diagnosis Procedure	39	PRECAUTIONS	85
U0415 VEHICLE SPEED SIG	40	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	85
Description	40	REMOVAL AND INSTALLATION	86
DTC Logic	40	BCM (BODY CONTROL MODULE)	86
Diagnosis Procedure	40	Exploded View	86
B2562 LOW VOLTAGE	41	Removal and Installation	86
DTC Logic	41	COMBINATION SWITCH	87
Diagnosis Procedure	41	Exploded View	87
		Removal and Installation	87

< BASIC INSPECTION >

BASIC INSPECTION

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM)

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Description

INFOID:000000006348514

BEFORE REPLACEMENT

When replacing BCM, save or print current vehicle specification with CONSULT-III configuration before replacement.

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

AFTER REPLACEMENT

CAUTION:

When replacing BCM, always perform "WRITE CONFIGURATION" with CONSULT-III. Or not doing so, BCM control function does not operate normally.

- Complete the procedure of "WRITE CONFIGURATION" in order.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.

NOTE:

When replacing BCM, perform the system initialization (NATS).

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Work Procedure

INFOID:000000006348515

1. SAVING VEHICLE SPECIFICATION

CONSULT-III Configuration

Perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-4, "CONFIGURATION \(BCM\) : Description"](#).

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

>> GO TO 2.

2. REPLACE BCM

Replace BCM. Refer to [BCS-86, "Exploded View"](#).

>> GO TO 3.

3. WRITING VEHICLE SPECIFICATION

CONSULT-III Configuration

Perform "WRITE CONFIGURATION - Config file" or "WRITE CONFIGURATION - Manual selection" to write vehicle specification. Refer to [BCS-4, "CONFIGURATION \(BCM\) : Work Procedure"](#).

>> GO TO 4.

4. INITIALIZE BCM (NATS)

Perform BCM initialization. (NATS)

>> WORK END

CONFIGURATION (BCM)

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
BCS

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

CONFIGURATION (BCM) : Description

INFOID:000000006348516

Vehicle specification needs to be written with CONSULT-III because it is not written after replacing BCM. Configuration has three functions as follows.

Function	Description
READ CONFIGURATION	<ul style="list-style-type: none">Reads the vehicle configuration of current BCM.Saves the read vehicle configuration.
WRITE CONFIGURATION - Manual selection	Writes the vehicle configuration with manual selection.
WRITE CONFIGURATION - Config file	Writes the vehicle configuration with saved data.

NOTE:

Manual setting item: Items which need selection by vehicle specifications

Automatic setting item: Items which are written in automatically (Setting can not be changed)

CAUTION:

When replacing BCM, always perform "WRITE CONFIGURATION" with CONSULT-III. Or not doing so, BCM control function does not operate normally.

- Complete the procedure of "WRITE CONFIGURATION" in order.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- Never perform "WRITE CONFIGURATION" except for new BCM.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.

CONFIGURATION (BCM) : Work Procedure

INFOID:000000006348517

1. WRITING MODE SELECTION

CONSULT-III Configuration

Select "CONFIGURATION" of BCM.

When writing saved data>>GO TO 2.

When writing manually>>GO TO 3.

2. PERFORM "WRITE CONFIGURATION - CONFIG FILE"

CONSULT-III Configuration

Perform "WRITE CONFIGURATION - Config file".

>> WORK END

3. PERFORM "WRITE CONFIGURATION - MANUAL SELECTION"

CONSULT-III Configuration

1. Select "WRITE CONFIGURATION - Manual selection".
2. Identify the correct model and configuration list. Refer to [BCS-5, "CONFIGURATION \(BCM\) : Configuration list"](#).
3. Confirm and/or change setting value for each item.

CAUTION:

Thoroughly read and understand the vehicle specification. ECU control may not operate normally if the setting is not correct.

4. Select "SETTING".

CAUTION:

Make sure to select "SETTING" even if the indicated configuration of brand new BCM is same as the desirable configuration. If not, configuration which is set automatically by selecting vehicle model can not be memorized.

5. When "COMMAND FINISHED", select "END".

>> GO TO 4.

4. OPERATION CHECK

Confirm that each function controlled by BCM operates normally.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

>> WORK END

CONFIGURATION (BCM) : Configuration list

INFOID:0000000006348518

CAUTION:

Thoroughly read and understand the vehicle specification. ECU control may not operate normally if the setting is not correct.

MANUAL SETTING ITEM		NOTE
Items	Setting value	
AUTO LIGHT	WITH	—
DTRL	WITH ⇔ WITHOUT	<ul style="list-style-type: none"> WITH: With daytime running light system WITHOUT: Without daytime running light system

⇒: Items which confirm vehicle specifications

AUTO SETTING ITEM		NOTE
Items	Setting value	
UNLOCK WITH SHOCK	WITHOUT	—
AUTO DOOR LOCK SPEED	MODE2	—
P-POS WARN	MODE1	—
ROOF FUNCTION	W/O REQ SW	—
BATTERY SAVER FUNCTION	MODE1	—
Trunk/Glass Hatch select	Glass Hatch	"Glass Hatch" is indicated also for vehicles without a glass hatch.
PANIC ALM TYPE	MODE1	—
TRANSIT MODE*	WITH	—
TR OPEN SW (INT)	MODE1	—
H/L BULB	DEFAULT	—
FR FOG LAMP	WITH	—
RR FOG LAMP	WITH	"WITH" is indicated also for vehicles without a rear fog lamp.
DI LMP VARIAT	MODE2	—
LIGHT RECOG	MODE7	—
TRANSMISSION	AT with ABS	—
RAIN SENSOR CONFIG	WITHOUT	—
REAR WIPER	WITH	—
THEFT ALM AREA	MODE2	—
H/L WASHER	MODE1	—
TR CANCEL SW	WITHOUT	—
BCM AC CONTROL	MODE1	—
WELCOME LIGHT TIMER2	MODE4	—
TPMS	WITH	—
TIRE PRESSURE	230kPa	—
FR FOG LOGIC	MODE1	—
AUTO LOCK&UNLOCK FUNC	WITH	—
AUTO DOOR LOCK SELECT	WITH	—
AUTO DOOR UNLOCK SELECT	WITH	—
FOG ON WITH AUTO LIGHT	WITHOUT	—
Key Fob Type	MODE9	—

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

AUTO SETTING ITEM		NOTE
Items	Setting value	
DROP WIP FUNCTION	WITH	—
WELCOME LIGHT OP SET	WITH	—

NOTE:

*: This item may not be displayed depending on vehicle specification.

TRANSIT MODE CANCEL OPERATION

< BASIC INSPECTION >

TRANSIT MODE CANCEL OPERATION

Description

INFOID:000000007868409

- BCM is in transit mode if turn signal indicator on combination meter turns ON for 1 minute when ignition switch is turned from OFF to ON.
- In this case, cancel operation must be performed.

NOTE:

Do not cancel transit mode during storage of the vehicle. Always cancel transit mode before delivery of the vehicle to customer.

Work Procedure

INFOID:000000007868410

1. TRANSIT MODE CANCEL OPERATION

1. Turn ignition switch OFF.
2. Turn and hold front wiper switch to HI, and then operate turn signal switch to RH or LH.

>> GO TO 2.

2. TRANSIT MODE CANCEL CHECK

1. Turn front wiper switch and turn signal switch OFF.
2. Turn ignition switch ON.
3. Check that turn signal indicator on combination meter does not turn ON.

>> WORK END

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

BODY CONTROL SYSTEM

System Description

INFOID:000000006348519

OUTLINE

- BCM (Body Control Module) controls the various electrical components. It inputs the information required to the control from CAN communication and the signal received from each switch and sensor.
- BCM has combination switch reading function for reading the operation status of combination switches (light, turn signal, wiper and washer) in addition to a function for controlling the operation of various electrical components. It also has the signal transmission function as the passed point of signal and the power saving control function that reduces the power consumption with the ignition switch OFF.
- BCM is equipped with the diagnosis function that performs the diagnosis with CONSULT-III and various settings.

BCM CONTROL FUNCTION LIST

System	Reference
Combination switch reading system	BCS-10, "System Diagram"
Signal buffer system	BCS-14, "System Diagram"
Power consumption control system	BCS-15, "System Diagram"
Auto light system	<ul style="list-style-type: none">EXL-14, "System Diagram" (Xenon type headlamp)EXL-227, "System Diagram" (Halogen type headlamp)
Turn signal and hazard warning lamp system	<ul style="list-style-type: none">EXL-26, "System Diagram" (Xenon type headlamp)EXL-235, "System Diagram" (Halogen type headlamp)
Headlamp system	<ul style="list-style-type: none">EXL-11, "System Diagram" (Xenon type headlamp)EXL-224, "System Diagram" (Halogen type headlamp)
Parking, license plate and tail lamps system	<ul style="list-style-type: none">EXL-28, "System Diagram" (Xenon type headlamp)EXL-237, "System Diagram" (Halogen type headlamp)
Front fog lamp system	<ul style="list-style-type: none">EXL-24, "System Diagram" (Xenon type headlamp)EXL-233, "System Diagram" (Halogen type headlamp)
Exterior lamp battery saver system	<ul style="list-style-type: none">EXL-30, "System Diagram" (Xenon type headlamp)EXL-239, "System Diagram" (Halogen type headlamp)
Daytime running light system	<ul style="list-style-type: none">EXL-17, "System Diagram" (Xenon type headlamp)EXL-230, "System Diagram" (Halogen type headlamp)
Interior room lamp control system	INL-5, "System Diagram"
Step lamp system	INL-5, "System Diagram"
Interior room lamp battery saver system	INL-9, "System Diagram"
Front wiper and washer system	WW-5, "System Diagram"
Rear wiper and washer system	WW-10, "System Diagram"
Warning chime system	WCS-5, "WARNING CHIME SYSTEM : System Diagram"
Door lock system	DLK-11, "System Diagram"
Infiniti Vehicle Immobilizer System (IVIS) - NATS	SEC-16, "System Diagram"
Vehicle security system	SEC-20, "System Diagram"
Panic alarm	ADP-12, "AUTOMATIC DRIVE POSITIONER SYSTEM : System Diagram"
Automatic drive positioner system	DEF-4, "System Diagram"
Rear window defogger system	DEF-4, "System Diagram"

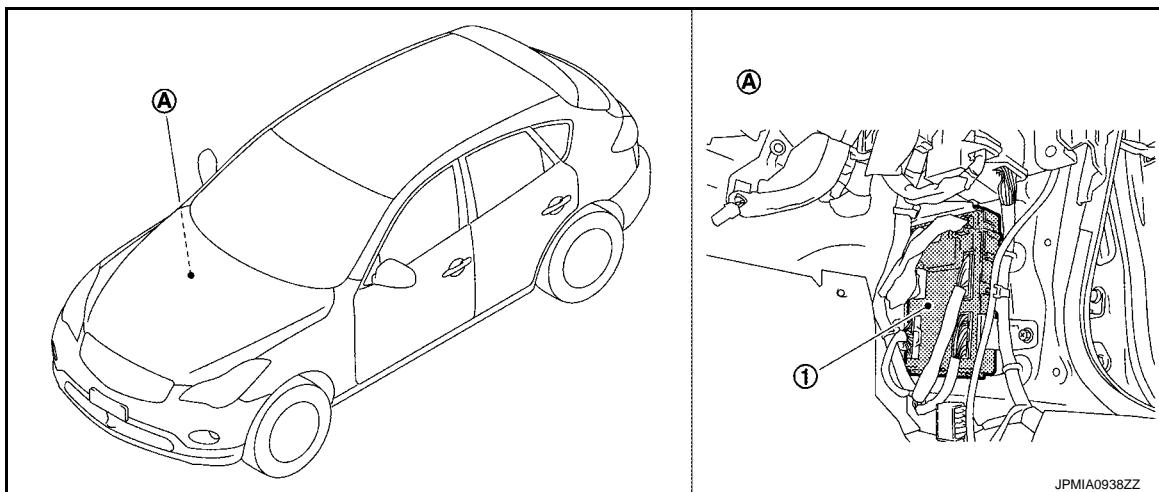
BODY CONTROL SYSTEM

< SYSTEM DESCRIPTION >

System	Reference
Intelligent Key system/engine start system	Door lock unlock function
	Remote keyless function
	Back door open function
	Warning function
	Key reminder function
	Engine start function
Power window system	PWC-7, "System Diagram"
Retained accessory power (RAP) system	PWC-7, "System Description"
Tire pressure monitor system (TPMS) - AIR PRESSURE MONITOR	WT-7, "TIRE PRESSURE MONITORING SYSTEM : System Description"

Component Parts Location

INFOID:0000000006348520



1. BCM
- A. Dash side lower (passenger side)

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

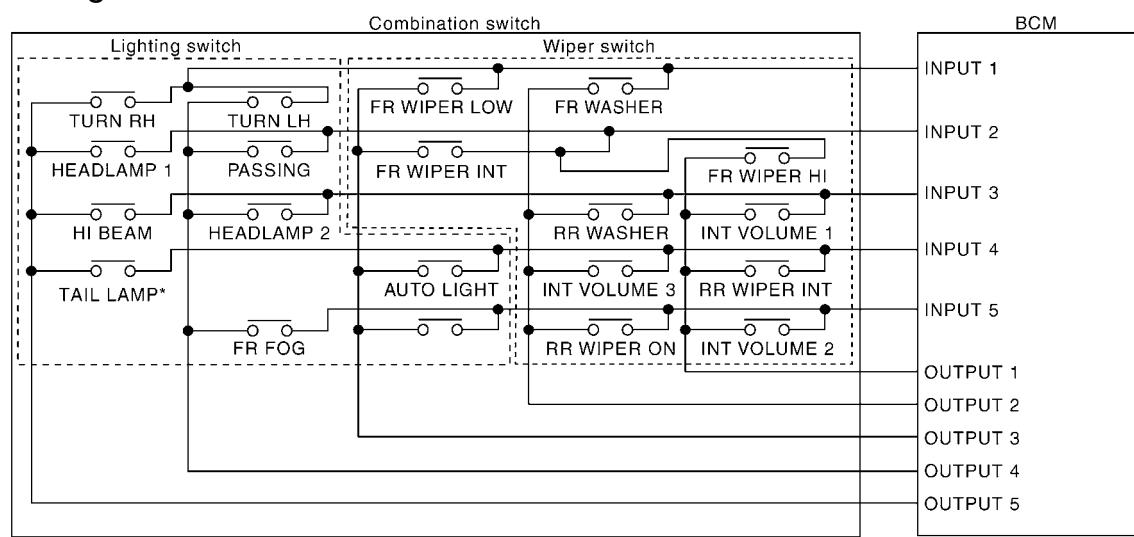
P

COMBINATION SWITCH READING SYSTEM

< SYSTEM DESCRIPTION >

COMBINATION SWITCH READING SYSTEM

System Diagram



JPMIA0901GB

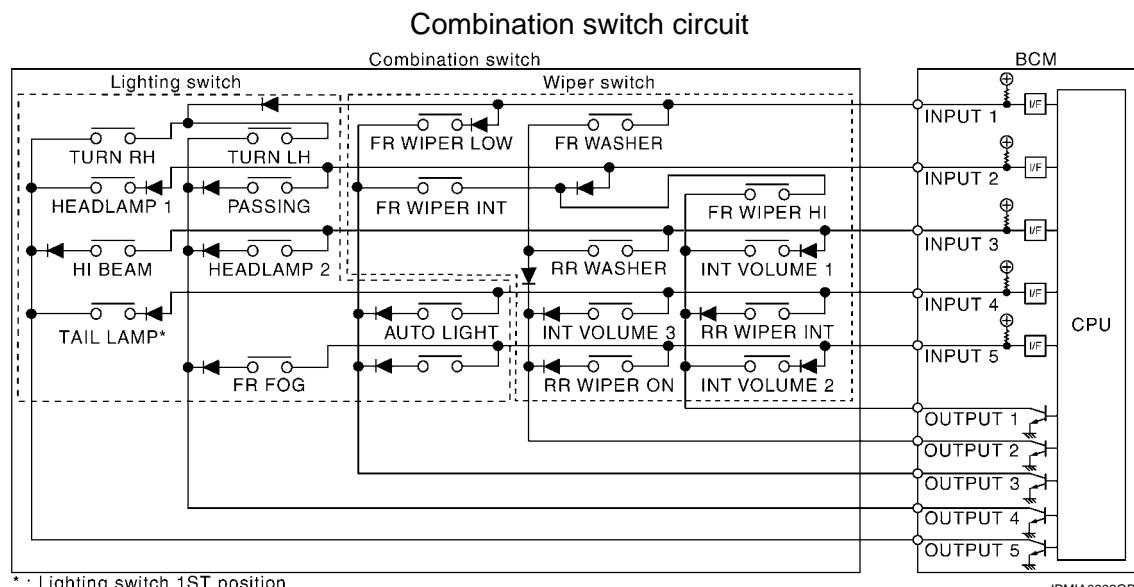
System Description

INFOID:0000000006348522

OUTLINE

- BCM reads the status of the combination switch (light, turn signal, wiper and washer) and recognizes the status of each switch.
- BCM is a combination of 5 output terminals (OUTPUT 1 - 5) and 5 input terminals (INPUT 1 - 5). It reads a maximum of 20 switch status.

COMBINATION SWITCH MATRIX



JPMIA0902GB

Combination switch INPUT-OUTPUT system list

System	OUTPUT 1	OUTPUT 2	OUTPUT 3	OUTPUT 4	OUTPUT 5
INPUT 1	—	FR WASHER	FR WIPER LOW	TURN LH	TURN RH
INPUT 2	FR WIPER HI	—	FR WIPER INT	PASSING	HEADLAMP 1
INPUT 3	INT VOLUME 1	RR WASHER	—	HEADLAMP 2	HI BEAM

COMBINATION SWITCH READING SYSTEM

< SYSTEM DESCRIPTION >

System	OUTPUT 1	OUTPUT 2	OUTPUT 3	OUTPUT 4	OUTPUT 5
INPUT 4	RR WIPER INT	INT VOLUME 3	AUTO LIGHT	—	TAIL LAMP
INPUT 5	INT VOLUME 2	RR WIPER ON	—	FR FOG	—

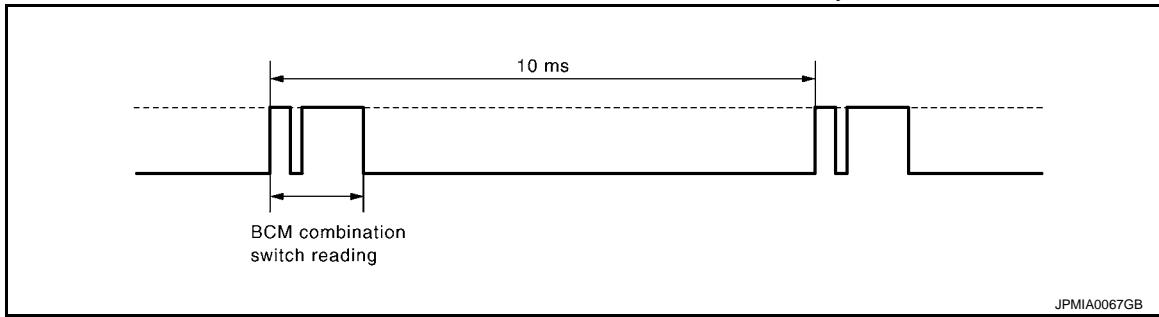
NOTE:

Headlamp has a dual system switch.

COMBINATION SWITCH READING FUNCTION

Description


- BCM reads the status of the combination switch at 10 ms interval normally.



NOTE:

BCM reads the status of the combination switch at 60 ms interval when BCM is controlled at low power consumption mode.

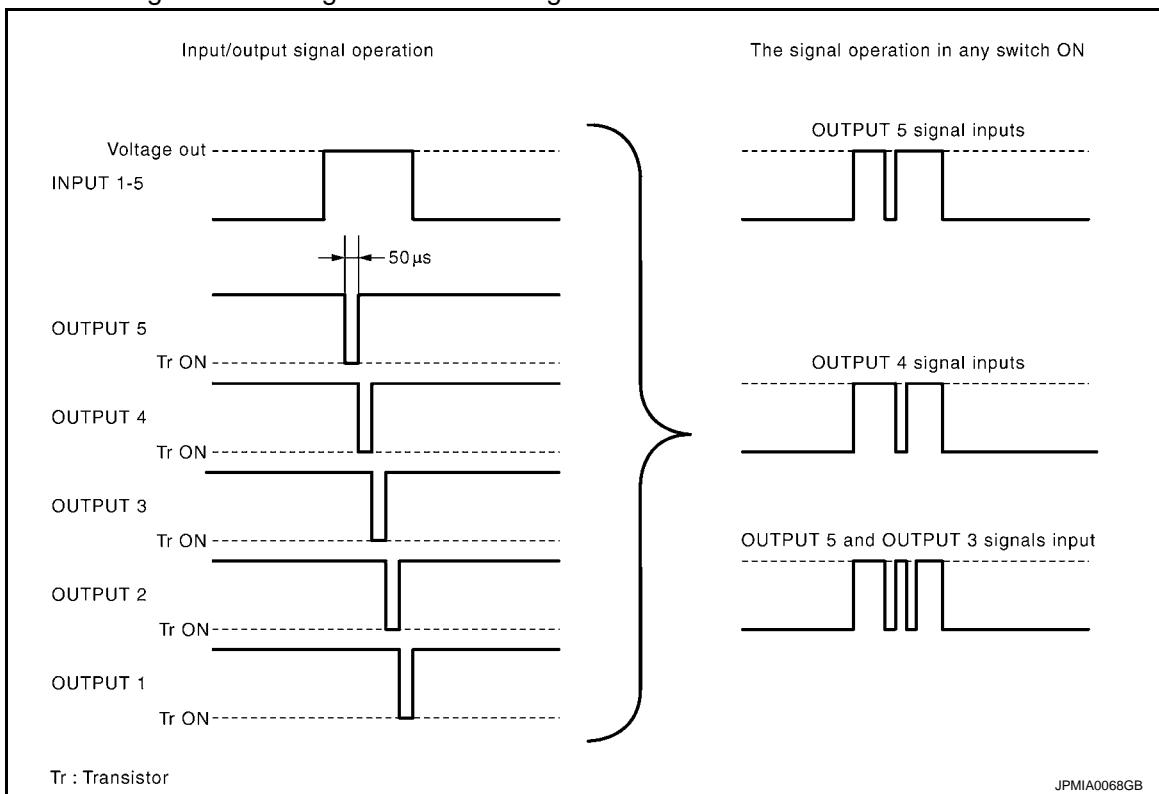- BCM operates as follows and judges the status of the combination switch.
- INPUT 1 - 5 outputs the voltage waveforms of 5 systems simultaneously.
- It operates the transistor on OUTPUT side in the following order: OUTPUT 5 → 4 → 3 → 2 → 1.
- The voltage waveform of INPUT corresponding to the formed circuit changes according to the operation of the transistor on OUTPUT side if any (1 or more) switches are ON.
- It reads this change of the voltage as the status signal of the combination switch.



Operation Example

In the following operation example, the combination of the status signals of the combination switch is replaced as follows: INPUT 1 - 5 to "1 - 5" and OUTPUT 1 - 5 to "A - E".


Example 1: When a switch (TURN RH switch) is turned ON

A
B
C
D
E
F
G
H
I
J
K
L
BCS
N
O
P

COMBINATION SWITCH READING SYSTEM

< SYSTEM DESCRIPTION >

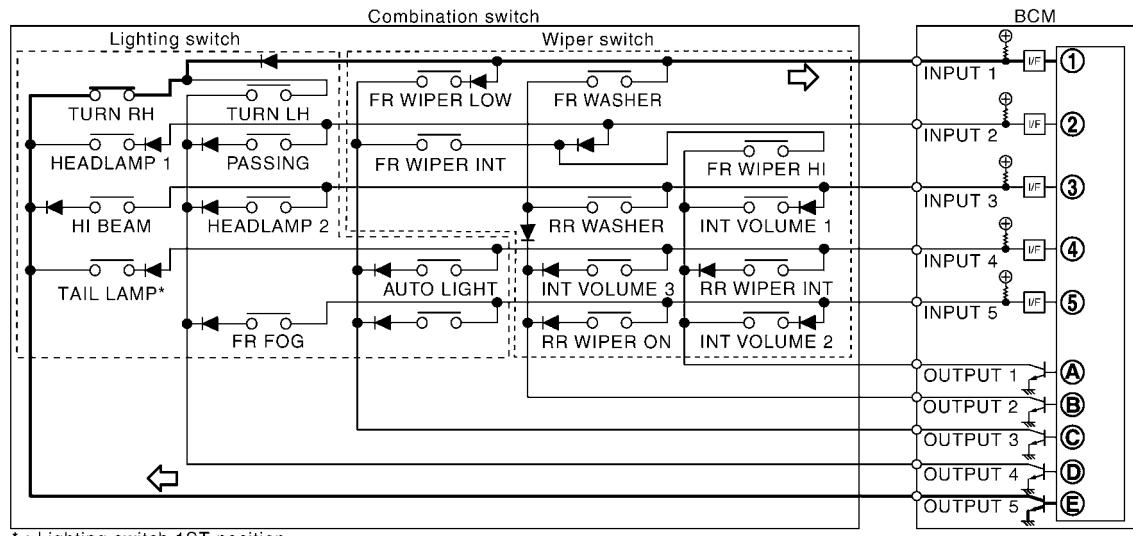
- The circuit between INPUT 1 and OUTPUT 5 is formed when the TURN RH switch is turned ON.



- BCM detects the combination switch status signal "1E" when the signal of OUTPUT 5 is input to INPUT 1.
- BCM judges that the TURN RH switch is ON when the signal "1E" is detected.

Example 2: When some switches (turn RH switch, front wiper LO switch) are turned ON

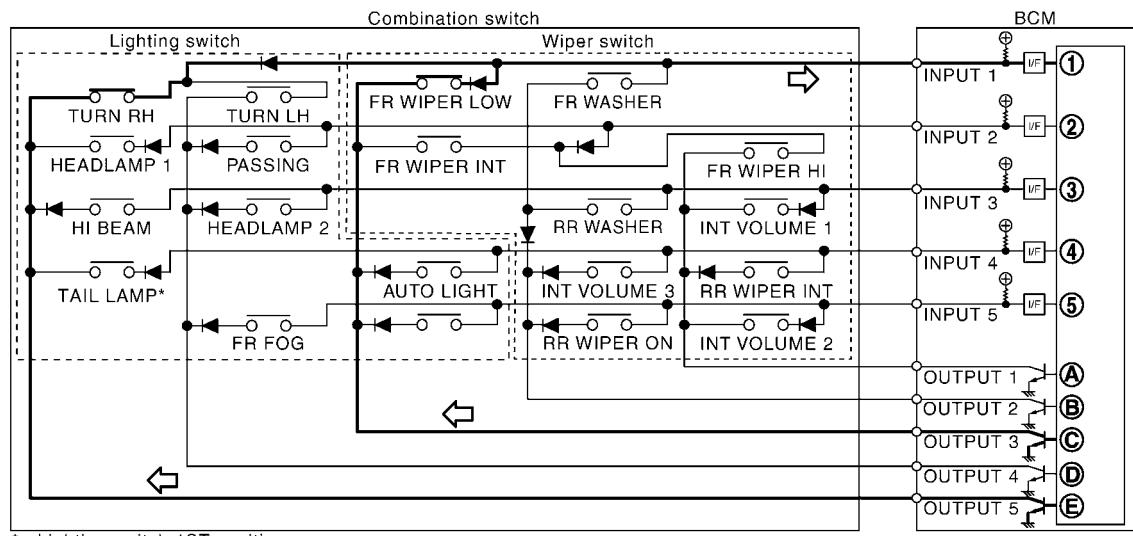- The circuits between INPUT 1 and OUTPUT 5 and between INPUT 1 and OUTPUT 3 are formed when the TURN RH switch and FR WIPER LOW switch are turned ON.



- BCM detects the combination switch status signal "1CE" when the signals of OUTPUT 3 and OUTPUT 5 are input to INPUT 1.
- BCM judges that the TURN RH switch and FR WIPER LOW switch are ON when the signal "1CE" is detected.

WIPER INTERMITTENT DIAL POSITION

BCM judges the wiper intermittent dial 1 - 7 by the status of INT VOLUME 1, 2 and 3 switches.

Wiper intermittent dial position	Switch status		
	INT VOLUME 1	INT VOLUME 2	INT VOLUME 3
1	ON	ON	ON
2	ON	ON	OFF
3	ON	OFF	OFF
4	OFF	OFF	OFF
5	OFF	OFF	ON

COMBINATION SWITCH READING SYSTEM

< SYSTEM DESCRIPTION >

Wiper intermittent dial position	Switch status		
	INT VOLUME 1	INT VOLUME 2	INT VOLUME 3
6	OFF	ON	ON
7	OFF	ON	OFF

NOTE:

For details of wiper intermittent dial position, refer to [WW-5, "System Description"](#).

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

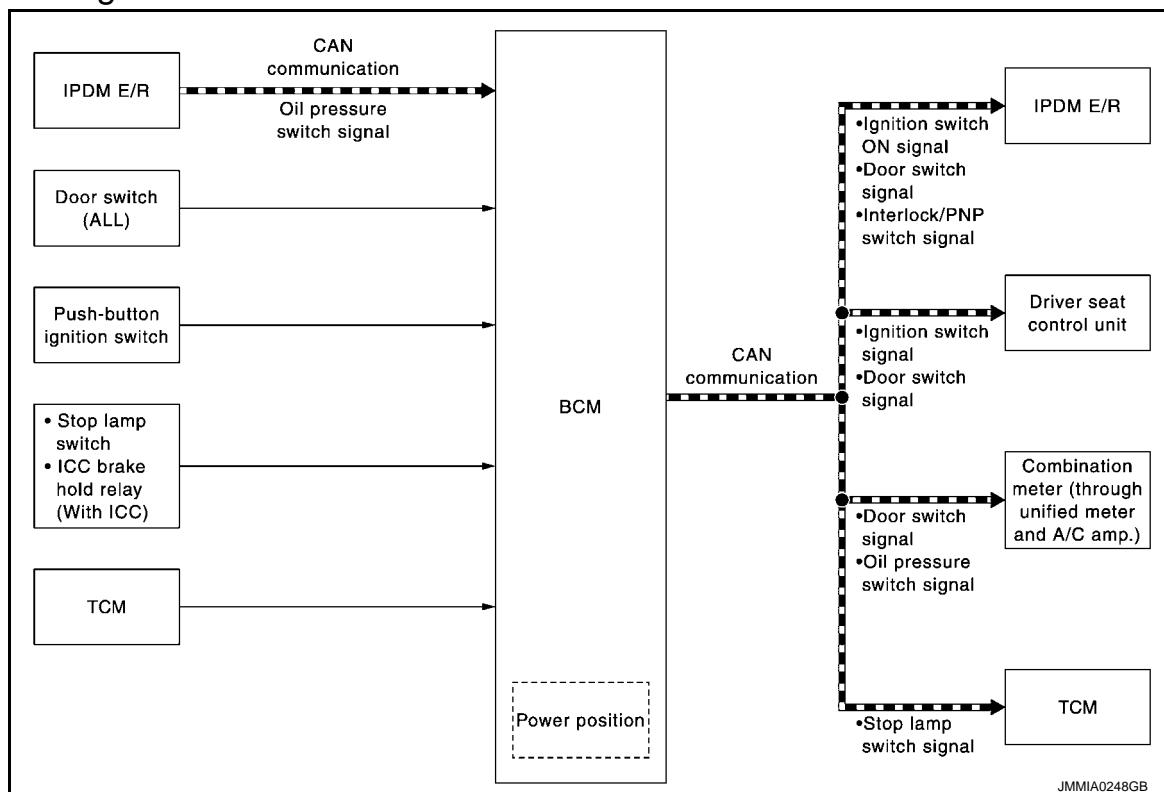
SIGNAL BUFFER SYSTEM

< SYSTEM DESCRIPTION >

SIGNAL BUFFER SYSTEM

System Diagram

INFOID:0000000006348523



System Description

INFOID:0000000006348524

OUTLINE

BCM has the signal transmission function that outputs/transmits each input/received signal to each unit.

Signal transmission function list


Signal name	Input	Output	Description
• Ignition switch ON signal • Ignition switch signal	Push-button ignition switch (Push switch)	• IPDM E/R (CAN) • Driver seat control unit (CAN)	Inputs the push-button ignition switch (push switch) signal and transmits the ignition switch status judged with BCM via CAN communication.
Door switch signal	Any door switch	• Combination meter (through unified meter and A/C amp.) (CAN) • IPDM E/R (CAN) • Driver seat control unit (CAN)	Inputs the door switch signal and transmits it via CAN communication.
Oil pressure switch signal	IPDM E/R (CAN)	Combination meter (through unified meter and A/C amp.) (CAN)	Transmits the received oil pressure switch signal via CAN communication.
Stop lamp switch signal	• Stop lamp switch • ICC brake hold relay (With ICC)	TCM (CAN)	Inputs the stop lamp switch 1 signal, and stop lamp switch 2 signal or ICC brake hold relay (with ICC) signal, and transmits it via CAN communication.
Interlock/PNP switch signal	TCM	IPDM E/R (CAN)	Inputs the selector lever P/N position signal, and transmits the interlock/PNP switch signal via CAN communication.

POWER CONSUMPTION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

POWER CONSUMPTION CONTROL SYSTEM

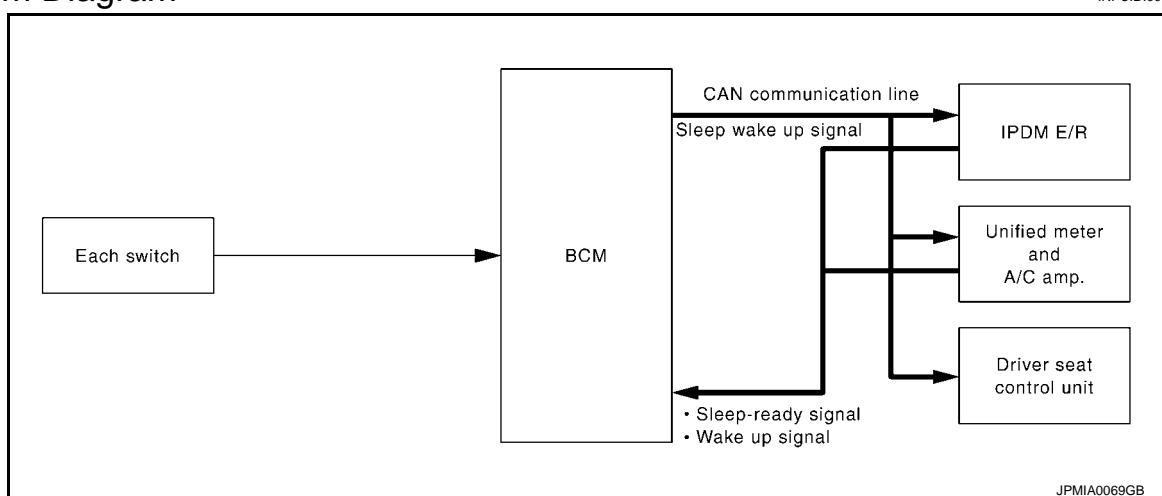System Diagram



System Description

INFOID:0000000006348526

OUTLINE

- BCM incorporates a power saving control function that reduces the power consumption according to the vehicle status.
- BCM switches the status (control mode) by itself with the power saving control function. It performs the sleep request to each unit [IPDM E/R, combination meter (unified meter and A/C amp.) and driver seat control unit] that operates with the ignition switch OFF.

Normal mode (wake-up)

- CAN communication is normally performed with other units
- Each control with BCM is operating properly

CAN communication sleep mode (CAN sleep)

- CAN transmission is stopped
- Control with BCM only is operating

Low power consumption mode (BCM sleep)

- Low power consumption control is active
- CAN transmission is stopped

LOW POWER CONSUMPTION CONTROL WITH BCM

BCM reduces the power consumption with the following operation in the low power consumption mode.

- The reading interval of the each switches changes from 10 ms interval to 60 ms interval.

BCS

Sleep mode activation

- BCM receives the sleep-ready signal (ready) from IPDM E/R and unified meter and A/C amp. via CAN communication.
- BCM transmits the sleep wake up signal (sleep) to each unit when all of the CAN sleep conditions are fulfilled.
- Each unit stops the transmission of CAN communication with the sleep wake up signal. BCM is in CAN communication sleep mode.
- BCM is in the low power consumption mode and perform the low power consumption control when all of the BCM sleep conditions are fulfilled with CAN sleep condition.

N

O

P

POWER CONSUMPTION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

Sleep condition

CAN sleep condition	BCM sleep condition
<ul style="list-style-type: none"> Receiving the sleep-ready signal (ready) from all units Ignition switch: OFF Vehicle security system and panic alarm: Not operation Warning chime: Not operation Intelligent Key system buzzer: Not operation Stop lamp switch: OFF ICC brake hold relay (with ICC): ON Key slot (card switch) status: No change Turn signal indicator lamp: Not operation Exterior lamp: OFF Door lock status: No change CONSULT-III communication status: Not communication Meter display signal: Non-transmission Door switch status: No change Rear window defogger: OFF 	<ul style="list-style-type: none"> Interior room lamp battery saver: Time out RAP system: OFF Power window switch communication: No transmission Push-button ignition switch illumination: OFF Infiniti Vehicle Immobilizer System (IVIS) - NATS: Not operation Remote keyless entry receiver communication status: No communication Tire pressure monitor system (TPMS) - AIR PRESSURE MONITOR: Stop LOCK indicator lamp: OFF ACC indicator lamp: OFF ON indicator lamp: OFF

Wake-up operation

- BCM changes from the low power consumption mode to the CAN communication sleep mode when any of the BCM wake-up conditions is fulfilled. Only the control with BCM is activated.
- BCM transmits the sleep wake up signal (wake up) to each unit when any of the CAN wake-up conditions is fulfilled. It changes from the low power consumption mode or the CAN communication sleep mode to the normal mode.
- Each unit starts the transmission of CAN communication with the sleep wake up signal. In addition, the unified meter and A/C amp. transmits the wake up signal to BCM via CAN communication to report the CAN communication start.

Wake-up condition


BCM wake-up condition	CAN wake-up condition
<ul style="list-style-type: none"> Power window switch communication: Receiving Remote keyless entry receiver communication: Receiving 	<ul style="list-style-type: none"> Receiving the sleep-ready signal (Not-ready) from any units Key slot (key switch): OFF → ON, ON → OFF Push-button ignition switch (push switch): OFF → ON Hazard switch: OFF → ON PASSING switch: OFF → ON, ON → OFF TAIL LAMP switch: OFF → ON Driver door switch: OFF → ON, ON → OFF Passenger door switch: OFF → ON, ON → OFF Rear RH door switch: OFF → ON, ON → OFF Rear LH door switch: OFF → ON, ON → OFF Back door switch: OFF → ON, ON → OFF Driver door request switch: OFF → ON Passenger door request switch: OFF → ON Back door opener request switch: OFF → ON Stop lamp switch: ON ICC brake hold relay (with ICC): ON

POWER CONSUMPTION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

Component Parts Location

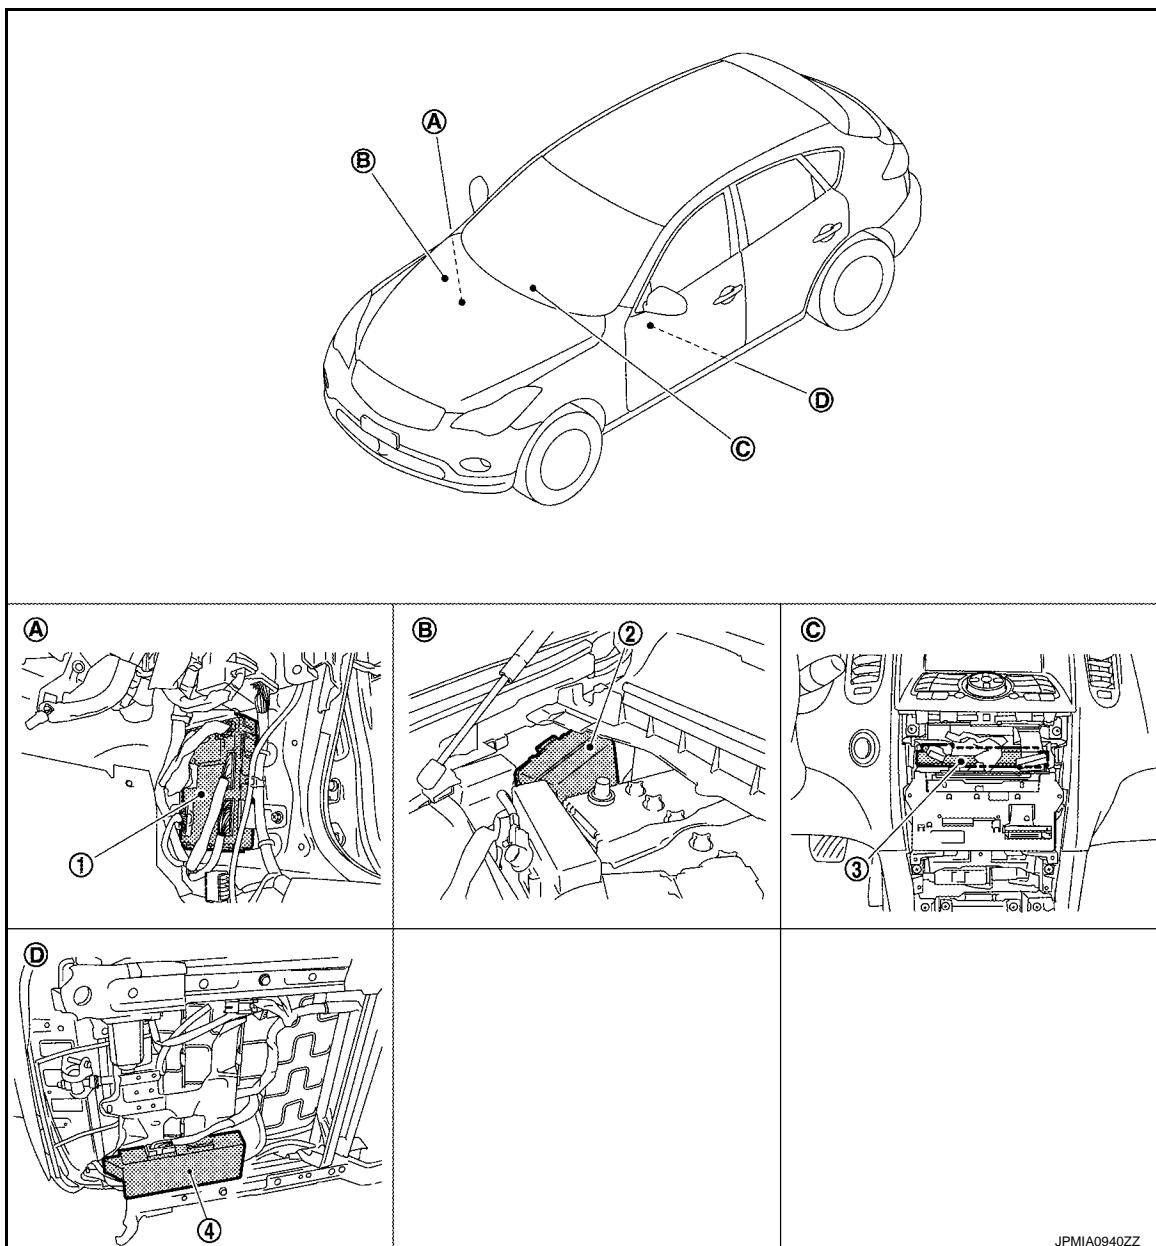INFOID:000000006348527



JPMIA0940ZZ

BCS

1. BCM	2. IPDM E/R	3. Unified meter and A/C amp.
4. Driver seat control unit		
A. Dash side lower (passenger side)	B. Engine room dash panel (RH)	C. Behind cluster lid C
D. Backside of the seat cushion (driver seat)		

N

O

P

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000006348528

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM. Refer to CONSULT-III operation manual.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none">• Read and save the vehicle specification.• Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

x: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	x	x	x
Rear window defogger	REAR DEFOGGER		x	x
Warning chime	BUZZER		x	x
Interior room lamp timer	INT LAMP	x	x	x
Exterior lamp	HEAD LAMP	x	x	x
Wiper and washer	WIPER	x	x	x
Turn signal and hazard warning lamps	FLASHER	x	x	x
—	AIR CONDITIONER*			
• Intelligent Key system • Engine start system	INTELLIGENT KEY	x	x	x
Combination switch	COMB SW		x	
Body control system	BCM	x		
IVIS - NATS	IMMU		x	x
Interior room lamp battery saver	BATTERY SAVER	x	x	x
Back door open system	TRUNK		x	x
Vehicle security system	THEFT ALM	x	x	x
RAP system	RETAINED PWR		x	
Signal buffer system	SIGNAL BUFFER		x	x
TPMS	TPMS (AIR PRESSURE MONITOR)	x	x	x

NOTE:

*: This item is displayed, but is not used.

FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT-III.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

CONSULT screen item	Indication/Unit	Description	
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected	
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected	
Vehicle Condition	SLEEP>LOCK	Power supply position status of the moment a particular DTC is detected*	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK"**)
	SLEEP>OFF		
	LOCK>ACC		
	ACC>ON		
	RUN>ACC		
	CRANK>RUN		
	RUN>URGENT		
	ACC>OFF		
	OFF>LOCK		
	OFF>ACC		
	ON>CRANK		
	OFF>SLEEP		
	LOCK>SLEEP		
	LOCK		
	OFF		
	ACC		
	ON		
	ENGINE RUN		
	CRANKING		
IGN Counter	0 - 39	The number of times that ignition switch is turned ON after DTC is detected • The number is 0 when a malfunction is detected now. • The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. • The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.	BCS

NOTE:

*: For models without steering lock unit, power supply position changes from "OFF" to "LOCK" when steering lock conditions are satisfied.

DOOR LOCK

DOOR LOCK : CONSULT-III Function (BCM - DOOR LOCK)

INFOID:000000006937022

BCM CONSULT-III FUNCTION

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

WORK SUPPORT

Monitor item	Description
DOOR LOCK-UNLOCK SET	Selective unlock function mode can be changed to operate (WITH) or not operate (WITHOUT) with this mode.
AUTOMATIC DOOR LOCK SELECT	Automatic door lock function mode can be selected from the following in this mode. <ul style="list-style-type: none"> • VH SPD: All doors are locked when vehicle speed more than 24km/h (15MPH) • P RANGE: All doors are locked when shifting the selector lever from P position to other than the P position
AUTOMATIC DOOR UNLOCK SELECT	Automatic door unlock function mode can be selected from the following in the mode. <ul style="list-style-type: none"> • MODE 1: All doors are unlocked when the power supply position is changed from ON to OFF • MODE 2: All doors are unlocked when shifting the selector lever from any position other than the P to P position • MODE 3: Driver side door is unlocked when the power supply position is changed from ON to OFF • MODE 4: Driver side door is unlocked when shifting the selector lever from any position other than the P to P position
AUTOMATIC LOCK/UNLOCK SET	Automatic door lock/unlock function mode can be selected from the following in this mode. <ul style="list-style-type: none"> • Off: non-operational • Unlock Only: door unlock operation only • Lock Only: door lock operation only • Lock/Unlock: lock/unlock operation

DATA MONITOR

Monitor Item	Contents
REQ SW-DR	Indicated [ON/OFF] condition of door request switch (driver side).
REQ SW-AS	Indicated [ON/OFF] condition of door request switch (passenger side).
REQ SW-BD/TR	Indicated [ON/OFF] condition of back door request switch.
DOOR SW-DR	Indicated [ON/OFF] condition of front door switch (driver side).
DOOR SW-AS	Indicated [ON/OFF] condition of front door switch (passenger side).
DOOR SW-RR	Indicated [ON/OFF] condition of rear door switch RH.
DOOR SW-RL	Indicated [ON/OFF] condition of rear door switch LH.
DOOR SW-BK	Indicated [ON/OFF] condition of back door switch.
CDL LOCK SW	Indicated [ON/OFF] condition of lock signal from door lock unlock switch.
CDL UNLOCK SW	Indicated [ON/OFF] condition of unlock signal from door lock unlock switch.
KEY CYL LK-SW	Indicated [ON/OFF] condition of lock signal from door key cylinder.
KEY CYL UN-SW	Indicated [ON/OFF] condition of unlock signal from door key cylinder.

ACTIVE TEST

Test item	Description
DOOR LOCK	This test is able to check door lock/unlock operation. <ul style="list-style-type: none"> • The all door lock actuators are locked when "ALL LCK" on CONSULT-III screen is touched. • The all door lock actuators are unlocked when "ALL UNLK" on CONSULT-III screen is touched. • The door lock actuator (driver side) is unlocked when "DR UNLK" on CONSULT-III screen is touched. • The door lock actuator (passenger side) is unlocked when "AS UNLK" on CONSULT- III screen is touched. • The door lock actuator (rear LH and RH) is unlocked when "OTR ULK" on CONSULT-III screen is touched.

REAR WINDOW DEFOGGER

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

REAR WINDOW DEFOGGER : CONSULT-III Function (BCM - REAR DEFOGGER)

INFOID:000000006937276

A

Data monitor

Monitor Item	Description
REAR DEF SW	This is displayed even when it is not equipped.
PUSH SW	Indicates [ON/OFF] condition of push switch.

B

C

D

E

ACTIVE TEST

Test Item	Description
REAR DEFOGGER	This test is able to check rear window defogger operation. Rear window defogger operates when "ON" on CONSULT-III screen is touched.

F

BUZZER

BUZZER : CONSULT-III Function (BCM - BUZZER)

INFOID:000000006937303

G

CONSULT-III APPLICATION ITEMS

Test item	Diagnosis mode	Description
BUZZER	Data Monitor	Displays BCM input data in real time.
	Active Test	Operation of electrical loads can be checked by sending driving signal to them.

H

DATA MONITOR

Display item [Unit]	Description
VEH SPEED 1 [Km/h]	Value of vehicle speed signal received from ABS actuator and electric unit (control unit) with CAN communication line.
PUSH SW [On/Off]	Status of push button ignition switch judged by BCM.
UNLK SEN-DR [On/Off]	Status of unlock sensor judged by BCM.
KEY SW-SLOT [On/Off]	Status of key slot judged by BCM.
TAIL LAMP SW [On/Off]	Status of each switch judged by BCM using the combination switch readout function.
FR FOG SW [On/Off]	Status of front fog lamp switch judged by BCM.
DOOR SW-DR [On/Off]	Status of driver side door switch judged by BCM.

I

J

K

L

BCS

M

ACTIVE TEST

Display item [Unit]	Description
IGN KEY WARN ALM	The key warning chime operation can be checked by operating the relevant function (On/Off).
SEAT BELT WARN TEST	The seat belt warning chime operation can be checked by operating the relevant function (On/Off).
ID REGIST WARNING	The ID regist warning chime operation can be checked by operating the relevant function (On/Off).
LIGHT WARN ALM	The light warning chime operation can be checked by operating the relevant function (On/Off).

O

P

INT LAMP

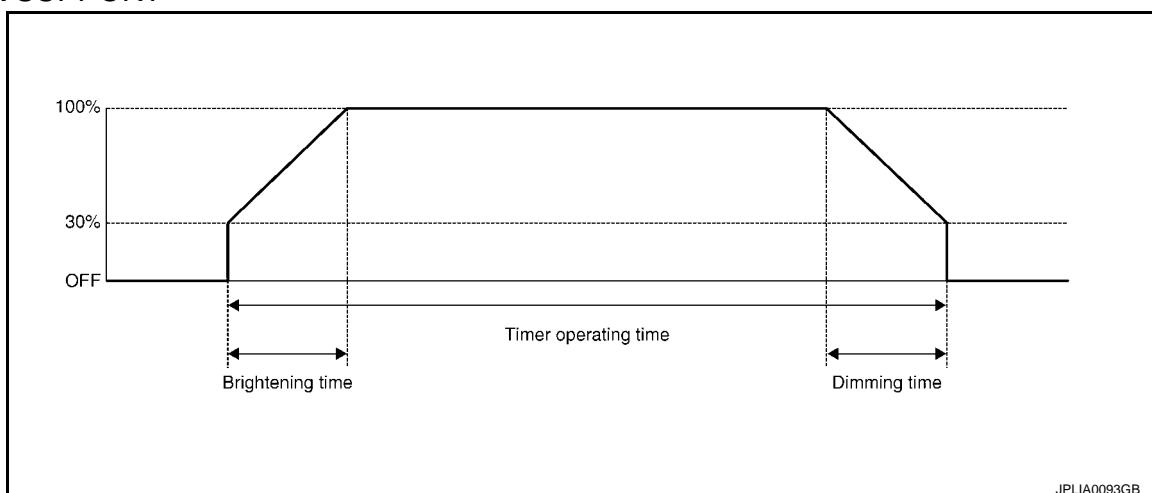
DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

INT LAMP : CONSULT-III Function (BCM - INT LAMP)

INFOID:000000006937052

WORK SUPPORT



Service item	Setting item	Setting
SET I/L D-UNLCK INTCON	ON*	With the interior room lamp timer function
	OFF	Without the interior room lamp timer function
ROOM LAMP TIMER SET	MODE 2	7.5 sec.
	MODE 3*	15 sec.
	MODE 4	30 sec.
ROOM LAMP ON TIME SET	MODE 1	0.5 sec.
	MODE 2*	1 sec.
	MODE 3	2 sec.
	MODE 4	3 sec.
	MODE 5	0 sec.
ROOM LAMP OFF TIME SET	MODE 1	0.5 sec.
	MODE 2	1 sec.
	MODE 3	2 sec.
	MODE 4*	3 sec.
	MODE 5	0 sec.
R LAMP TIMER LOGIC SET	MODE 1*	Interior room lamp timer activates with synchronizing all doors.
	MODE 2	Interior room lamp timer activates with synchronizing the driver door only.

*: Initial setting

DATA MONITOR

Monitor item [Unit]	Description
REQ SW-DR [On/Off]	The switch status input from request switch (driver side)
REQ SW-AS [On/Off]	The switch status input from request switch (passenger side)
PUSH SW [On/Off]	The switch status input from push-button ignition switch
KEY SW-SLOT [On/Off]	Key switch status input from key slot

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor item [Unit]	Description	
DOOR SW-DR [On/Off]	The switch status input from front door switch (driver side)	A
DOOR SW-AS [On/Off]	The switch status input from front door switch (passenger side)	B
DOOR SW-RR [On/Off]	The switch status input from rear door switch RH	C
DOOR SW- RL [On/Off]	The switch status input from rear door switch LH	D
DOOR SW-BK [On/Off]	The switch status input from back door switch	E
CDL LOCK SW [On/Off]	Lock switch status received from central door lock switch by power window switch serial link	F
CDL UNLOCK SW [On/Off]	Unlock switch status received from central door lock switch by power window switch serial link	G
KEY CYL LK-SW [On/Off]	Lock switch status received from key cylinder switch by power window switch serial link	H
KEY CYL UN-SW [On/Off]	Unlock switch status received from key cylinder switch by power window switch serial link	I
TRNK/HAT MNTR [On/Off]	NOTE: The item is indicated, but not monitored.	J
RKE-LOCK [On/Off]	Lock signal status received from remote keyless entry receiver	K
RKE-UNLOCK [On/Off]	Unlock signal status received from remote keyless entry receiver	L

ACTIVE TEST

Test item	Operation	Description	
INT LAMP	On	Outputs the interior room lamp control signal to turn map lamp and personal lamp ON (Map lamp switch is in DOOR position).	J
	Off	Stops the interior room lamp control signal to turn map lamp and personal lamp OFF.	K
STEP LAMP TEST	On	Outputs the step lamp control signal to turn step lamp ON.	L
	Off	Stops the step lamp control signal to turn step lamp OFF.	M
LUGGAGE LAMP TEST	On	Outputs the trunk room lamp control signal to turn step lamp ON.	N
	Off	Stops the trunk room lamp control signal to turn step lamp ON.	O

HEADLAMP

HEADLAMP : CONSULT-III Function (BCM - HEAD LAMP)

INFOID:000000006937050

WORK SUPPORT

Service item	Setting item	Setting	
BATTERY SAVER SET	On*	With the exterior lamp battery saver function	P
	Off	Without the exterior lamp battery saver function	Q

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Service item	Setting item	Setting
ILL DELAY SET	MODE 1*	45 sec.
	MODE 2	Without the function
	MODE 3	30 sec.
	MODE 4	60 sec.
	MODE 5	90 sec.
	MODE 6	120 sec.
	MODE 7	150 sec.
	MODE 8	180 sec.
CUSTOM A/LIGHT SETTING	MODE 1*	Normal
	MODE 2	More sensitive setting than normal setting (Turns ON earlier than normal operation.)
	MODE 3	More sensitive setting than MODE 2 (Turns ON earlier than MODE 2.)
	MODE 4	Less sensitive setting than normal setting (Turns ON later than normal operation.)

*: Initial setting

DATA MONITOR

Monitor item [Unit]	Description
PUSH SW [On/Off]	The switch status input from push-button ignition switch
ENGINE STATE [Stop/Stall/Crank/Run]	The engine status received from ECM with CAN communication
VEH SPEED 1 [km/h]	The value of the vehicle speed received from unified meter and A/C amp. with CAN communication
KEY SW-SLOT [On/Off]	Key switch status input from key slot
TURN SIGNAL R [On/Off]	Each switch status that BCM judges from the combination switch reading function
TURN SIGNAL L [On/Off]	
TAIL LAMP SW [On/Off]	
HI BEAM SW [On/Off]	
HEAD LAMP SW1 [On/Off]	
HEAD LAMP SW2 [On/Off]	
PASSING SW [On/Off]	
AUTO LIGHT SW [On/Off]	
FR FOG SW [On/Off]	NOTE: The item is indicated, but not monitored.
RR FOG SW [On/Off]	
DOOR SW-DR [On/Off]	The switch status input from front door switch (driver side)
DOOR SW-AS [On/Off]	The switch status input from front door switch (passenger side)

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor item [Unit]	Description
DOOR SW-RR [On/Off]	The switch status input from rear door switch RH
DOOR SW- RL [On/Off]	The switch status input from rear door switch LH
DOOR SW-BK [On/Off]	The switch status input from back door switch.
OPTICAL SENSOR [V]	The value of exterior brightness voltage input from the optical sensor

ACTIVE TEST

Test item	Operation	Description
TAIL LAMP	On	Transmits the position light request signal to IPDM E/R with CAN communication to turn the tail lamp ON.
	Off	Stops the position light request signal transmission.
HEAD LAMP	Hi	Transmits the high beam request signal with CAN communication to turn the headlamp (HI).
	Low	Transmits the low beam request signal with CAN communication to turn the headlamp (LO).
	Off	Stops the high & low beam request signal transmission.
FR FOG LAMP	On	Transmits the front fog light request signal to IPDM E/R with CAN communication to turn the front fog lamp ON.
	Off	Stops the front fog light request signal transmission.
RR FOG LAMP	On	NOTE: The item is indicated, but cannot be tested.
	Off	
DAYTIME RUNNING LIGHT	On	NOTE: The item is indicated, but cannot be tested.
	Off	
CORNERRING LAMP	RH	NOTE: The item is indicated, but cannot be tested.
	LH	
	Off	
ILL DIM SIGNAL	On	NOTE: The item is indicated, but cannot be tested.
	Off	

WIPER

WIPER : CONSULT-III Function (BCM - WIPER)

INFOID:0000000006937245

BCS

WORK SUPPORT

Service item	Setting item	Description
WIPER SPEED SETTING	On	With vehicle speed (Front wiper intermittent time linked with the vehicle speed and wiper intermittent dial position)
	Off*	Without vehicle speed (Front wiper intermittent time linked with the wiper intermittent dial position)

*:Factory setting

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
PUSH SW [Off/On]	The switch status input from push-button ignition switch.
VEHICLE SPEED 1 [km/h]	The value of the vehicle speed signal received from unified meter and A/C amp. with CAN communication.
FR WIPER HI [Off/On]	Each switch status that BCM judges from the combination switch reading function.
FR WIPER LOW [Off/On]	
FR WASHER SW [Off/On]	
FR WIPER INT [Off/On]	
FR WIPER STOP [Off/On]	Front wiper motor (stop position) status received from IPDM E/R with CAN communication.
INT VOLUME [1 – 7]	Each switch status that BCM judges from the combination switch reading function.
RR WIPER ON [Off/On]	Each switch status that BCM judges from the combination switch reading function.
RR WIPER INT [Off/On]	
RR WASHER SW [Off/On]	
RR WIPER STOP [Off/On]	
	Rear wiper motor (stop position) status input from the rear wiper motor.

ACTIVE TEST

Test item	Operation	Description
FR WIPER	Hi	Transmits the front wiper request signal (HI) to IPDM E/R with CAN communication to operate the front wiper HI operation.
	Lo	Transmits the front wiper request signal (LO) to IPDM E/R with CAN communication to operate the front wiper LO operation.
	INT	Transmits the front wiper request signal (INT) to IPDM E/R with CAN communication to operate the front wiper INT operation.
	Off	Stops transmitting the front wiper request signal to stop the front wiper operation.
RR WIPER	On	Outputs the voltage to operate the rear wiper motor.
	Off	Stops the voltage to stop.

FLASHER

FLASHER : CONSULT-III Function (BCM - FLASHER)

INFOID:0000000006937051

WORK SUPPORT

Service item	Setting item	Setting
HAZARD ANSWER BACK	Lock Only*	With locking only
	Unlk Only	With unlocking only
	Lock/Unlk	With locking/unlocking
	Off	Without the function

*: Initial setting

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor item [Unit]	Description
REQ SW-DR [On/Off]	The switch status input from the request switch (driver side)
REQ SW-AS [On/Off]	The switch status input from the request switch (passenger side)
PUSH SW [On/Off]	The switch status input from the push-button ignition switch
TURN SIGNAL R [On/Off]	Each switch condition that BCM judges from the combination switch reading function
TURN SIGNAL L [On/Off]	
HAZARD SW [On/Off]	The switch status input from the hazard switch
RKE-LOCK [On/Off]	Lock signal status received from the remote keyless entry receiver
RKE-UNLOCK [On/Off]	Unlock signal status received from the remote keyless entry receiver
RKE-PANIC [On/Off]	Panic alarm signal status received from the remote keyless entry receiver

ACTIVE TEST

Test item	Operation	Description
FLASHER	RH	Outputs the voltage to blink the right side turn signal lamps.
	LH	Outputs the voltage to blink the left side turn signal lamps.
	Off	Stops the voltage to turn the turn signal lamps OFF.

INTELLIGENT KEY

INTELLIGENT KEY : CONSULT-III Function (BCM - INTELLIGENT KEY)

INFOID:0000000006937028

WORK SUPPORT

Monitor item	Description
CONFIRM KEY FOB ID	It can be checked whether Intelligent Key ID code is registered or not in this mode.
AUTO LOCK SET	Auto door lock time can be changed in this mode. <ul style="list-style-type: none"> • MODE 1: 1 minute • MODE 2: 5 minutes • MODE 3: 30 seconds • MODE 4: 2 minutes
LOCK/UNLOCK BY I-KEY	Door lock/unlock function by door request switch (driver side, passenger side and back door) mode can be changed to operate (ON) or not operate (OFF) in this mode.
ENGINE START BY I-KEY	Engine start function mode can be changed to operate (ON) or not operate (OFF) with this mode.
TRUNK/GLASS HATCH OPEN	Buzzer reminder function mode by back door request switch can be changed to operate (ON) or not operate (OFF) with this mode.
PANIC ALARM SET	Panic alarm button pressing time on Intelligent Key remote control button can be selected from the following with this mode. <ul style="list-style-type: none"> • MODE 1: 0.5 sec. • MODE 2: Non-operation • MODE 3: 1.5 sec.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor item	Description
PW DOWN SET	Unlock button pressing time on Intelligent Key button can be selected from the following with this mode. <ul style="list-style-type: none"> • MODE 1: 3 sec. • MODE 2: Non-operation • MODE 3: 5 sec.
TAKE OUT FROM WIN WARN	NOTE: This item is displayed, but cannot be supported.
TRUNK OPEN DELAY	NOTE: This item is displayed, but cannot be supported.
LO- BATT OF KEY FOB WARN	Intelligent Key low battery warning mode can be changed to operate (ON) or not operate (OFF) with this mode.
ANTI KEY LOCK IN FUNCTI	Key reminder function mode can be changed to operate (ON) or not operate (OFF) with this mode.
HAZARD ANSWER BACK	Hazard reminder function mode can be selected from the following with this mode. <ul style="list-style-type: none"> • LOCK ONLY: Door lock operation only • UNLOCK ONLY: Door unlock operation only • LOCK/UNLOCK: Lock/unlock operation • OFF: Non-operation
ANS BACK I-KEY LOCK	Buzzer reminder function (lock operation) mode by door request switch (driver side and passenger side) can be selected from the following with this mode. <ul style="list-style-type: none"> • Horn chirp: Sound horn • Buzzer: Sound Intelligent Key warning buzzer • OFF: Non-operation
ANS BACK I-KEY UNLOCK	Buzzer reminder function (unlock operation) mode by door request switch can be changed to operate (ON) or not operate (OFF) with this mode.
SHORT CRANKING OUTPUT	Starter motor can operate during the times below. <ul style="list-style-type: none"> • 70 msec. • 100 msec. • 200 msec.
INSIDE ANT DIAGNOSIS	This function allows inside key antenna self-diagnosis.
HORN WITH KEYLESS LOCK	Horn reminder function mode by Intelligent Key button can be changed to operate (ON) or not operate (OFF) with this mode.
WELCOME LIGHT OP SET	Welcome light function mode can be changed to operate (WITH) or not operate (WITHOUT) with this mode.
WELCOME LIGHT SELECT	Welcome light function mode can be selected from the following with this mode. <ul style="list-style-type: none"> • Without room lamp • With room lamp • Without paddle lamp • With paddle lamp

SELF-DIAG RESULT

Refer to [DLK-171, "DTC Index"](#).

DATA MONITOR

Monitor Item	Condition
REQ SW -DR	Indicates [ON/OFF] condition of door request switch (driver side).
REQ SW -AS	Indicates [ON/OFF] condition of door request switch (passenger side).
REQ SW -RR	NOTE: This item is displayed, but cannot be monitored.
REQ SW -RL	NOTE: This item is displayed, but cannot be monitored.
REQ SW -BD/TR	Indicates [ON/OFF] condition of back door request switch.
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch.
IGN RLY2 -F/B	Indicates [ON/OFF] condition of ignition relay 2.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor Item	Condition
CLUCH SW	NOTE: This item is displayed, but cannot be monitored.
BRAKE SW 1	Indicates [ON/OFF] condition of brake switch power supply.
BRAKE SW 2	Indicates [ON/OFF] condition of brake switch.
DETE/CANCL SW	Indicates [ON/OFF] condition of P position.
SFT PN/N SW	Indicates [ON/OFF] condition of P or N position.
S/L -LOCK	Indicates [ON/OFF] condition of steering lock unit (LOCK). NOTE: For models without steering lock unit, this item is not monitored.
S/L -UNLOCK	Indicates [ON/OFF] condition of steering lock unit (UNLOCK). NOTE: For models without steering lock unit, this item is not monitored.
S/L RELAY -F/B	Indicates [ON/OFF] condition of ignition switch. NOTE: For models without steering lock unit, this item is not monitored.
UNLK SEN -DR	Indicates [ON/OFF] condition of driver door UNLOCK status.
PUSH SW -IPDM	Indicates [ON/OFF] condition of push-button ignition switch.
IGN RLY1 -F/B	Indicates [ON/OFF] condition of ignition relay 1.
DETE SW -IPDM	Indicates [ON/OFF] condition of P position.
SFT PN -IPDM	Indicates [ON/OFF] condition of P or N position.
SFT P -MET	Indicates [ON/OFF] condition of P position.
SFT N -MET	Indicates [ON/OFF] condition of N position.
ENGINE STATE	Indicates [STOP/START/CRANK/RUN] condition of engine states.
S/L LOCK-IPDM	Indicates [ON/OFF] condition of steering lock unit (LOCK). NOTE: For models without steering lock unit, this item is not monitored.
S/L UNLK-IPDM	Indicates [ON/OFF] condition of steering lock unit (UNLOCK). NOTE: For models without steering lock unit, this item is not monitored.
S/L RELAY-REQ	Indicates [ON/OFF] condition of steering lock relay. NOTE: For models without steering lock unit, this item is not monitored.
VEH SPEED 1	Display the vehicle speed signal received from unified meter and A/C amp. by numerical value [Km/h].
VEH SPEED 2	Display the vehicle speed signal received from ABS or VDC or CVT by numerical value [Km/h].
DOOR STAT-DR	Indicates [LOCK/READY/UNLOCK] condition of driver side door status.
DOOR STAT-AS	Indicates [LOCK/READY/UNLOCK] condition of passenger side door status.
ID OK FLAG	Indicates [SET/RESET] condition of key ID.
PRMT ENG STRT	Indicates [SET/RESET] condition of engine start possibility.
PRMT RKE STRT	NOTE: This item is displayed, but cannot be monitored.
KEY SW -SLOT	Indicates [ON/OFF] condition of key slot.
TRNK/HAT MNTR	NOTE: This item is displayed, but cannot be monitored.
RKE-LOCK	Indicates [ON/OFF] condition of LOCK signal from Intelligent Key.
RKE-UNLOCK	Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key.
RKE-TR/BD	NOTE: This item is displayed, but cannot be monitored.
RKE-PANIC	Indicates [ON/OFF] condition of PANIC button of Intelligent Key.
RKE-P/W OPEN	Indicates [ON/OFF] condition of P/W DOWN signal from Intelligent Key.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor Item	Condition
RKE-MODE CHG	Indicates [ON/OFF] condition of MODE CHANGE signal from Intelligent Key.
RKE OPE COUN1	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing.
RKE OPE COUN2	NOTE: This item is displayed, but cannot be monitored.

ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check interior room lamp operation. The interior room lamp will be activated after "ON" on CONSULT-III screen is touched.
PW REMOTO DOWN SET	This test is able to check power window down operation. The power window down will be activated after "ON" on CONSULT-III screen is touched.
INSIDE BUZZER	This test is able to check warning chime in combination meter operation. <ul style="list-style-type: none"> Take away warning chime sounds when "TAKE OUT" on CONSULT-III screen is touched. Key warning chime sounds when "KEY WARN" on CONSULT-III screen is touched. P position warning chime sounds when "P RNG WARN" on CONSULT-III screen is touched. ACC warning chime sounds when "ACC WARN" on CONSULT-III screen is touched.
OUTSIDE BUZZER	This test is able to check Intelligent Key warning buzzer operation. The Intelligent Key warning buzzer will be activated after "ON" on CONSULT-III screen is touched.
INDICATOR	This test is able to check warning lamp operation. <ul style="list-style-type: none"> "KEY" Warning lamp illuminates when "KEY ON" on CONSULT-III screen is touched. "KEY" Warning lamp flashes when "KEY IND" on CONSULT-III screen is touched.
INT LAMP	This test is able to check interior room lamp operation. The interior room lamp will be activated after "ON" on CONSULT-III screen is touched.
LCD	This test is able to check meter display information <ul style="list-style-type: none"> Engine start information displays when "BP N" on CONSULT-III screen is touched. Engine start information displays when "BP I" on CONSULT-III screen is touched. Key ID warning displays when "ID NG" on CONSULT-III screen is touched. Steering lock information displays when "ROTAT" on CONSULT-III screen is touched. NOTE: For models without steering lock unit, "ROTAT" is displayed, but cannot be tested. <ul style="list-style-type: none"> P position warning displays when "SFT P" on CONSULT-III screen is touched. Intelligent Key insert information displays when "INSRT" on CONSULT-III screen is touched. Intelligent Key low battery warning displays when "BATT" on CONSULT-III screen is touched. Take away through window warning displays when "NO KY" on CONSULT-III screen is touched. Take away warning display when "OUTKY" on CONSULT-III screen is touched. OFF position warning display when "LK WN" on CONSULT-III screen is touched.
TRUNK/GLASS HATCH	This test is able to check back door opener actuator open operation. This actuator opens when "ON" on CONSULT-III screen is touched.
FLASHER	This test is able to check hazard warning lamp operation. The hazard warning lamps will be activated after "ON" on CONSULT-III screen is touched.
HORN	This test is able to check horn operation. The horn will be activated after "ON" on CONSULT-III screen is touched.
P RANGE	This test is able to check A/T shift selector power supply A/T shift selector power is supplied when "ON" on CONSULT-III screen is touched.
ENGINE SW ILLUMI	This test is able to check push-ignition switch illumination operation. Push-ignition switch illumination illuminates when "ON" on CONSULT-III screen is touched.
LOCK INDICATOR	This test is able to check LOCK indicator in push-ignition switch operation. LOCK indicator in push-ignition switch illuminates when "ON" on CONSULT-III screen is touched;
ACC INDICATOR	This test is able to check ACC indicator in push-ignition switch operation. Indicator in push-ignition switch illuminates when "ON" on CONSULT-III screen is touched.
IGNITION ON IND	This test is able to check ON indicator in push-ignition switch operation. Indicator in push-ignition switch illuminates when "ON" on CONSULT-III screen is touched.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Test item	Description
KEY SLOT ILLUMI	This test is able to check key slot illumination operation. Key slot illumination flash when "ON" on CONSULT-III screen is touched.
TRUNK/BACK DOOR	NOTE: This item is displayed, but cannot be tested.

COMB SW

COMB SW : CONSULT-III Function (BCM - COMB SW)

INFOID:000000006348537

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

DATA MONITOR

Monitor item [UNIT]	Description
FR WIPER HI [Off/On]	Displays the status of the FR WIPER HI switch in combination switch judged by BCM with the combination switch reading function.
FR WIPER LOW [Off/On]	Displays the status of the FR WIPER LOW switch in combination switch judged by BCM with the combination switch reading function.
FR WASHER SW [Off/On]	Displays the status of the FR WASHER switch in combination switch judged by BCM with the combination switch reading function.
FR WIPER INT [Off/On]	Displays the status of the FR WIPER INT switch in combination switch judged by BCM with the combination switch reading function.
FR WIPER STOP [Off/On]	Displays the status of the front wiper stop position signal received from IPDM E/R via CAN communication.
INT VOLUME [1 - 7]	Displays the status of wiper intermittent dial position judged by BCM with the combination switch reading function.
RR WIPER ON [Off/On]	Displays the status of the RR WIPER ON switch in combination switch judged by BCM with the combination switch reading function.
RR WIPER INT [Off/On]	Displays the status of the RR WIPER INT switch in combination switch judged by BCM with the combination switch reading function.
RR WASHER SW [Off/On]	Displays the status of the RR WASHER switch in combination switch judged by BCM with the combination switch reading function.
RR WIPER STOP [Off/On]	Displays the status of the rear wiper stop position signal received from rear wiper motor.
TURN SIGNAL R [Off/On]	Displays the status of the TURN RH switch in combination switch judged by BCM with the combination switch reading function.
TURN SIGNAL L [Off/On]	Displays the status of the TURN LH switch in combination switch judged by BCM with the combination switch reading function.
TAIL LAMP SW [Off/On]	Displays the status of the TAIL LAMP switch in combination switch judged by BCM with the combination switch reading function.
HI BEAM SW [Off/On]	Displays the status of the HI BEAM switch in combination switch judged by BCM with the combination switch reading function.
HEAD LAMP SW 1 [Off/On]	Displays the status of the HEADLAMP 1 switch in combination switch judged by BCM with the combination switch reading function.
HEAD LAMP SW 2 [Off/On]	Displays the status of the HEADLAMP 2 switch in combination switch judged by BCM with the combination switch reading function.
PASSING SW [Off/On]	Displays the status of the PASSING switch in combination switch judged by BCM with the combination switch reading function.
AUTO LIGHT SW [Off/On]	Displays the status of the AUTO LIGHT switch in combination switch judged by BCM with the combination switch reading function.
FR FOG SW [Off/On]	Displays the status of the FR FOG switch in combination switch judged by BCM with the combination switch reading function.
RR FOG SW [Off/On]	NOTE: The item is indicated, but not monitored.

BCM

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

BCM : CONSULT-III Function (BCM - BCM)

INFOID:000000006348538

WORK SUPPORT

Item	Description
RESET SETTING VALUE	Return a value set with Work Support of each system to a default value in factory shipment.

IMMU

IMMU : CONSULT-III Function (BCM - IMMU)

INFOID:000000006937036

DATA MONITOR

Monitor item	Content
CONFIRM ID ALL	Indicates [YET] at all time. Switch to [DONE] when a registered Intelligent Key is inserted into the key slot.
CONFIRM ID4	
CONFIRM ID3	
CONFIRM ID2	
CONFIRM ID1	
TP 4	Indicates the number of ID which has been registered.
TP 3	
TP 2	
TP 1	
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch.
KEY SW -SLOT	Indicates [ON/OFF] condition of key slot.

ACTIVE TEST

Test item	Description
THEFT IND	This test is able to check security indicator lamp operation. The lamp will be turned on when "ON" on CONSULT-III screen touched.

BATTERY SAVER

BATTERY SAVER : CONSULT-III Function (BCM - BATTERY SAVER)

INFOID:000000006937053

WORK SUPPORT

Service item	Setting item	Setting	
BATTERY SAVER SET	On*	With the exterior lamp battery saver function	
	Off	Without the exterior lamp battery saver function	
ROOM LAMP BAT SAV SET	On*	With the interior room lamp battery saver function	
	Off	Without the interior room lamp battery saver function	
ROOM LAMP TIMER SET	MODE 1	30 min.	Sets the interior room lamp battery saver timer operating time.
	MODE 2	60 min.	
	MODE 3*	15 min.	

*: Initial setting

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor item [Unit]	Description	
REQ SW-DR [On/Off]	The switch status input from request switch (driver side)	A
REQ SW-AS [On/Off]	The switch status input from request switch (passenger side)	B
REQ SW-RR [On/Off]	NOTE: The item is indicated, but not monitored.	C
REQ SW-RL [On/Off]		D
PUSH SW [On/Off]	The switch status input from push-button ignition switch	E
KEY SW-SLOT [On/Off]	Key switch status input from key slot	F
UNLK SEN-DR [On/Off]	Driver door unlock status input from unlock sensor	G
DOOR SW-DR [On/Off]	The switch status input from front door switch (driver side)	H
DOOR SW-AS [On/Off]	The switch status input from front door switch (passenger side)	I
DOOR SW-RR [On/Off]	The switch status input from rear door switch RH	J
DOOR SW- RL [On/Off]	The switch status input from rear door switch LH	K
DOOR SW-BK [On/Off]	The switch status input from back door switch	L
CDL LOCK SW [On/Off]	Lock switch status received from central door lock switch by power window switch serial link	BCS
CDL UNLOCK SW [On/Off]	Unlock switch status received from central door lock switch by power window switch serial link	
KEY CYL LK-SW [On/Off]	Lock switch status received from key cylinder switch by power window switch serial link	
KEY CYL UN-SW [On/Off]	Unlock switch status received from key cylinder switch by power window switch serial link	
TRNK/HAT MNTR [On/Off]	NOTE: The item is indicated, but not monitored.	N
RKE-LOCK [On/Off]	Lock signal status received from remote keyless entry receiver	O
RKE-UNLOCK [On/Off]	Unlock signal status received from remote keyless entry receiver	P

ACTIVE TEST

Test item	Operation	Description
BATTERY SAVER	Off	Cuts the interior room lamp power supply to turn interior room lamp OFF.
	On	Outputs the interior room lamp power supply to turn interior room lamp ON.*

*: Each lamp switch is in ON position.

TRUNK

TRUNK : CONSULT-III Function (BCM - TRUNK)

INFOID:000000006937029

BCM CONSULT-III FUNCTION

CONSULT-III performs the following functions via CAN communication with BCM.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Diagnosis mode	Function Description
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.

DATA MONITOR

Monitor Item	Contents
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch.
UNLK SEN -DR	Indicates [ON/OFF] condition of driver door UNLOCK status.
VEH SPEED 1	Indicates [Km/h] condition of vehicle speed signal from combination meter.
KEY CYL SW-TR	NOTE: This item is displayed, but cannot be monitored.
TR CANCEL SW	NOTE: This item is displayed, but cannot be monitored.
TR/BD OPEN SW	Indicates [ON/OFF] condition of back door opener switch.
TRNK/HAT MNTR	NOTE: This item is displayed, but cannot be monitored.
RKE-TR/BD*	NOTE: This item is displayed, but cannot be monitored.

ACTIVE TEST

Test item	Description
TRUNK/GLASS HATCH	This test is able to check back door opener actuator open operation. This actuator opens when " "

THEFT ALM

THEFT ALM : CONSULT-III Function (BCM - THEFT)

INFOID:0000000006937035

DATA MONITOR

Monitored Item	Description
REQ SW -DR	Indicates [ON/OFF] condition of door request switch (driver side).
REQ SW -AS	Indicates [ON/OFF] condition of door request switch (passenger side).
REQ SW -RR	NOTE: This is displayed even when it is not equipped.
REQ SW -RL	NOTE: This is displayed even when it is not equipped.
REQ SW -BD/TR	Indicates [ON/OFF] condition of back door request switch.
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch
UNLK SEN -DR	Indicates [ON/OFF] condition of driver door UNLOCK status.
KEY SW -SLOT	Indicates [ON/OFF] condition of key slot.
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch LH.
DOOR SW-AS	Indicates [ON/OFF] condition of front door switch RH.
DOOR SW-RR	Indicates [ON/OFF] condition of rear door switch RH.
DOOR SW-RL	Indicates [ON/OFF] condition of rear door switch LH.
DOOR SW-BK	Indicates [ON/OFF] condition of back door switch.
CDL LOCK SW	Indicates [ON/OFF] condition of lock signal from door lock/unlock switch LH and RH.
CDL UNLOCK SW	Indicates [ON/OFF] condition of unlock signal from door lock/unlock switch LH and RH.
KEY CYL LK-SW	Indicates [ON/OFF] condition of lock signal from front door key cylinder switch.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitored Item	Description
KEY CYL UN-SW	Indicates [ON/OFF] condition of unlock signal from front door key cylinder switch.
KEY CYL SW-TR	NOTE: This is displayed even when it is not equipped.
TR/BD OPEN SW	Indicates [ON/OFF] condition of back door opener switch.
TRNK/HAT MNTR	NOTE: This is displayed even when it is not equipped.
RKE-LOCK	Indicates [ON/OFF] condition of LOCK signal from Intelligent Key.
RKE-UNLOCK	Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key.
RKE-TR/BD	NOTE: This is displayed even when it is not equipped.

WORK SUPPORT

Test Item	Description
SECURITY ALARM SET	This mode is able to confirm and change security alarm ON-OFF setting.
THEFT ALM TRG	The switch which triggered vehicle security alarm is recorded. This mode is able to confirm and erase the record of vehicle security alarm. The trigger data can be erased by touching "CLEAR" on CONSULT-III screen.

ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator lamp operation. The lamp will be turned on when "ON" on CONSULT-III screen is touched.
VEHICLE SECURITY HORN	This test is able to check vehicle security horn operation. The horns will be activated for 0.5 seconds after "ON" on CONSULT-III screen is touched.
HEADLAMP(HI)	This test is able to check vehicle security lamp operation. The headlamps will be activated for 0.5 seconds after "ON" on CONSULT-III screen is touched.
FLASHER	This test is able to check vehicle security hazard lamp operation. The hazard lamps will be activated after "ON" on CONSULT-III screen is touched.

RETAININD PWR

RETAININD PWR : CONSULT-III Function (BCM - RETAINED PWR)

INFOID:0000000006937041

Data monitor

Monitor Item	Description
DOOR SW-DR	Indicates [ON/OFF] condition of driver side door switch.
DOOR SW-AS	Indicates [ON/OFF] condition of passenger side door switch.

SIGNAL BUFFER

SIGNAL BUFFER : CONSULT-III Function (BCM - SIGNAL BUFFER)

INFOID:0000000006348544

DATA MONITOR

Monitor item [UNIT]	Description
PUSH SW [Off/On]	Displays the status of the push-button ignition switch (push switch) judged by BCM.

ACTIVE TEST

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Test item	Operation	Description
OIL PRESSURE SW	Off	OFF
	On	BCM transmits the oil pressure switch signal to the unified meter and A/C amp. via CAN communication, which illuminates the oil pressure warning lamp in the combination meter.

AIR PRESSURE MONITOR

AIR PRESSURE MONITOR : CONSULT-III Function (BCM - AIR PRESSURE MONITOR)

INFOID:000000006937043

WORK SUPPORT MODE

ID Read

The registered ID number is displayed.

ID Regist

Refer to [WT-21, "Work Procedure"](#).

SELF-DIAG RESULTS MODE

Operation Procedure

Refer to [BCS-80, "DTC Index"](#).

DATA MONITOR MODE

Screen of data monitor mode is displayed.

NOTE:

When malfunction is detected, CONSULT-III perform REAL-TIME DIAGNOSIS.

Also, any malfunction detected while in this mode will be displayed at real time.

Display item list

Monitor	Condition	Specification
AIR PRESS FL AIR PRESS FR AIR PRESS RR AIR PRESS RL	<ul style="list-style-type: none"> Drive vehicle for a few minutes. or Ignition switch ON and transmitter activation tool is transmitting activation signals. 	Tire pressure (kPa, kg/cm ² or Psi)
ID REGST FL1 ID REGST FR1 ID REGST RR1 ID REGST RL1		Registration ID: Green No registration: Red
WARNING LAMP	Ignition switch ON	Low tire pressure warning lamp ON: on Low tire pressure warning lamp OFF: off
BUZZER		Buzzer in combination meter ON: on Buzzer in combination meter OFF: off

NOTE:

Before performing the self-diagnosis, be sure to register the ID, or erase the actual malfunction location may be different from that displayed on CONSULT-III.

ACTIVE TEST MODE

NOTE:

Before performing the self-diagnosis, be sure to register the ID, or erase the actual malfunction may be different from that displayed on CONSULT-III.

TEST ITEM LIST

Test item	Content
WARNING LAMP	This test is able to check to check that the low tire pressure warning lamp turns on.
ID REGIST WARNING	This test is able to check to check that the buzzer sounds or the low tire pressure warning lamp turns on.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Test item	Content
FLASHER	This test is able to check that each turn signal lamp turns on.
HORN	This test is able to check that the horn sounds.

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:000000006348547

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H-line, CAN L-line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-25, "CAN Communication Signal Chart"](#).

DTC Logic

INFOID:000000006348548

DTCT DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible cause
U1000	CAN COMM	When BCM cannot communicate CAN communication signal continuously for 2 seconds or more.	CAN communication system

Diagnosis Procedure

INFOID:000000006348549

1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result".

Is DTC "U1000" displayed?

YES >> Refer to [LAN-16, "Trouble Diagnosis Flow Chart"](#).
NO >> Refer to [GI-42, "Intermittent Incident"](#).

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

U1010 CONTROL UNIT (CAN)

DTC Logic

INFOID:0000000006348550

DTC DETECTION LOGIC

DTC	CONSULT-III display de- scription	DTC Detection Condition	Possible cause
U1010	CONTROL UNIT(CAN)	BCM detected internal CAN communication circuit malfunction.	BCM

Diagnosis Procedure

INFOID:0000000006348551

1 .REPLACE BCM

When DTC "U1010" is detected, replace BCM.

>> Replace BCM. Refer to [BCS-86, "Exploded View"](#).

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

< DTC/CIRCUIT DIAGNOSIS >

U0415 VEHICLE SPEED SIG

Description

INFOID:0000000006348552

U0415 is displayed if any unusual condition is present in the reception status of the vehicle speed signal from the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000006348553

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Probable cause
U0415	VEHICLE SPEED	When the vehicle speed signal received from the ABS actuator and electric unit (control unit) remains abnormal for 2 seconds or more.	<ul style="list-style-type: none">• ABS actuator and electric unit (control unit)• BCM

DTC CONFIRMATION PROCEDURE

1.DTC CONFIRMATION

1. Erase the DTC.
2. Turn ignition switch OFF.
3. Perform the "Self Diagnostic Result" of CONSULT-III, when passed 2 seconds or more after the ignition switch is turned ON.

Is any DTC detected?

YES >> Refer to [BCS-40, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000006348554

1.ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAG RESULTS

Perform "Self-Diagnostic Result" of ABS actuator and electric unit (control unit) with CONSULT-III. Refer to [BCR-31, "CONSULT-III Function"](#).

Is any DTC detected?

YES >> Repair or replace the malfunctioning part.

NO >> Replace BCM. Refer to [BCS-86, "Exploded View"](#).

< DTC/CIRCUIT DIAGNOSIS >

B2562 LOW VOLTAGE

DTC Logic

INFOID:000000006348555

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible cause
B2562	LOW VOLTAGE	When the power supply voltage to BCM remains less than 8.8 V for 120 seconds or more	Harness or connector (power supply circuit)

DTC CONFIRMATION PROCEDURE

1.DTC CONFIRMATION

1. Erase DTC.
2. Turn ignition switch OFF.
3. Perform the "Self Diagnostic Result" of CONSULT-III, when passed 120 seconds or more after the ignition switch is turned ON.

Is any DTC detected?

YES >> Refer to [BCS-41, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006348556

1.CHECK POWER SUPPLY CIRCUIT

Check BCM power supply circuit. Refer to [BCS-42, "Diagnosis Procedure"](#).

Is the circuit normal?

YES >> Replace BCM. Refer to [BCS-86, "Exploded View"](#).

NO >> Repair the malfunctioning part.

BCS

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:0000000006348557

1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Signal name	Fuse and fusible link No.
Battery power supply	K
	10

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.
NO >> GO TO 2.

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
BCM		Ground
Connector	Terminal	
M118	1	
M119	11	Battery voltage

Is the measurement value normal?

YES >> GO TO 3.
NO >> Repair harness or connector.

3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	13		Existed

Does continuity exist?

YES >> INSPECTION END
NO >> Repair harness or connector.

COMBINATION SWITCH INPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

COMBINATION SWITCH INPUT CIRCUIT

Diagnosis Procedure

INFOID:0000000006348558

1. CHECK INPUT 1 - 5 SYSTEM CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect the BCM and combination switch connectors.
3. Check continuity between BCM harness connector and combination switch harness connector.

System	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
INPUT 1	M122	107	M33	11	Existed
INPUT 2		109		9	
INPUT 3		88		7	
INPUT 4		108		10	
INPUT 5		87		13	

Does continuity exist?

YES >> GO TO 2.

NO >> Repair the harnesses or connectors.

2. CHECK INPUT 1 - 5 SYSTEM CIRCUIT FOR SHORT

Check for continuity between BCM harness connector and ground.

System	BCM		Ground	Continuity
	Connector	Terminal		
INPUT 1	M122	107		Not existed
INPUT 2		109		
INPUT 3		88		
INPUT 4		108		
INPUT 5		87		

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> GO TO 3.

3. CHECK BCM OUTPUT VOLTAGE

1. Connect the BCM connector.
2. Check voltage between BCM harness connector and ground.

System	Terminals		Ground	Voltage (Approx.)		
	(+)					
	BCM					
	Connector	Terminal				
INPUT 1	M122	107		Refer to BCS-47, "Reference Value".		
INPUT 2		109				
INPUT 3		88				
INPUT 4		108				
INPUT 5		87				

Is the measurement value normal?

YES >> GO TO 4.

NO >> Replace BCM. Refer to [BCS-86, "Exploded View".](#)

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

COMBINATION SWITCH INPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

4. CHECK BCM INPUT SIGNAL

1. Connect the combination switch connector.
2. Turn ON any switch in the system that is malfunctioning.
3. Check voltage between BCM harness connector and ground.

System	Terminals		Voltage (Approx.)	
	(+) (-)			
	BCM			
	Connector	Terminal		
INPUT 1	M122	107	Refer to BCS- 47, "Refer- ence Value".	
INPUT 2		109		
INPUT 3		88		
INPUT 4		108		
INPUT 5		87		

Is the measurement value normal when any of the switches is turned ON?

YES >> Replace BCM. Refer to [BCS-86, "Exploded View"](#).

NO >> Replace the combination switch.

COMBINATION SWITCH OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

COMBINATION SWITCH OUTPUT CIRCUIT

Diagnosis Procedure

INFOID:0000000006348559

1. CHECK OUTPUT 1 - 5 SYSTEM CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect the BCM and combination switch connectors.

NOTE:

BCM connector disconnects M123 only.

3. Check continuity between BCM harness connector and combination switch harness connector.

System	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
OUTPUT 1	M123	143	M33	12	Existed
OUTPUT 2		144		14	
OUTPUT 3		145		5	
OUTPUT 4		146		2	
OUTPUT 5		142		8	

Does continuity exist?

YES >> GO TO 2.

NO >> Repair the harnesses or connectors.

2. CHECK OUTPUT 1 - 5 SYSTEM CIRCUIT FOR SHORT

Check for continuity between BCM harness connector and ground.

System	BCM		Ground	Continuity
	Connector	Terminal		
OUTPUT 1	M123	143		Not existed
OUTPUT 2		144		
OUTPUT 3		145		
OUTPUT 4		146		
OUTPUT 5		142		

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> GO TO 3.

3. CHECK COMBINATION SWITCH INTERNAL CIRCUIT

1. Connect the combination switch connector.
2. Turn ON any switch in the system that is malfunctioning.
3. Check voltage between combination switch harness connector and ground.

NOTE:


Check that the combination switch outputs a signal from combination switch input system.

BCS

COMBINATION SWITCH OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

System	Terminals		Value (Approx.)
	(+)	(-)	
	Combination switch	Connector	
OUTPUT 1	M33	12	Ground
OUTPUT 2		14	
OUTPUT 3		5	
OUTPUT 4		2	
OUTPUT 5		8	

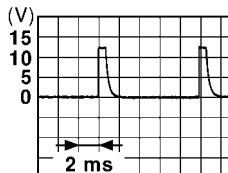

JPMIA0041GB

1.4 V

Is the measurement value normal when any of the switches is turned ON?

YES >> Replace BCM. Refer to [BCS-86, "Exploded View"](#).
NO >> Replace the combination switch.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000006348560

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT	Off
	Front wiper switch INT	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
RR WIPER ON	Other than rear wiper switch ON	Off
	Rear wiper switch ON	On
RR WIPER INT	Other than rear wiper switch INT	Off
	Rear wiper switch INT	On
RR WASHER SW	Rear washer switch OFF	Off
	Rear washer switch ON	On
RR WIPER STOP	Rear wiper is in STOP position	Off
	Rear wiper is not in STOP position	On
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
RR FOG SW	NOTE: The item is indicated, but not monitored.	Off
DOOR SW-DR	Driver door closed	Off
	Driver door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	Rear RH door closed	Off
	Rear RH door opened	On
DOOR SW-RL	Rear LH door closed	Off
	Rear LH door opened	On
DOOR SW-BK	Back door closed	Off
	Back door opened	On
CDL LOCK SW	Other than power door lock switch LOCK	Off
	Power door lock switch LOCK	On
CDL UNLOCK SW	Other than power door lock switch UNLOCK	Off
	Power door lock switch UNLOCK	On
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	Off
	Driver door key cylinder LOCK position	On
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	Off
	Driver door key cylinder UNLOCK position	On
KEY CYL SW-TR	NOTE: The item is indicated, but not monitored.	Off
HAZARD SW	Hazard switch is OFF	Off
	Hazard switch is ON	On
REAR DEF SW	NOTE: The item is indicated, but not monitored.	Off
TR CANCEL SW	NOTE: The item is indicated, but not monitored.	Off
TR/BD OPEN SW	Back door opener switch OFF	Off
	While the back door opener switch is turned ON	On
TRNK/HAT MNTR	NOTE: The item is indicated, but not monitored.	Off
RKE-LOCK	LOCK button of the key is not pressed	Off
	LOCK button of the key is pressed	On
RKE-UNLOCK	UNLOCK button of the key is not pressed	Off
	UNLOCK button of the key is pressed	On
RKE-TR/BD	NOTE: The item is indicated, but not monitored.	Off
RKE-PANIC	PANIC button of the key is not pressed	Off
	PANIC button of the key is pressed	On
RKE-P/W OPEN	UNLOCK button of the key is not pressed	Off
	UNLOCK button of the key is pressed and held	On
RKE-MODE CHG	LOCK/UNLOCK button of the key is not pressed and held simultaneously	Off
	LOCK/UNLOCK button of the key is pressed and held simultaneously	On
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V
	Dark outside of the vehicle	Close to 0 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
REQ SW -DR	Driver door request switch is not pressed	Off
	Driver door request switch is pressed	On
REQ SW -AS	Passenger door request switch is not pressed	Off
	Passenger door request switch is pressed	On
REQ SW -RR	NOTE: The item is indicated, but not monitored.	Off
REQ SW -RL	NOTE: The item is indicated, but not monitored.	Off
REQ SW -BD/TR	Back door request switch is not pressed	Off
	Back door request switch is pressed	On
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off
	Push-button ignition switch (push switch) is pressed	On
IGN RLY2 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
ACC RLY -F/B	NOTE: The item is indicated, but not monitored.	Off
CLUCH SW	NOTE: The item is indicated, but not monitored.	Off
BRAKE SW 1	The brake pedal is depressed when No. 7 fuse is blown	Off
	The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal	On
BRAKE SW 2	The brake pedal is not depressed	Off
	The brake pedal is depressed	On
DETE/CANCL SW	Selector lever in P position	Off
	Selector lever in any position other than P	On
SFT PN/N SW	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
S/L -LOCK NOTE: For models without steering lock unit, this item is not monitored.	Steering is unlocked	Off
	Steering is locked	On
S/L -UNLOCK NOTE: For models without steering lock unit, this item is not monitored.	Steering is locked	Off
	Steering is unlocked	On
S/L RELAY-F/B NOTE: For models without steering lock unit, this item is not monitored.	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
UNLK SEN -DR	Driver door is unlocked	Off
	Driver door is locked	On
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off
	Push-button ignition switch (push-switch) is pressed	On
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
DETE SW -IPDM	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT PN -IPDM	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
SFT P -MET	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT N -MET	Selector lever in any position other than N	Off
	Selector lever in N position	On
ENGINE STATE	Engine stopped	Stop
	While the engine stalls	Stall
	At engine cranking	Crank
	Engine running	Run
S/L LOCK-IPDM NOTE: For models without steering lock unit, this item is not monitored.	Steering is unlocked	Off
	Steering is locked	On
S/L UNLK-IPDM NOTE: For models without steering lock unit, this item is not monitored.	Steering is locked	Off
	Steering is unlocked	On
S/L RELAY-REQ NOTE: For models without steering lock unit, this item is not monitored.	Steering lock system is not the LOCK condition and the changing condition from LOCK to UNLOCK.	Off
	Steering lock system is the LOCK condition or the changing condition from LOCK to UNLOCK.	On
VEH SPEED 1	While driving	Equivalent to speedometer reading
VEH SPEED 2	While driving	Equivalent to speedometer reading
DOOR STAT-DR	Driver door is locked	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Driver door is unlocked	UNLOCK
DOOR STAT-AS	Passenger door is locked	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Passenger door is unlocked	UNLOCK
ID OK FLAG	Steering is locked	Reset
	Steering is unlocked	Set
PRMT ENG STRT	The engine start is prohibited	Reset
	The engine start is permitted	Set
PRMT RKE STRT	NOTE: The item is indicated, but not monitored.	Reset
KEY SW -SLOT	The key is not inserted into key slot	Off
	The key is inserted into key slot	On
RKE OPE COUN1	During the operation of the key	Operation frequency of the key
RKE OPE COUN2	NOTE: The item is indicated, but not monitored.	—
CONFIRM ID ALL	The key ID that the key slot receives does not accord with any key ID registered to BCM.	Yet
	The key ID that the key slot receives accords with any key ID registered to BCM.	Done
CONFIRM ID4	The key ID that the key slot receives does not accord with the fourth key ID registered to BCM.	Yet
	The key ID that the key slot receives accords with the fourth key ID registered to BCM.	Done

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
CONFIRM ID3	The key ID that the key slot receives does not accord with the third key ID registered to BCM.	Yet
	The key ID that the key slot receives accords with the third key ID registered to BCM.	Done
CONFIRM ID2	The key ID that the key slot receives does not accord with the second key ID registered to BCM.	Yet
	The key ID that the key slot receives accords with the second key ID registered to BCM.	Done
CONFIRM ID1	The key ID that the key slot receives does not accord with the first key ID registered to BCM.	Yet
	The key ID that the key slot receives accords with the first key ID registered to BCM.	Done
TP 4	The ID of fourth key is not registered to BCM	Yet
	The ID of fourth key is registered to BCM	Done
TP 3	The ID of third key is not registered to BCM	Yet
	The ID of third key is registered to BCM	Done
TP 2	The ID of second key is not registered to BCM	Yet
	The ID of second key is registered to BCM	Done
TP 1	The ID of first key is not registered to BCM	Yet
	The ID of first key is registered to BCM	Done
AIR PRESS FL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front LH tire
AIR PRESS FR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front RH tire
AIR PRESS RR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear RH tire
AIR PRESS RL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear LH tire
ID REGST FL1	ID of front LH tire transmitter is registered	Done
	ID of front LH tire transmitter is not registered	Yet
ID REGST FR1	ID of front RH tire transmitter is registered	Done
	ID of front RH tire transmitter is not registered	Yet
ID REGST RR1	ID of rear RH tire transmitter is registered	Done
	ID of rear RH tire transmitter is not registered	Yet
ID REGST RL1	ID of rear LH tire transmitter is registered	Done
	ID of rear LH tire transmitter is not registered	Yet
WARNING LAMP	Tire pressure indicator OFF	Off
	Tire pressure indicator ON	On
BUZZER	Tire pressure warning alarm is not sounding	Off
	Tire pressure warning alarm is sounding	On

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

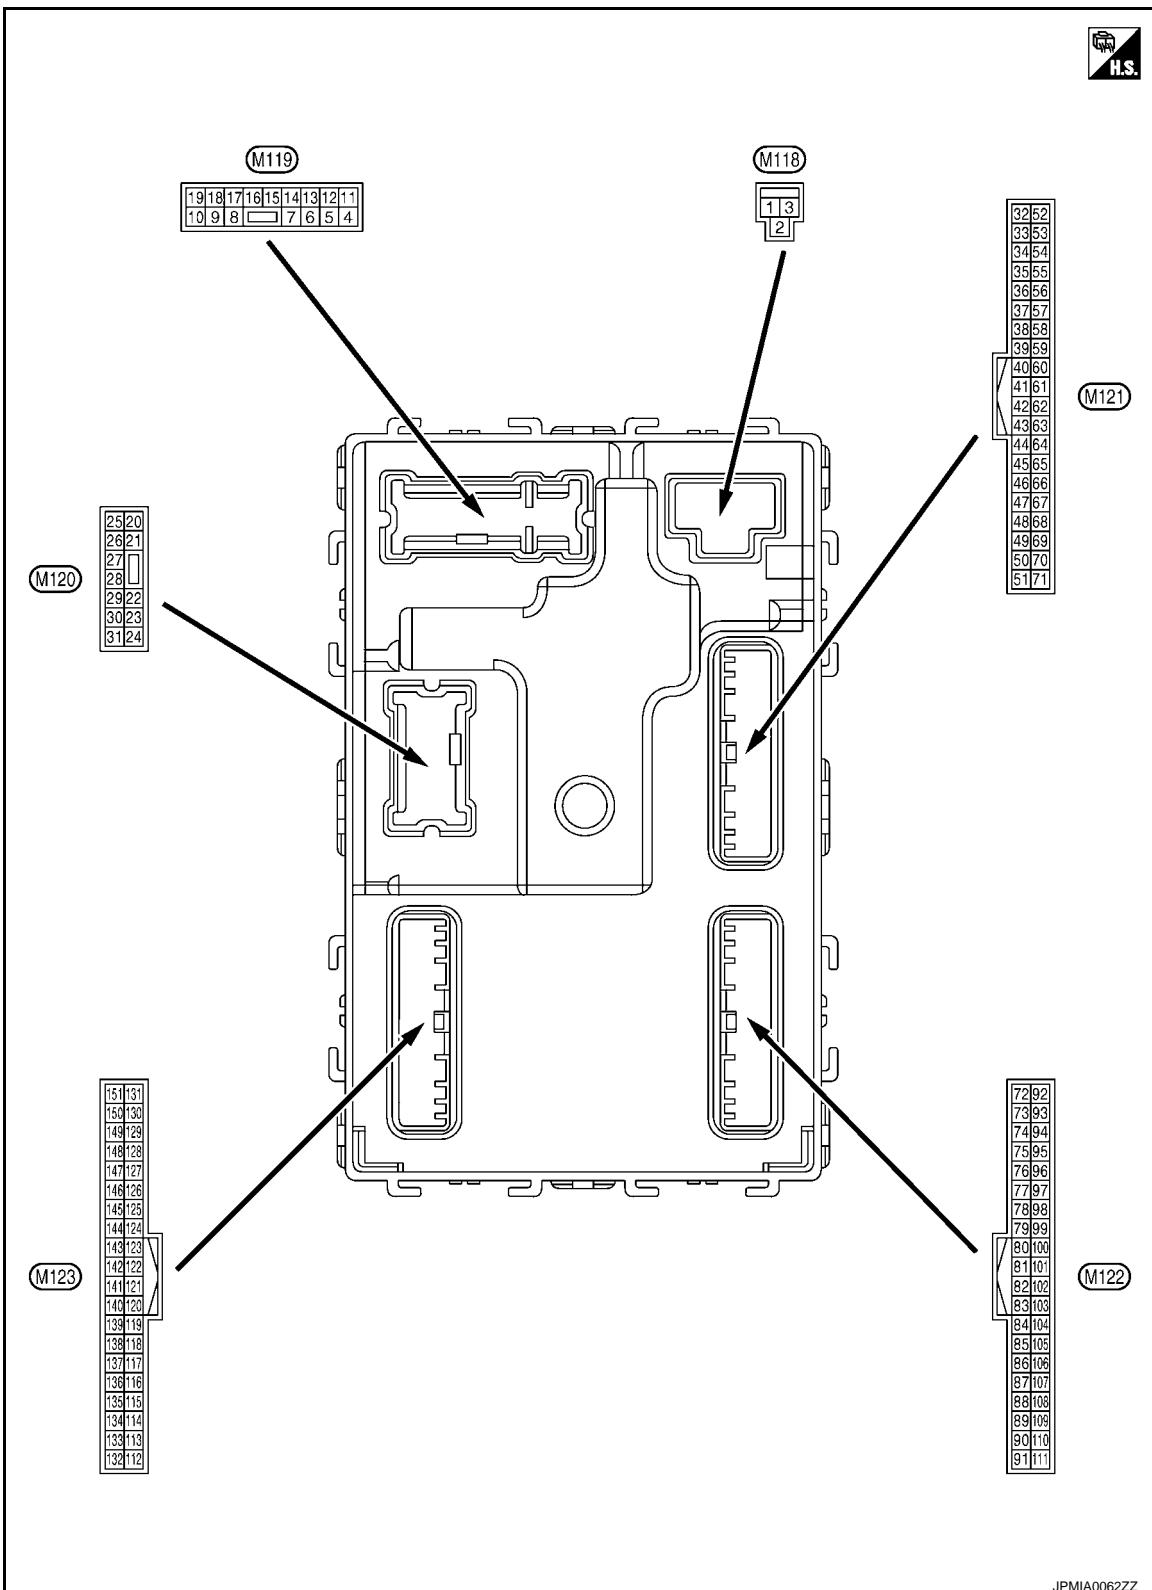
O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

TERMINAL LAYOUT



PHYSICAL VALUES

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
2 (W)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF	Battery voltage
3 (Y)	Ground	P/W power supply (RAP)	Output	Ignition switch ON	Battery voltage
4 (LG)	Ground	Interior room lamp power supply	Output	Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)	0 V
				Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)	Battery voltage
5 (L)	Ground	Passenger door UN- LOCK	Output	Passenger door	UNLOCK (Actuator is activated)
					0 V
7 (Y)	Ground	Step lamp	Output	Step lamp	ON
					Battery voltage
8 (V)	Ground	All doors, fuel lid LOCK	Output	All doors	LOCK (Actuator is activated)
					0 V
9 (G)	Ground	Driver door, fuel lid UNLOCK	Output	Driver door	UNLOCK (Actuator is activated)
					0 V
10 (BR)	Ground	Rear RH door and rear LH door UN- LOCK	Output	Rear RH door and rear LH door	UNLOCK (Actuator is activated)
					0 V
11 (R)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON	0 V
14 (W)	Ground	Push-button ignition switch illumination ground	Output	Tail lamp	OFF
					ON
15 (Y)	Ground	ACC indicator lamp	Output	Ignition switch	OFF or ON
					ACC

A

B

C

D

E

F

G

H

I

J

K

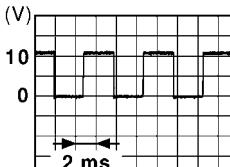
L

BCS

N

O





P



JSNIA0010GB







BCM (BODY CONTROL MODULE)
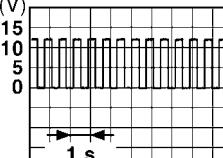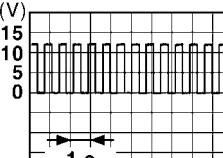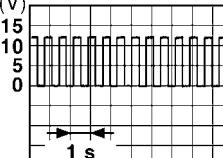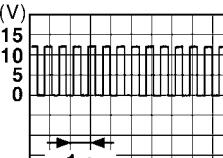
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
17 (W)	Ground	Turn signal RH (Front)	Output	Ignition switch ON Turn signal switch RH
				Turn signal switch OFF  6.5 V
18 (BG)	Ground	Turn signal LH (Front)	Output	Ignition switch ON Turn signal switch LH
				Turn signal switch OFF  6.5 V
19 (V)	Ground	Room lamp timer control	Output	Interior room lamp OFF ON
				Battery voltage 0 V
20 (V)	Ground	Turn signal RH (Rear)	Output	Ignition switch ON Turn signal switch RH
				Turn signal switch OFF  6.5 V
23 (G)	Ground	Back door open	Output	Back door OPEN (Back door opener actuator is activated) Other than OPEN (Back door opener actuator is not activated)
				Battery voltage 0 V
25 (G)	Ground	Turn signal LH (Rear)	Output	Ignition switch ON Turn signal switch LH
				Turn signal switch OFF  6.5 V
26 (G)	Ground	Rear wiper	Output	Rear wiper OFF (Stopped) ON (Operated)
				0 V Battery voltage




BCM (BODY CONTROL MODULE)
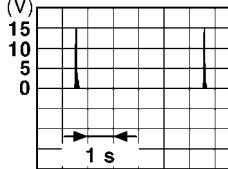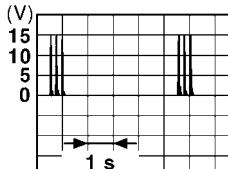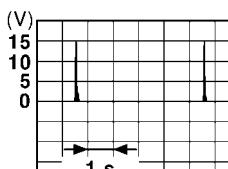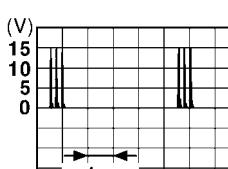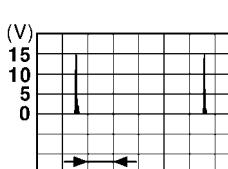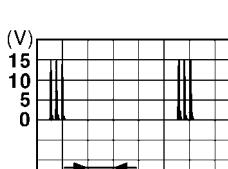
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)	A B C D E F G H I J K L BCS N O P	
	+	-	Signal name	Input/ Output		
34 (SB)	Ground	Luggage room antenna (-)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JKMKA0062GB
					When Intelligent Key is not in the passenger compart- ment	 JKMKA0063GB
35 (V)	Ground	Luggage room antenna (+)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JKMKA0062GB
					When Intelligent Key is not in the passenger compart- ment	 JKMKA0063GB
38 (B)	Ground	Back door antenna (-)	Output	When the back door opener re- quest switch is operated with ig- nition switch OFF	When Intelligent Key is in the antenna detection area	 JKMKA0062GB
					When Intelligent Key is not in the antenna detection area	 JKMKA0063GB





BCM (BODY CONTROL MODULE)
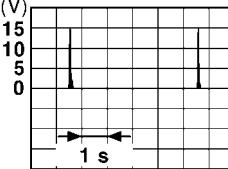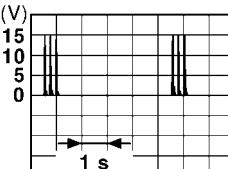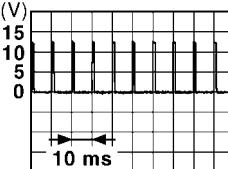
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
39 (W)	Ground	Back door antenna (+)	Output	When the back door opener request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	(V)  JMKA0062GB
					When Intelligent Key is not in the antenna detection area	(V)  JMKA0063GB
47 (Y)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0 V
52 (SB)	Ground	Starter relay control	Output	Ignition switch ON	When selector lever is in P or N position	Battery voltage
					When selector lever is not in P or N position	0 V
60* ¹ (BR)	Ground	Push-button ignition switch (Push switch)	Input	Push-button ignition switch (push switch)	Pressed	0 V
					Not pressed	Battery voltage
61 (W)	Ground	Back door opener request switch	Input	Back door opener request switch	ON (Pressed)	0 V
					OFF (Not pressed)	(V)  1.0 V JPMIA0016GB
64 (V)	Ground	Intelligent Key warning buzzer (Engine room)	Output	Intelligent Key warning buzzer (Engine room)	Sounding	0 V
					Not sounding	Battery voltage
65 (BG)	Ground	Rear wiper stop position	Input	Rear wiper	In stop position	(V)  1.0 V JPMIA0016GB
					Not in stop position	0 V





BCM (BODY CONTROL MODULE)
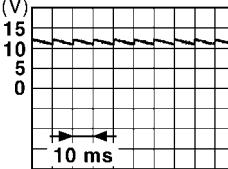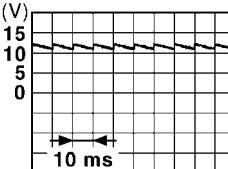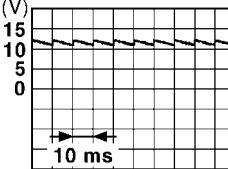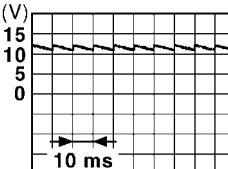
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)	A B C D E F G H I J K L BCS N O P	
	+	-	Signal name	Input/ Output		
66 (R)	Ground	Back door switch	Input	Back door switch	OFF (Door close)	 11.8 V
					ON (Door open)	0 V
67 (GR)	Ground	Back door opener switch	Input	Back door opener switch	Pressed	0 V
					Not pressed	 11.8 V
68 (BR)	Ground	Rear RH door switch	Input	Rear RH door switch	OFF (Door close)	 11.8 V
					ON (Door open)	0 V
69 (R)	Ground	Rear LH door switch	Input	Rear LH door switch	OFF (Door close)	 11.8 V
					ON (Door open)	0 V







BCM (BODY CONTROL MODULE)
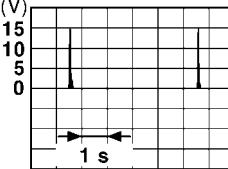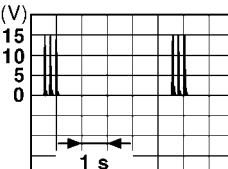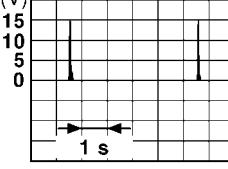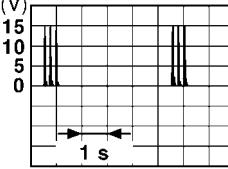
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
72 (R)	Ground	Room antenna 2 (-) (Center console)	Output Ignition switch OFF	When Intelligent Key is in the passenger compart- ment
				 (V) 15 10 5 0 JMKA0062GB
73 (G)	Ground	Room antenna 2 (+) (Center console)	Output Ignition switch OFF	When Intelligent Key is not in the passenger compart- ment
				 (V) 15 10 5 0 1 s JMKA0063GB
74 (SB)	Ground	Passenger door an- tenna (-)	Output When the pas- senger door re- quest switch is operated with ig- nition switch OFF	When Intelligent Key is in the antenna detection area
				 (V) 15 10 5 0 1 s JMKA0062GB
				When Intelligent Key is not in the antenna detection area
				 (V) 15 10 5 0 1 s JMKA0063GB



BCM (BODY CONTROL MODULE)
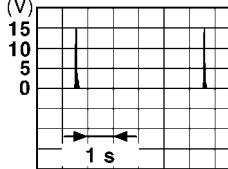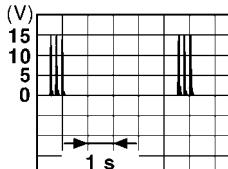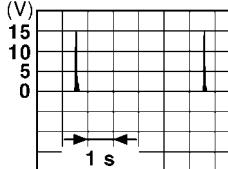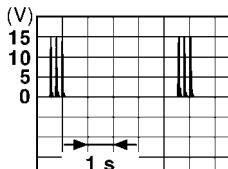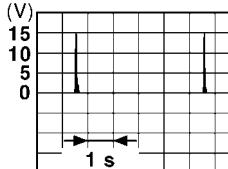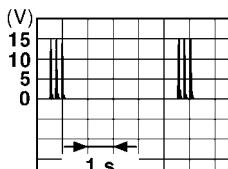
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)	A B C D E F G H I J K L BCS N O P	
	+	-	Signal name	Input/ Output		
75 (GR)	Ground	Passenger door antenna (+)	Output	When the passenger door request switch is operated with ignition switch OFF	 When Intelligent Key is in the antenna detection area	JMKA0062GB
				When Intelligent Key is not in the antenna detection area	 When Intelligent Key is not in the antenna detection area	
76 (V)	Ground	Driver door antenna (-)	Output	When the driver door request switch is operated with ignition switch OFF	 When Intelligent Key is in the antenna detection area	JMKA0062GB
				When Intelligent Key is not in the antenna detection area	 When Intelligent Key is not in the antenna detection area	
77 (LG)	Ground	Driver door antenna (+)	Output	When the driver door request switch is operated with ignition switch OFF	 When Intelligent Key is in the antenna detection area	JMKA0062GB
				When Intelligent Key is not in the antenna detection area	 When Intelligent Key is not in the antenna detection area	







BCM (BODY CONTROL MODULE)
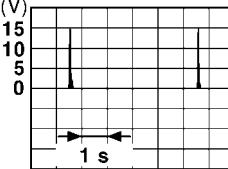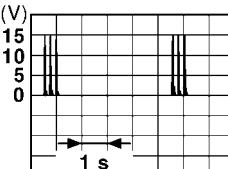
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)		
	Signal name	Input/ Output				
+	-					
78 (Y)	Ground	Room antenna 1 (−) (Instrument panel)	Output Ignition switch OFF	When Intelligent Key is in the passenger compart- ment		
				 (V) 15 10 5 0 1 s JKMKA0062GB		
79 (BR)	Ground	Room antenna 1 (+) (Instrument panel)	Output Ignition switch OFF	When Intelligent Key is not in the passenger compart- ment		
				 (V) 15 10 5 0 1 s JKMKA0063GB		
80 (GR)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
81 (W)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
82 (R)	Ground	Ignition relay [Fuse block (J/B)] control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage







BCM (BODY CONTROL MODULE)
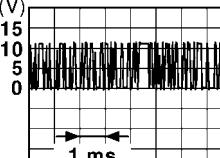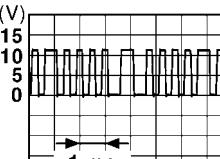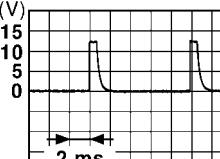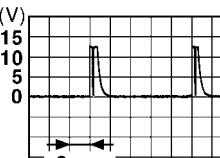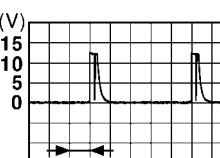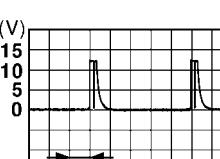
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)	A B C D E F G H I J K L BCS N O P	
	+	-	Signal name	Input/ Output		
83 (Y)	Ground	Remote keyless entry receiver communication	Input/ Output	During waiting	(V) 15 10 5 0  JMKA0064GB	A B C D E F G H I J K L BCS N O P
				When operating either button on the key	(V) 15 10 5 0  JMKA0065GB	
87 (BR)	Ground	Combination switch INPUT 5	Input	All switches OFF (Wiper intermittent dial 4)	(V) 15 10 5 0  JPMIA0041GB 1.4 V	A B C D E F G H I J K L BCS N O P
				Front fog lamp switch ON (Wiper intermittent dial 4)	(V) 15 10 5 0  JPMIA0037GB 1.3 V	
				Rear wiper switch ON (Wiper intermittent dial 4)	(V) 15 10 5 0  JPMIA0039GB 1.3 V	
				Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7 	(V) 15 10 5 0  JPMIA0040GB 1.3 V	




BCM (BODY CONTROL MODULE)
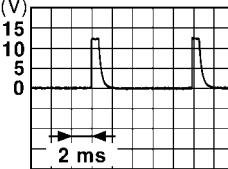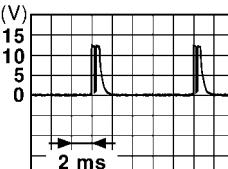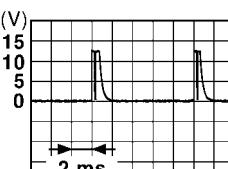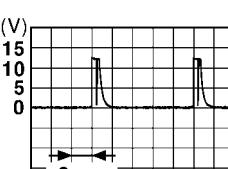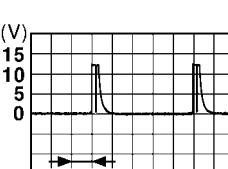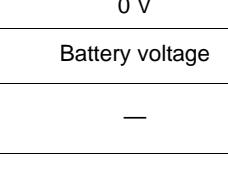
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
88 (V)	Ground	Combination switch INPUT 3	Input	 All switches OFF (Wiper intermittent dial 4)
89* ² (BR)	Ground	Push-button ignition switch (Push switch)	Input	 Lighting switch HI (Wiper intermittent dial 4)
90 (P)	Ground	CAN-L	Input/ Output	 Lighting switch 2ND (Wiper intermittent dial 4)
91 (L)	Ground	CAN-H	Input/ Output	 Rear washer switch ON (Wiper intermittent dial 4)
			 Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 	 1.3 V

BCM (BODY CONTROL MODULE)
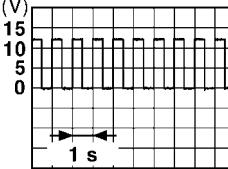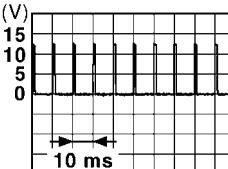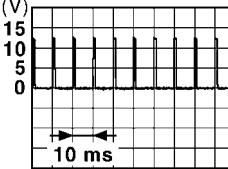
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
92 (LG)	Ground	Key slot illumination	Output	Key slot illumination	OFF	Battery voltage
					Blinking	 1 s
					ON	6.5 V
93 (V)	Ground	ON indicator lamp	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0 V
94 (Y)	Ground	Puddle lamp control	Output	Puddle lamp	OFF	Battery voltage
					ON	0 V
95 (BG)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	Battery voltage
96 (GR)	Ground	A/T shift selector (Detention switch) power supply	Output	—		Battery voltage
97* ² (L)	Ground	Steering lock condition No. 1	Input	Steering lock	LOCK status	0 V
					UNLOCK status	Battery voltage
98* ² (P)	Ground	Steering lock condition No. 2	Input	Steering lock	LOCK status	Battery voltage
					UNLOCK status	0 V
99 (R)	Ground	Selector lever P position switch	Input	Selector lever	P position	0 V
					Any position other than P	Battery voltage
100 (G)	Ground	Passenger door request switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 10 ms
					ON (Pressed)	1.0 V
101 (SB)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 10 ms
					ON (Pressed)	1.0 V
102 (BG)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage

A

B

C

D

E

F

G

H

I

J

K

BCS

L

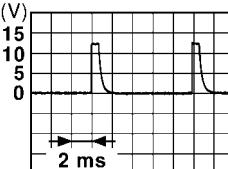
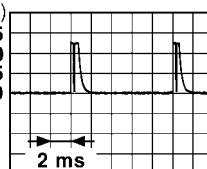
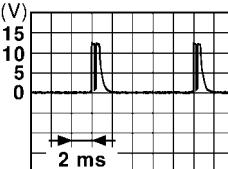
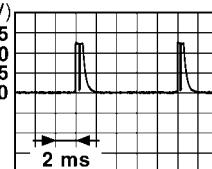
N

O

P






BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	+	-		
103 (LG)	Ground	Remote keyless entry receiver power supply	Output	Ignition switch OFF
106 ² (W)	Ground	Steering lock unit power supply	Output	Ignition switch OFF or ACC ON
107 (LG)	Ground	Combination switch INPUT 1	Input	All switches OFF
				 1.4 V JPMIA0041GB
				Turn signal switch LH
				 1.3 V JPMIA0037GB
				Turn signal switch RH
				 1.3 V JPMIA0036GB
				Front wiper switch LO
				 1.3 V JPMIA0038GB
				Front washer switch ON






BCM (BODY CONTROL MODULE)
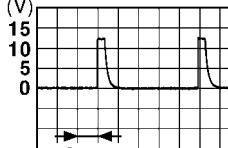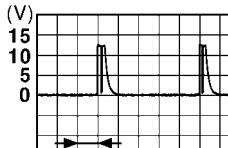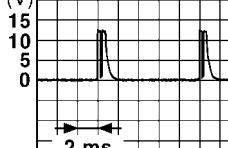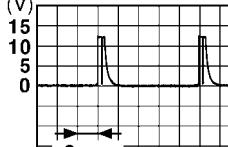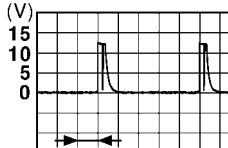
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)	A B C D E F G H I J K L BCS N O P	
	Signal name	Input/ Output				
+	-					
108 (R)	Ground	Combination switch INPUT 4	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 JPMIA0041GB 1.4 V
					Lighting switch AUTO (Wiper intermittent dial 4)	 JPMIA0038GB 1.3 V
					Lighting switch 1ST (Wiper intermittent dial 4)	 JPMIA0036GB 1.3 V
					Rear wiper switch INT (Wiper intermittent dial 4)	 JPMIA0040GB 1.3 V
					Any of the conditions below with all switches OFF • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6	 JPMIA0039GB 1.3 V



BCM (BODY CONTROL MODULE)
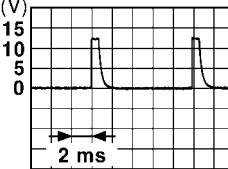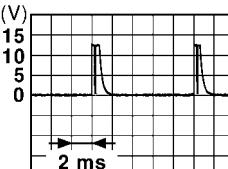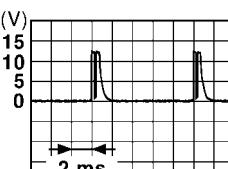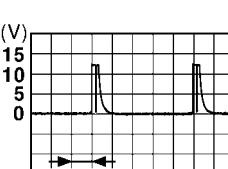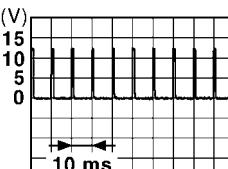
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
109 (Y)	Ground	Combination switch INPUT 2	Input Combination switch (Wiper intermittent dial 4)	All switches OFF  1.4 V JPMIA0041GB
				Lighting switch PASS  1.3 V JPMIA0037GB
				Lighting switch 2ND  1.3 V JPMIA0036GB
				Front wiper switch INT  1.3 V JPMIA0038GB
				Front wiper switch HI  1.3 V JPMIA0040GB
110 (G)	Ground	Hazard switch	Input Hazard switch	ON 0 V
				OFF  1.1 V JPMIA0012GB







BCM (BODY CONTROL MODULE)
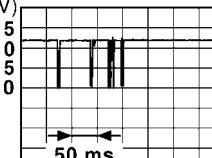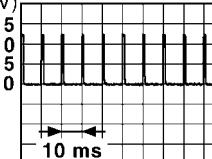
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)	A B C D E F G H I J K L M N O P			
	+	-	Signal name	Input/ Output				
111*2 (Y)	Ground	Steering lock unit communication	Input/ Output	Steering lock	LOCK status	Battery voltage		
					LOCK or UNLOCK	(V) 15 10 5 0  50 ms JMKA0066GB		
					For 15 seconds after UN-LOCK	Battery voltage		
					15 seconds or later after UNLOCK	0 V		
113 (P)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V		
					When dark outside of the vehicle	Close to 0 V		
116 (SB)	Ground	Stop lamp switch 1	Input	—		Battery voltage		
118 (P)	Ground	Stop lamp switch 2 (Without ICC)	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V		
					ON (Brake pedal is depressed)	Battery voltage		
		Stop lamp switch 2 (With ICC)			Stop lamp switch OFF (Brake pedal is not depressed) and ICC brake hold relay OFF	0 V		
					Stop lamp switch ON (Brake pedal is depressed) or ICC brake hold relay ON	Battery voltage		
119 (SB)	Ground	Front door lock assembly driver side (Unlock sensor)	Input	Driver door	LOCK status (Unlock sensor switch OFF)	(V) 15 10 5 0  10 ms JPMIA0012GB 1.1 V		
					UNLOCK status (Unlock switch sensor ON)	0 V		
121 (BR)	Ground	Key slot switch	Input	When the key is inserted into key slot		Battery voltage		
				When the key is not inserted into key slot		0 V		
123 (W)	Ground	IGN feedback	Input	Ignition switch	OFF or ACC	0 V		
					ON	Battery voltage		






BCM (BODY CONTROL MODULE)
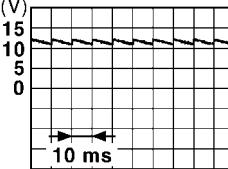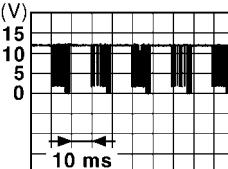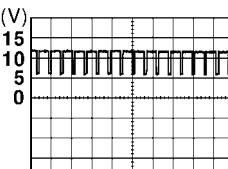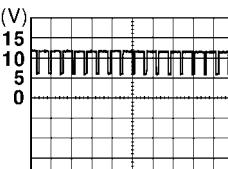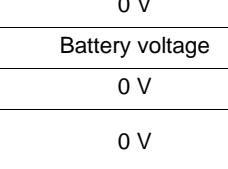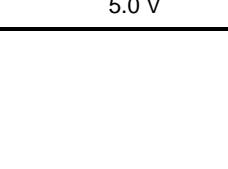
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
124 (LG)	Ground	Passenger door switch	Input	Passenger door switch OFF (Door close)  JPMIA0011GB 11.8 V
				ON (Door open) 0 V
132 (BR)	Ground	Power window switch communication	Input/ Output	Ignition switch ON  JPMIA0013GB 10.2 V
				Ignition switch OFF or ACC Battery voltage
133 (W)	Ground	Push-button ignition switch illumination	Output	ON (Tail lamps OFF)  JPMIA0159GB 9.5 V
				ON (Tail lamps ON)  JPMIA0159GB NOTE: The pulse width of this wave is varied by the illumination brightening/dimming level.
				OFF 0 V
134 (GR)	Ground	LOCK indicator lamp	Output	OFF  0 V
				ON 0 V
137 (BG)	Ground	Receiver and sensor ground	Input	Ignition switch ON 0 V
138 (Y)	Ground	Receiver and sensor power supply	Output	OFF  0 V
				ACC or ON 5.0 V

BCM (BODY CONTROL MODULE)
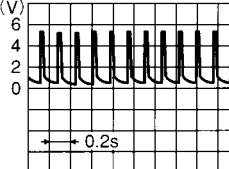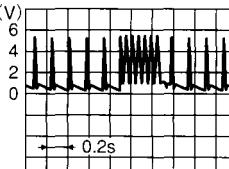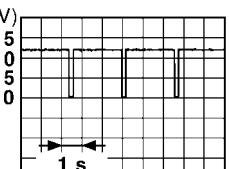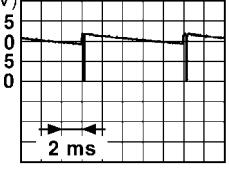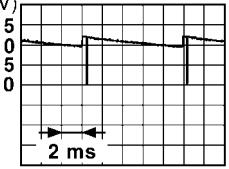
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)	A B C D E F G H I J K L BCS N O P	
	+	-	Signal name	Input/ Output		
139 (L)	Ground	Tire pressure receiver communication	Input/ Output	Ignition switch ON	Standby state	 OCC3881D
					When receiving the signal from the transmitter	 OCC3880D
140 (GR)	Ground	Selector lever P/N position	Input	Selector lever	P or N position	Battery voltage
					Except P and N positions	0 V
141 (G)	Ground	Security indicator	Output	Security indicator	ON	0 V
					Blinking	 JPMIA0014GB 11.3 V
					OFF	Battery voltage
142 (BG)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper intermittent dial 4)	All switches OFF	0 V
					Lighting switch 1ST	
					Lighting switch HI	
					Lighting switch 2ND	
					Turn signal switch RH	 JPMIA0031GB 10.7 V
143 (P)	Ground	Combination switch OUTPUT 1	Output	Combination switch	All switches OFF (Wiper intermittent dial 4)	0 V
					Front wiper switch HI (Wiper intermittent dial 4)	
					Rear wiper switch INT (Wiper intermittent dial 4)	
					Any of the conditions below with all switches OFF	
					<ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 • Wiper intermittent dial 6 • Wiper intermittent dial 7 	
					 JPMIA0032GB 10.7 V	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
144 (G)	Ground	Combination switch OUTPUT 2	Output	All switches OFF (Wiper intermittent dial 4) Front washer switch ON (Wiper intermittent dial 4) Rear wiper switch ON (Wiper intermittent dial 4) Rear washer switch ON (Wiper intermittent dial 4) Any of the conditions below with all switches OFF • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6
145 (L)	Ground	Combination switch OUTPUT 3	Output	All switches OFF Front wiper switch INT Front wiper switch LO Lighting switch AUTO
146 (SB)	Ground	Combination switch OUTPUT 4	Output	All switches OFF Front fog lamp switch ON Lighting switch 2ND Lighting switch PASS Turn signal switch LH
150 (LG)	Ground	Driver door switch	Input	OFF (Door close) ON (Door open)
151 (G)	Ground	Rear window defogger relay control	Output	Active Not activated
				Battery voltage

NOTE:

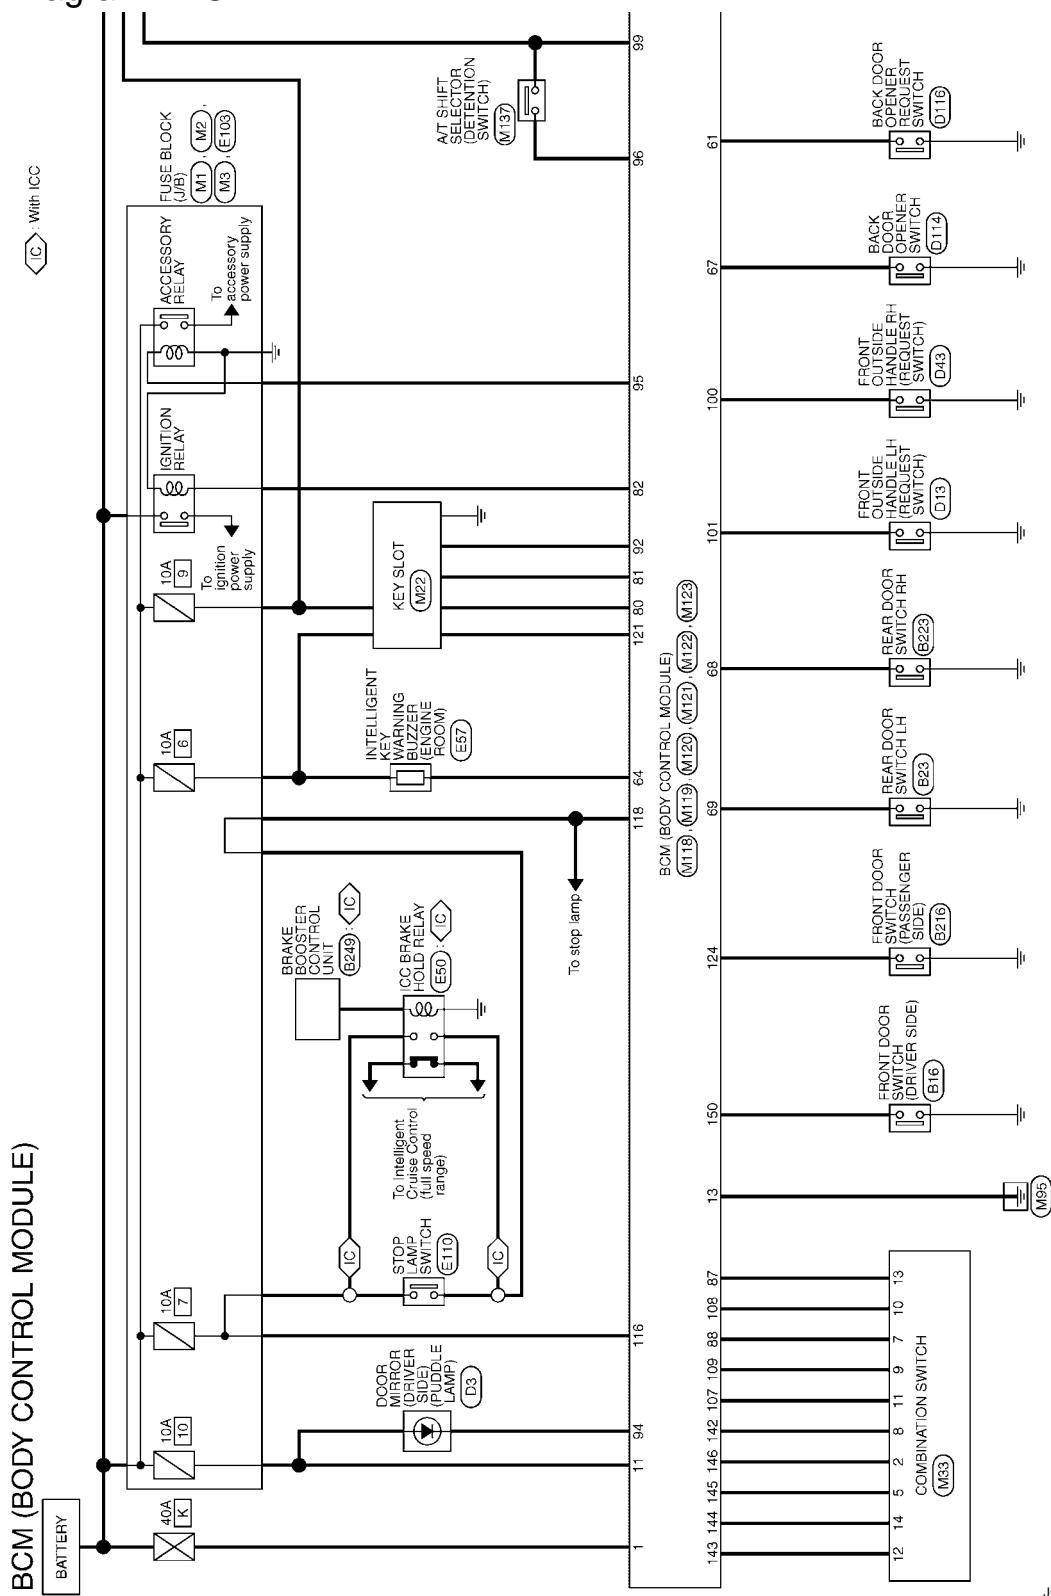
- *1: Without steering lock unit
- *2: With steering lock unit

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Wiring Diagram - BCM -

INFOID:0000000006348561



2010/09/21

JCMWA6166GB

BCS

Z

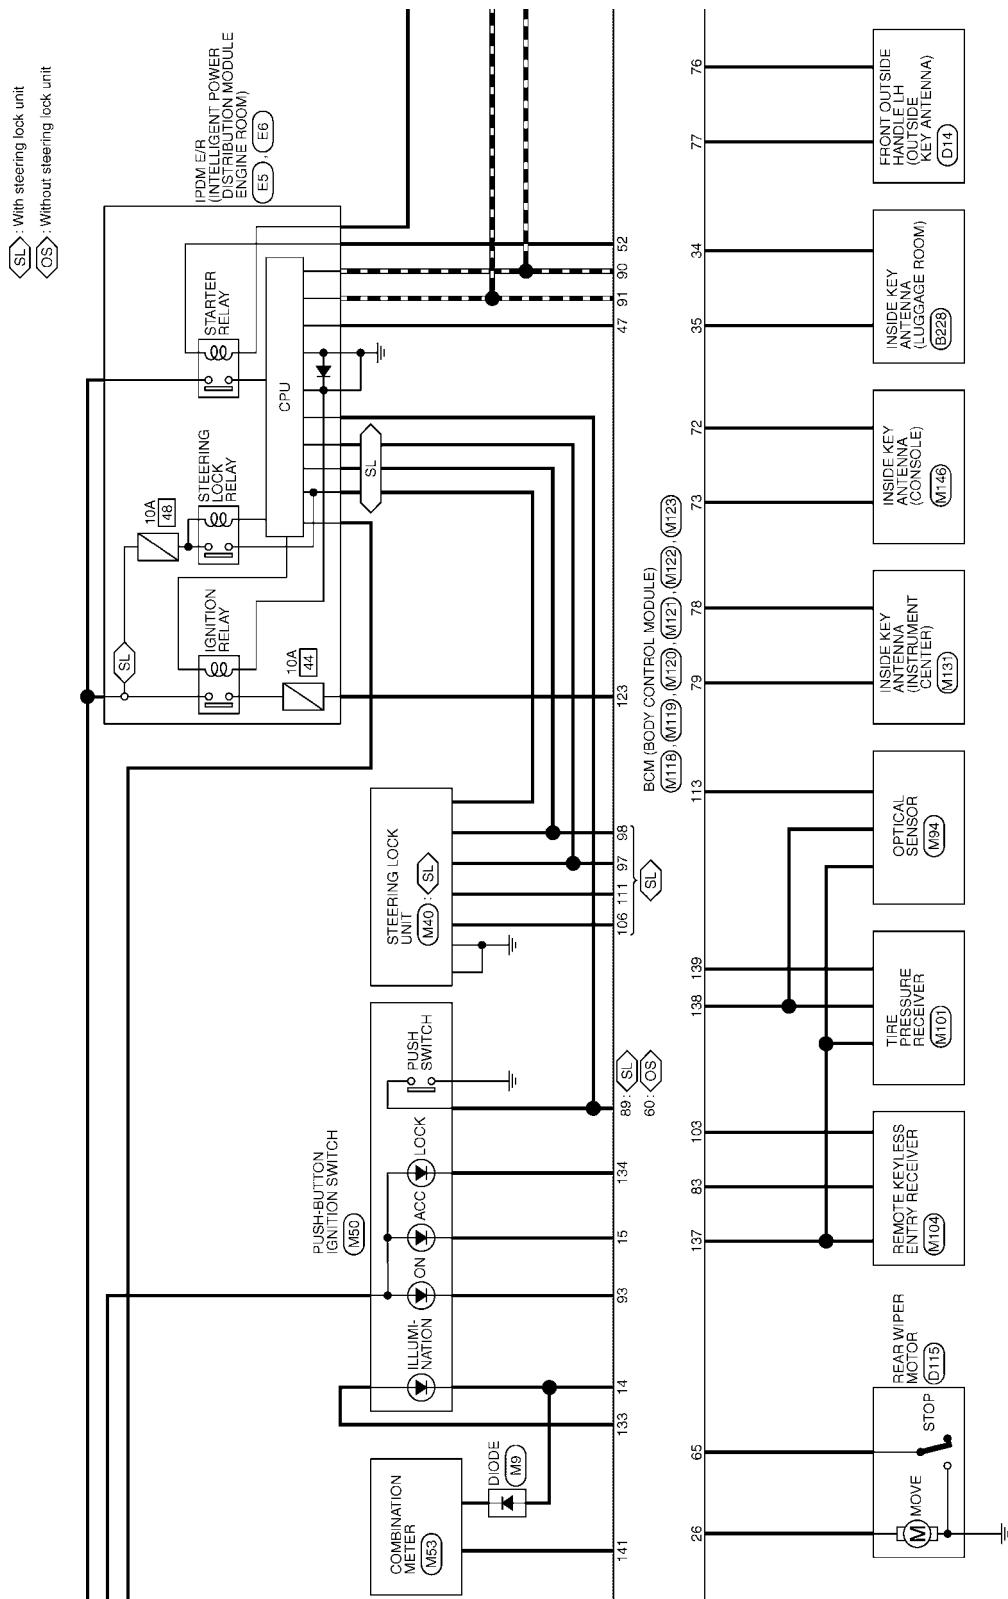
O

P

A B C D E F G H I J K L M N

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >




JCMWA6167GB

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS INFORMATION >

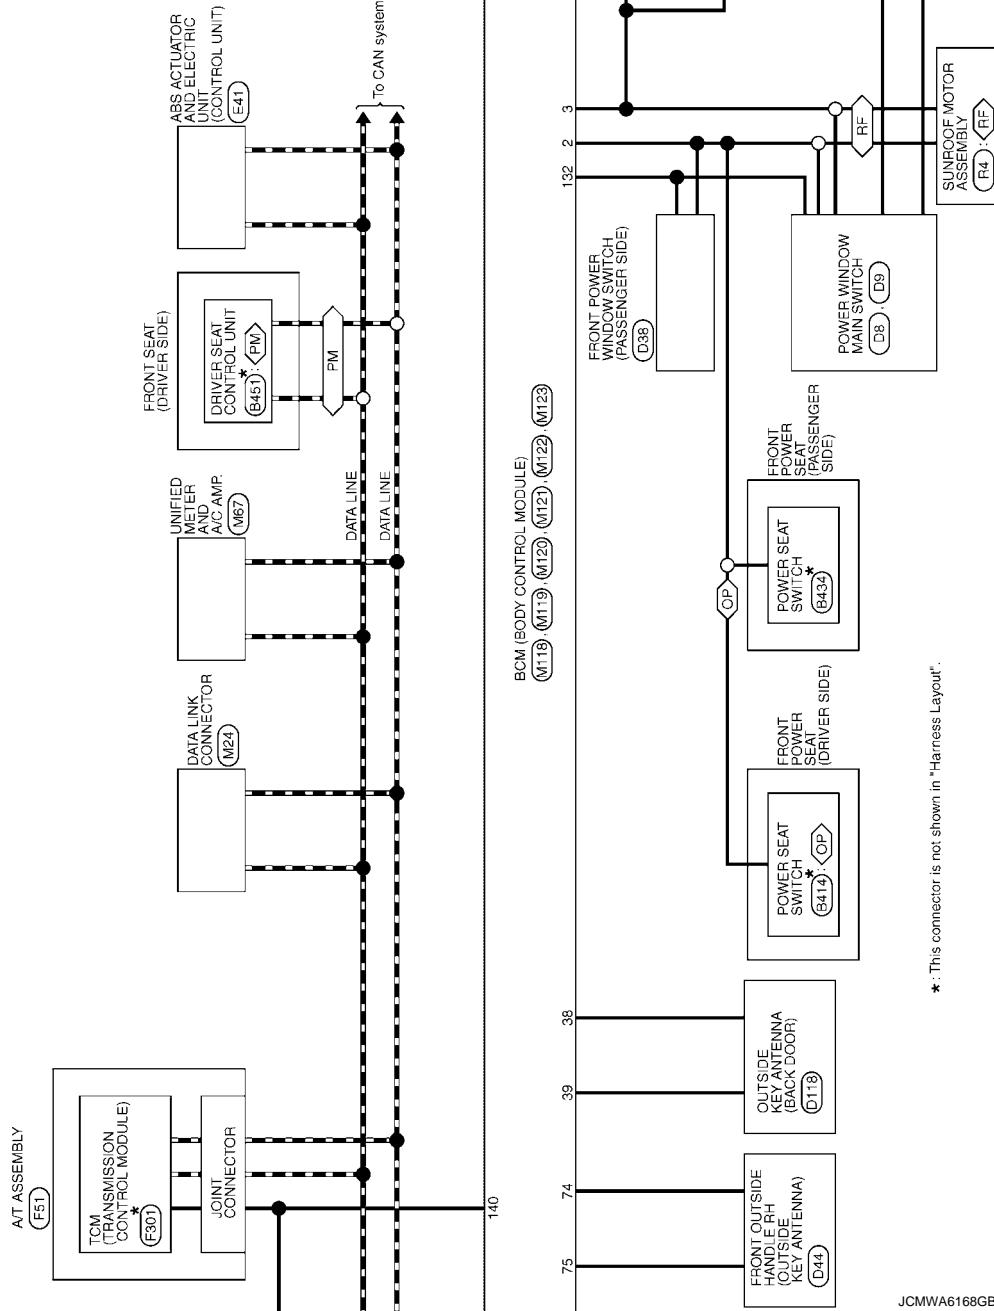 With sunroof
 With automatic drive positioner
 Without automatic drive positioner



BCM (BODY CONTROL MODULE)

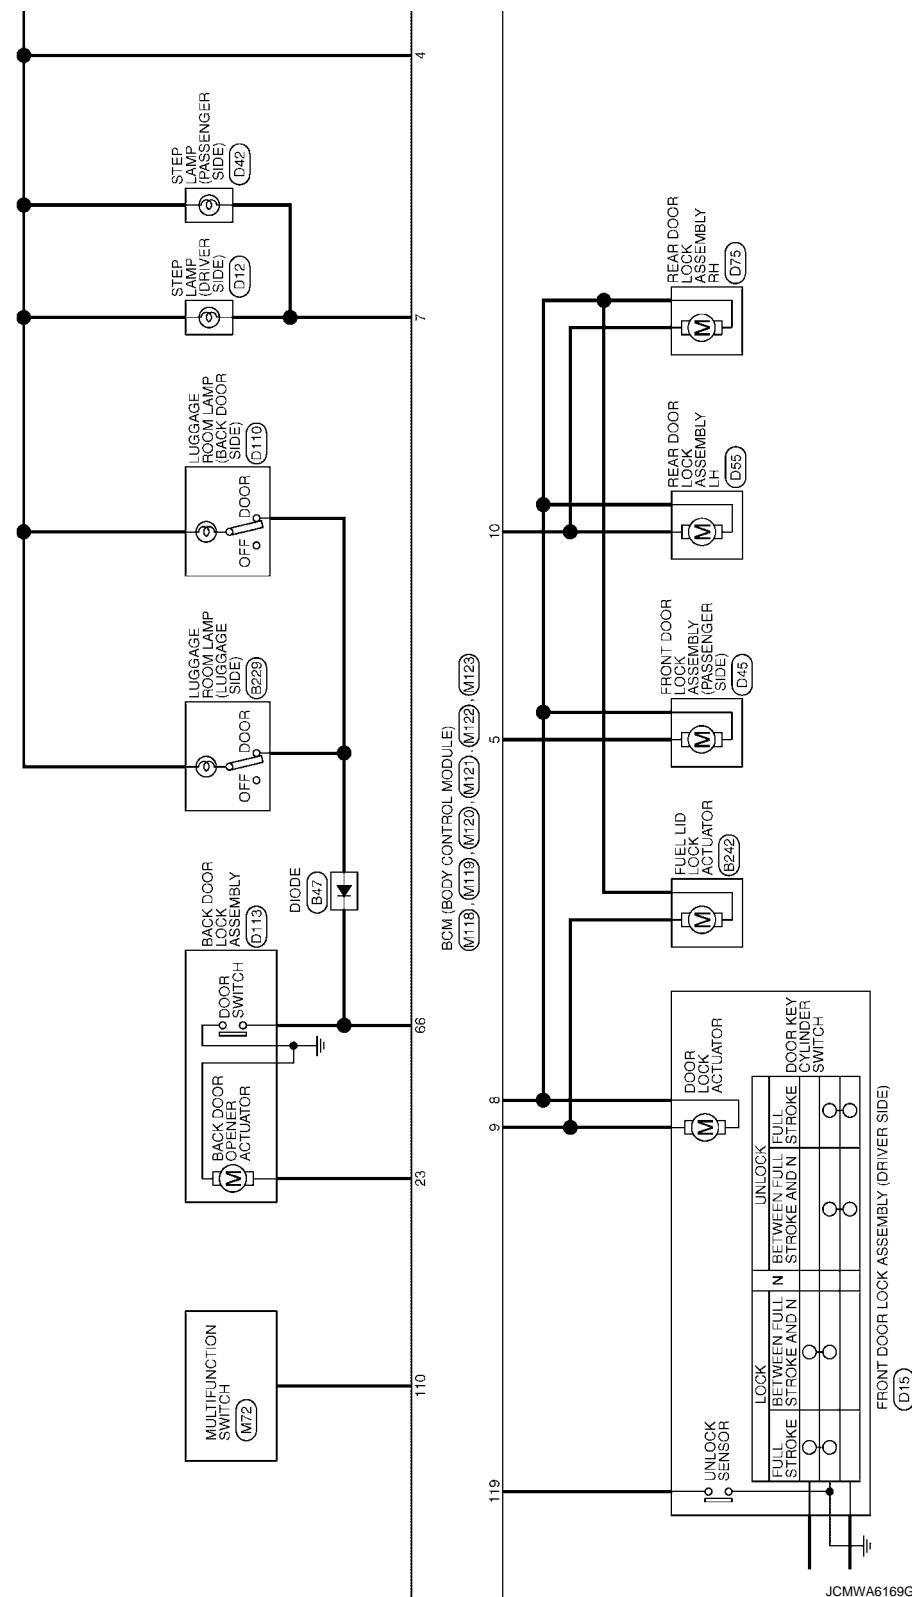
< ECU DIAGNOSIS INFORMATION >



JCMWA6169GB

BCM (BODY CONTROL MODULE)
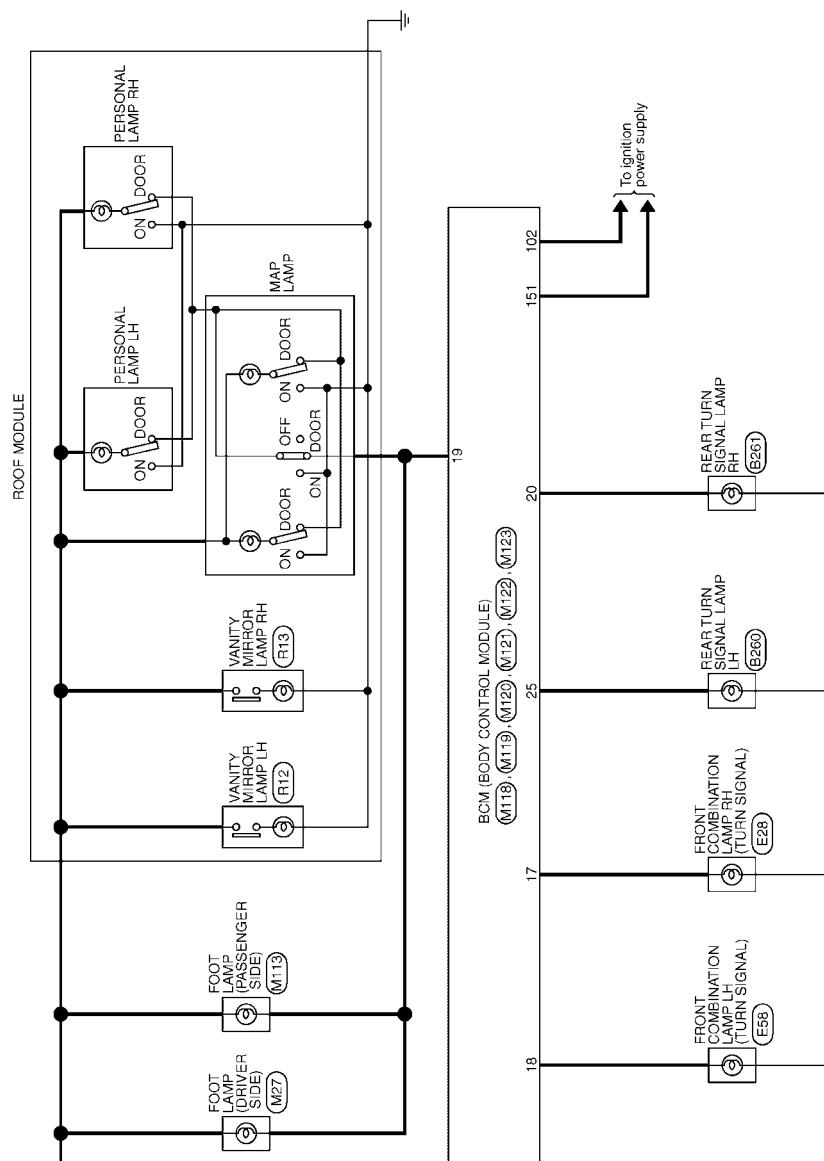
< ECU DIAGNOSIS INFORMATION >



JCMWA6170GB

BCS

N

O

P

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

NATS ANT AMP.		80	GR	
NATS ANT AMP.		81	W	
IGN RELAY (F/B) CONN.		82	R	
KEYLESS ENTRY RECEIVER COMM		83	Y	
COMBI SW INPUT 5		87	BR	
COMBI SW INPUT 3		88	V	
PUSH SW (Without steering lock unit)		89	BR	
CAN-L		90	P	
CAN-H		91	L	
KEY SLOT/LL		92	LG	
ON IND		93	V	
PUSH LAMP (ONT)		94	Y	
ACC RELAY CONN		95	BG	
A/T SHIFT RECEIVER POWER SUPPLY		96	GR	
S/L CONDITION 1		97	L	
S/L CONDITION 2		98	P	
SHIFT P		99	R	
PASSENGER DOOR REQUEST SW		100	G	
DRIVER DOOR REQUEST SW		101	SB	
BLOWER FAN MOTOR RELAY CONN		102	BG	
KEYLESS ENTRY RECEIVER POWER SUPPLY		103	LG	
S/L UNIT POWER SUPPLY		105	W	
COMBI SW INPUT 1		107	LG	
COMBI SW INPUT 4		108	R	
COMBI SW INPUT 2		109	Y	
HAZARD SW		110	G	
S/L UNIT COMM		111	Y	
Signal Name [Specification]				
Terminal	Color of Wire	Signal Name [Specification]		
No.				
1	P	FR WASHER(-)		
2	S	INTERIOR ROOM LAMP POWER SUPPLY		
3	GR	PASSENGER DOOR UNLOCK OUTPUT		
4	G	STEP LAMP ON		
5	L	ALL DOOR FUEL LID LOCK OUTPUT		
6	B	DRIVER DOOR FUEL LID UNLOCK OUTPUT		
7	V	REAR DOOR UNLOCK OUTPUT		
8	BR	REAR DOOR UNLOCK OUTPUT		
9	Y	IGN (ON)		
10	W	IGN RELAY (PDM E/R) CONN		
11	GR	STARTER RELAY CONN		
12	GR	BAT (FUSE)		
13	BR	BAT (FUSE)		
14	W	PUSH-BUTTON IGNITION SW (ILL, GND)		
15	Y	ACC IND		
16	R	TURN SIGNAL RH (FRONT)		
17	W	TURN SIGNAL LH (FRONT)		
18	BR	TURN SIGNAL LH (FRONT)		
19	V	ROOM LAMP (ONT)		
20	GR	ROOM LAMP TIME CONTROL		
21	BR	OUTPUT 2		
22	G	OUTPUT 5		
23	BR	OUTPUT 3		
24	GR	OUTPUT 1		
25	Y	FR WASHER (+)		
26	W	FR WASHER (+)		
27	GR	FR WASHER (+)		
28	Y	FR WASHER (+)		
29	W	FR WASHER (+)		
30	GR	FR WASHER (+)		
31	Y	FR WASHER (+)		
32	W	FR WASHER (+)		
33	GR	FR WASHER (+)		
34	Y	FR WASHER (+)		
35	W	FR WASHER (+)		
36	GR	FR WASHER (+)		
37	Y	FR WASHER (+)		
38	W	FR WASHER (+)		
39	GR	FR WASHER (+)		
40	Y	FR WASHER (+)		
41	W	FR WASHER (+)		
42	GR	FR WASHER (+)		
43	Y	FR WASHER (+)		
44	W	FR WASHER (+)		
45	GR	FR WASHER (+)		
46	Y	FR WASHER (+)		
47	W	FR WASHER (+)		
48	GR	FR WASHER (+)		
49	Y	FR WASHER (+)		
50	W	FR WASHER (+)		
51	GR	FR WASHER (+)		
52	Y	FR WASHER (+)		
53	W	FR WASHER (+)		
54	GR	FR WASHER (+)		
55	Y	FR WASHER (+)		
56	W	FR WASHER (+)		
57	GR	FR WASHER (+)		
58	Y	FR WASHER (+)		
59	W	FR WASHER (+)		
60	GR	FR WASHER (+)		
61	Y	FR WASHER (+)		
62	W	FR WASHER (+)		
63	GR	FR WASHER (+)		
64	Y	FR WASHER (+)		
65	W	FR WASHER (+)		
66	GR	FR WASHER (+)		
67	Y	FR WASHER (+)		
68	W	FR WASHER (+)		
69	GR	FR WASHER (+)		
70	Y	FR WASHER (+)		
71	W	FR WASHER (+)		
72	GR	FR WASHER (+)		
73	Y	FR WASHER (+)		
74	W	FR WASHER (+)		
75	GR	FR WASHER (+)		
76	Y	FR WASHER (+)		
77	W	FR WASHER (+)		
78	GR	FR WASHER (+)		
79	Y	FR WASHER (+)		
80	W	FR WASHER (+)		
81	GR	FR WASHER (+)		
82	Y	FR WASHER (+)		
83	W	FR WASHER (+)		
84	GR	FR WASHER (+)		
85	Y	FR WASHER (+)		
86	W	FR WASHER (+)		
87	GR	FR WASHER (+)		
88	Y	FR WASHER (+)		
89	W	FR WASHER (+)		
90	GR	FR WASHER (+)		
91	Y	FR WASHER (+)		
92	W	FR WASHER (+)		
93	GR	FR WASHER (+)		
94	Y	FR WASHER (+)		
95	W	FR WASHER (+)		
96	GR	FR WASHER (+)		
97	Y	FR WASHER (+)		
98	W	FR WASHER (+)		
99	GR	FR WASHER (+)		
100	Y	FR WASHER (+)		
101	W	FR WASHER (+)		
102	GR	FR WASHER (+)		
103	Y	FR WASHER (+)		
104	W	FR WASHER (+)		
105	GR	FR WASHER (+)		
106	Y	FR WASHER (+)		
107	W	FR WASHER (+)		
108	GR	FR WASHER (+)		
109	Y	FR WASHER (+)		
110	W	FR WASHER (+)		
111	GR	FR WASHER (+)		
112	Y	FR WASHER (+)		
113	W	FR WASHER (+)		
114	GR	FR WASHER (+)		
115	Y	FR WASHER (+)		
116	W	FR WASHER (+)		
117	GR	FR WASHER (+)		
118	Y	FR WASHER (+)		
119	W	FR WASHER (+)		
120	GR	FR WASHER (+)		
121	Y	FR WASHER (+)		
122	W	FR WASHER (+)		
123	GR	FR WASHER (+)		
124	Y	FR WASHER (+)		
125	W	FR WASHER (+)		
126	GR	FR WASHER (+)		
127	Y	FR WASHER (+)		
128	W	FR WASHER (+)		
129	GR	FR WASHER (+)		
130	Y	FR WASHER (+)		
131	W	FR WASHER (+)		
132	GR	FR WASHER (+)		
133	Y	FR WASHER (+)		
134	W	FR WASHER (+)		
135	GR	FR WASHER (+)		
136	Y	FR WASHER (+)		
137	W	FR WASHER (+)		
138	GR	FR WASHER (+)		
139	Y	FR WASHER (+)		
140	W	FR WASHER (+)		
141	GR	FR WASHER (+)		
142	Y	FR WASHER (+)		
143	W	FR WASHER (+)		
144	GR	FR WASHER (+)		
145	Y	FR WASHER (+)		
146	W	FR WASHER (+)		
147	GR	FR WASHER (+)		
148	Y	FR WASHER (+)		
149	W	FR WASHER (+)		
150	GR	FR WASHER (+)		
151	Y	FR WASHER (+)		
152	W	FR WASHER (+)		
153	GR	FR WASHER (+)		
154	Y	FR WASHER (+)		
155	W	FR WASHER (+)		
156	GR	FR WASHER (+)		
157	Y	FR WASHER (+)		
158	W	FR WASHER (+)		
159	GR	FR WASHER (+)		
160	Y	FR WASHER (+)		
161	W	FR WASHER (+)		
162	GR	FR WASHER (+)		
163	Y	FR WASHER (+)		
164	W	FR WASHER (+)		
165	GR	FR WASHER (+)		
166	Y	FR WASHER (+)		
167	W	FR WASHER (+)		
168	GR	FR WASHER (+)		
169	Y	FR WASHER (+)		
170	W	FR WASHER (+)		
171	GR	FR WASHER (+)		
172	Y	FR WASHER (+)		
173	W	FR WASHER (+)		
174	GR	FR WASHER (+)		
175	Y	FR WASHER (+)		
176	W	FR WASHER (+)		
177	GR	FR WASHER (+)		
178	Y	FR WASHER (+)		
179	W	FR WASHER (+)		
180	GR	FR WASHER (+)		
181	Y	FR WASHER (+)		
182	W	FR WASHER (+)		
183	GR	FR WASHER (+)		
184	Y	FR WASHER (+)		
185	W	FR WASHER (+)		
186	GR	FR WASHER (+)		
187	Y	FR WASHER (+)		
188	W	FR WASHER (+)		
189	GR	FR WASHER (+)		
190	Y	FR WASHER (+)		
191	W	FR WASHER (+)		
192	GR	FR WASHER (+)		
193	Y	FR WASHER (+)		
194	W	FR WASHER (+)		
195	GR	FR WASHER (+)		
196	Y	FR WASHER (+)		
197	W	FR WASHER (+)		
198	GR	FR WASHER (+)		
199	Y	FR WASHER (+)		
200	W	FR WASHER (+)		
201	GR	FR WASHER (+)		
202	Y	FR WASHER (+)		
203	W	FR WASHER (+)		
204	GR	FR WASHER (+)		
205	Y	FR WASHER (+)		
206	W	FR WASHER (+)		
207	GR	FR WASHER (+)		
208	Y	FR WASHER (+)		
209	W	FR WASHER (+)		
210	GR	FR WASHER (+)		
211	Y	FR WASHER (+)		
212	W	FR WASHER (+)		
213	GR	FR WASHER (+)		
214	Y	FR WASHER (+)		
215	W	FR WASHER (+)		
216	GR	FR WASHER (+)		
217	Y	FR WASHER (+)		
218	W	FR WASHER (+)		
219	GR	FR WASHER (+)		
220	Y	FR WASHER (+)		
221	W	FR WASHER (+)		
222	GR	FR WASHER (+)		
223	Y	FR WASHER (+)		
224	W	FR WASHER (+)		
225	GR	FR WASHER (+)		
226	Y	FR WASHER (+)		
227	W	FR WASHER (+)		
228	GR	FR WASHER (+)		
229	Y	FR WASHER (+)		
230	W	FR WASHER (+)		
231	GR	FR WASHER (+)		
232	Y	FR WASHER (+)		
233	W	FR WASHER (+)		
234	GR	FR WASHER (+)		
235	Y	FR WASHER (+)		
236	W	FR WASHER (+)		
237	GR	FR WASHER (+)		
238	Y	FR WASHER (+)		
239	W	FR WASHER (+)		
240	GR	FR WASHER (+)		
241	Y	FR WASHER (+)		
242	W	FR WASHER (+)		
243	GR	FR WASHER (+)		
244	Y	FR WASHER (+)		
245	W	FR WASHER (+)		
246	GR	FR WASHER (+)		
247	Y	FR WASHER (+)		
248	W	FR WASHER (+)		
249	GR	FR WASHER (+)		
250	Y	FR WASHER (+)		
251	W	FR WASHER (+)		
252	GR	FR WASHER (+)		
253	Y	FR WASHER (+)		
254	W	FR WASHER (+)		
255	GR	FR WASHER (+)		
256	Y	FR WASHER (+)		
257	W	FR WASHER (+)		
258	GR	FR WASHER (+)		
259	Y	FR WASHER (+)		
260	W	FR WASHER (+)		
261	GR	FR WASHER (+)		
262	Y	FR WASHER (+)		
263	W	FR WASHER (+)		
264	GR	FR WASHER (+)		
265	Y	FR WASHER (+)		
266	W	FR WASHER (+)		
267	GR	FR WASHER (+)		
268	Y	FR WASHER (+)		
269	W	FR WASHER (+)		
270	GR	FR WASHER (+)		
271	Y	FR WASHER (+)		
272	W	FR WASHER (+)		
273	GR	FR WASHER (+)		
274	Y	FR WASHER (+)		
275	W	FR WASHER (+)		
276	GR	FR WASHER (+)		
277	Y	FR WASHER (+)		
278	W	FR WASHER (+)		
279	GR	FR WASHER (+)		
280	Y	FR WASHER (+)		
281	W	FR WASHER (+)		
282	GR	FR WASHER (+)		
283	Y	FR WASHER (+)		
284	W	FR WASHER (+)		
285	GR	FR WASHER (+)		
286	Y	FR WASHER (+)		
287	W	FR WASHER (+)		
288	GR	FR WASHER (+)		
289	Y	FR WASHER (+)		
290	W	FR WASHER (+)		
291	GR	FR WASHER (+)		
292	Y	FR WASHER (+)		
293	W	FR WASHER (+)		
294	GR	FR WASHER (+)		
295	Y	FR WASHER (+)		
296	W	FR WASHER (+)		
297	GR	FR WASHER (+)		
298	Y	FR WASHER (+)		
299	W	FR WASHER (+)		
300	GR	FR WASHER (+)		
301	Y	FR WASHER (+)		
302	W	FR WASHER (+)		
303	GR	FR WASHER (+)		
304	Y	FR WASHER (+)		
305	W	FR WASHER (+)		
306	GR	FR WASHER (+)		
307	Y	FR WASHER (+)</td		

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH

Connector No.	MI120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC

Terminal No.	Color of Wire	Signal Name [Specification]
72	R	ROOM ANT-1*
73	G	ROOM ANT-2*
74	SB	PASSENGER DOOR ANT-1
75	GR	PASSENGER DOOR ANT-2
76	V	DRIVER DOOR ANT-1
77	LG	DRIVER DOOR ANT-2
78	Y	ROOM ANT-1*
79	BR	ROOM ANT-2*

Terminal No.	Color of Wire	Signal Name [Specification]
20	V	TURN SIGNAL RH (REAR)
23	G	BACK DOOR OPEN INPUT
25	G	TURN SIGNAL LH (REAR)
26		REAR WIPER OUTPUT

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAL (F/L)
2	W	POWER WINDOW POWER SUPPLY(BAT)
3	Y	POWER WINDOW POWER SUPPLY(RAP)

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

A

B

C

D

E

F

G

H

I

J

K

L

BCS

M

N

P

BCM (BODY CONTROL MODULE)	
Connector No	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH
	 
Terminal	Color No. of Wire
1.13	P
1.16	SB
1.18	P
1.19	SB
1.21	BR
1.23	W
1.24	LG
1.32	BR
1.33	W
1.34	GR
1.37	BR
1.38	Y
1.39	L
1.40	GR
1.41	G
1.42	BR
1.43	P
1.44	G
1.45	L
1.46	SB
1.50	LG
1.51	G
Signal Name [Specification]	
OPTICAL SENSOR	
STOP LAMP SW 1	
STOP LAMP SW 2	
DR DOOR UNLOCK SENSOR	
KEY SLOT SW	
IGN F/B	
PASSENGER DOOR SW	
POWER WINDOW SW COMM	
PUSH-BUTTON IGNITION SW 1L POWER	
LOCK ND	
RECEIVER SENSOR GND	
RECEIVER SENSOR POWER SUPPLY	
TIRE PRESSURE RECEIVER COMM	
Shift N/P	
SECURITY INDICATOR OUTPUT	
COMBI SW OUTPUT 5	
COMBI SW OUTPUT 1	
COMBI SW OUTPUT 2	
COMBI SW OUTPUT 3	
COMBI SW OUTPUT 4	
DRIVER DOOR SW	
REAR WINDOW DEF-FOGGER RELAY CONN	

JCMW6172GB

INFOID:0000000006348562

Fail-safe

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation
B2013: ID DISCORD BCM-S/L	Inhibit engine cranking	Erase DTC
B2014: CHAIN OF S/L-BCM	Inhibit engine cranking	Erase DTC
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2557: VEHICLE SPEED	Inhibit steering lock	When normal vehicle speed signals are received from ABS actuator and electric unit (control unit) for 500 ms
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Starter control relay signal • Starter relay status signal
B2601: SHIFT POSITION	Inhibit steering lock	500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> • Selector lever P position switch signal • P range signal (CAN)
B2602: SHIFT POSITION	Inhibit steering lock	5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Vehicle speed: 4 km/h (2.5 MPH) or more
B2603: SHIFT POSI STATUS	Inhibit steering lock	500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Selector lever P/N position signal: Except P and N positions (0 V)
B2604: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Status 1 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P and N position (battery voltage) - P range signal or N range signal (CAN): ON • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: Except P and N positions (0 V) - P range signal and N range signal (CAN): OFF
B2605: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Power position: IGN • Selector lever P/N position signal: Except P and N positions (0 V) • Interlock/PNP switch signal (CAN): OFF • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P or N position (battery voltage) - PNP switch signal (CAN): ON
B2606: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal)

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation
B2607: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> Steering lock relay signal (Request signal) Steering lock relay signal (Condition signal)
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> Starter motor relay control signal Starter relay status signal (CAN)
B2609: S/L STATUS	<ul style="list-style-type: none"> Inhibit engine cranking Inhibit steering lock 	When the following steering lock conditions agree <ul style="list-style-type: none"> BCM steering lock control status Steering lock condition No. 1 signal status Steering lock condition No. 2 signal status
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> IGN relay (IPDM E/R) control signal: OFF (Battery voltage) Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions are fulfilled <ul style="list-style-type: none"> Power position changes to ACC Receives engine status signal (CAN)
B2612: S/L STATUS	<ul style="list-style-type: none"> Inhibit engine cranking Inhibit steering lock 	When any of the following conditions are fulfilled <ul style="list-style-type: none"> Steering lock unit status signal (CAN) is received normally The BCM steering lock control status matches the steering lock status recognized by the steering lock unit status signal (CAN from IPDM E/R)
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B2619: BCM	Inhibit engine cranking	1 second after the steering lock unit power supply output control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization
B26E9: S/L STATUS	<ul style="list-style-type: none"> Inhibit engine cranking Inhibit steering lock 	When BCM transmits the LOCK request signal to steering lock unit, and receives LOCK response signal from steering lock unit, the following conditions are fulfilled <ul style="list-style-type: none"> Steering condition No. 1 signal: LOCK (0 V) Steering condition No. 2 signal: LOCK (Battery voltage)

REAR WIPER MOTOR PROTECTION

BCM detects the rear wiper stopping position according to the rear wiper stop position signal.

When the rear wiper stop position signal does not change for more than 5 seconds while driving the rear wiper, BCM stops power supply to protect the rear wiper motor.

BCS

Condition of cancellation

- More than 1 minute is passed after the rear wiper stops.
- Turn rear wiper switch OFF.
- Operate the rear wiper switch or rear washer switch.

DTC Inspection Priority Chart

INFOID:0000000006348563

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	<ul style="list-style-type: none"> U1000: CAN COMM CIRCUIT U1010: CONTROL UNIT (CAN)

N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Priority	DTC
3	<ul style="list-style-type: none"> • B2190: NATS ANTENNA AMP • B2191: DIFFERENCE OF KEY • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM • B2195: ANTI SCANNING
4	<ul style="list-style-type: none"> • B2013: ID DISCORD BCM-S/L • B2014: CHAIN OF S/L-BCM • B2553: IGNITION RELAY • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2560: STARTER CONT RELAY • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP SW • B2605: PNP SW • B2606: S/L RELAY • B2607: S/L RELAY • B2608: STARTER RELAY • B2609: S/L STATUS • B260A: IGNITION RELAY • B260B: STEERING LOCK UNIT • B260C: STEERING LOCK UNIT • B260D: STEERING LOCK UNIT • B260F: ENG STATE SIG LOST • B2612: S/L STATUS • B2614: ACC RELAY CIRC • B2615: BLOWER RELAY CIRC • B2616: IGN RELAY CIRC • B2617: STARTER RELAY CIRC • B2618: BCM • B2619: BCM • B261A: PUSH-BTN IGN SW • B261E: VEHICLE TYPE • B26E9: S/L STATUS • B26EA: KEY REGISTRATION • C1729: VHCL SPEED SIG ERR • U0415: VEHICLE SPEED SIG
5	<ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL • C1734: CONTROL UNIT
6	<ul style="list-style-type: none"> • B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA • B2623: INSIDE ANTENNA

DTC Index

INFOID:0000000006348564

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [BCS-18, "COMMON ITEM : CONSULT-III Function \(BCM - COMMON ITEM\)"](#).

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	—	BCS-38
U1010: CONTROL UNIT (CAN)	—	—	—	—	BCS-39
U0415: VEHICLE SPEED SIG	—	—	—	—	BCS-40
B2013: ID DISCORD BCM-S/L*	×	×	—	—	SEC-49
B2014: CHAIN OF S/L-BCM*	×	×	—	—	SEC-50
B2190: NATS ANTENNA AMP	×	—	—	—	SEC-42
B2191: DIFFERENCE OF KEY	×	—	—	—	SEC-45
B2192: ID DISCORD BCM-ECM	×	—	—	—	SEC-46
B2193: CHAIN OF BCM-ECM	×	—	—	—	SEC-47
B2195: ANTI SCANNING	×	—	—	—	SEC-48
B2553: IGNITION RELAY	—	×	—	—	PCS-50
B2555: STOP LAMP	—	×	—	—	SEC-53
B2556: PUSH-BTN IGN SW	—	×	×	—	SEC-55
B2557: VEHICLE SPEED	×	×	×	—	SEC-57
B2560: STARTER CONT RELAY	×	×	×	—	SEC-58
B2562: LOW VOLTAGE	—	×	—	—	BCS-41
B2601: SHIFT POSITION	×	×	×	—	SEC-59
B2602: SHIFT POSITION	×	×	×	—	SEC-62
B2603: SHIFT POSI STATUS	×	×	×	—	SEC-64
B2604: PNP SW	×	×	×	—	SEC-67
B2605: PNP SW	×	×	×	—	SEC-69
B2606: S/L RELAY*	×	×	×	—	SEC-71
B2607: S/L RELAY*	×	×	×	—	SEC-72
B2608: STARTER RELAY	×	×	×	—	SEC-74
B2609: S/L STATUS*	×	×	×	—	SEC-76
B260A: IGNITION RELAY	×	×	×	—	PCS-52
B260B: STEERING LOCK UNIT*	—	×	×	—	SEC-80
B260C: STEERING LOCK UNIT*	—	×	×	—	SEC-81
B260D: STEERING LOCK UNIT*	—	×	×	—	SEC-82
B260F: ENG STATE SIG LOST	×	×	×	—	SEC-83
B2612: S/L STATUS*	×	×	×	—	SEC-87
B2614: ACC RELAY CIRC	—	×	×	—	PCS-54
B2615: BLOWER RELAY CIRC	—	×	×	—	PCS-57
B2616: IGN RELAY CIRC	—	×	×	—	PCS-60
B2617: STARTER RELAY CIRC	×	×	×	—	SEC-91
B2618: BCM	×	×	×	—	PCS-63

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
B2619: BCM*	×	×	×	—	SEC-93
B261A: PUSH-BTN IGN SW	—	×	×	—	SEC-94
B261E: VEHICLE TYPE	×	×	×	—	SEC-97
B2621: INSIDE ANTENNA	—	×	—	—	DLK-59
B2622: INSIDE ANTENNA	—	×	—	—	DLK-61
B2623: INSIDE ANTENNA	—	×	—	—	DLK-63
B26E1: ENG STATE NO RES	×	×	×	—	SEC-84
B26E9: S/L STATUS*	×	×	×	—	SEC-85
B26EA: KEY REGISTRATION	—	×	×	—	SEC-86
C1704: LOW PRESSURE FL	—	—	—	×	WT-23
C1705: LOW PRESSURE FR	—	—	—	×	
C1706: LOW PRESSURE RR	—	—	—	×	
C1707: LOW PRESSURE RL	—	—	—	×	
C1708: [NO DATA] FL	—	—	—	×	WT-25
C1709: [NO DATA] FR	—	—	—	×	
C1710: [NO DATA] RR	—	—	—	×	
C1711: [NO DATA] RL	—	—	—	×	
C1716: [PRESSDATA ERR] FL	—	—	—	×	WT-28
C1717: [PRESSDATA ERR] FR	—	—	—	×	
C1718: [PRESSDATA ERR] RR	—	—	—	×	
C1719: [PRESSDATA ERR] RL	—	—	—	×	
C1729: VHCL SPEED SIG ERR	—	—	—	×	WT-30
C1734: CONTROL UNIT	—	—	—	×	WT-32

*: For models without steering lock unit, this DTC is not applied.

COMBINATION SWITCH SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

COMBINATION SWITCH SYSTEM SYMPTOMS

Symptom Table

INFOID:000000006348565

1. Perform "Data Monitor" of CONSULT-III to check for any malfunctioning item.
2. Check the malfunction combinations.

Malfunction item: x

Malfunction combination	Data monitor item															
	FR WIPER HI	FR WIPER LOW	FR WASHER SW	FR WIPER INT	RR WIPER ON	RR WIPER INT	RR WASHER SW	INT VOLUME	TURN SIGNAL R	TURN SIGNAL L	TAIL LAMP SW	HI BEAM SW	HEAD LAMP SW 1	HEAD LAMP SW 2	PASSING SW	AUTO LIGHT SW
A		x	x						x	x						
B	x			x								x		x		
C						x	x				x		x			
D					x		x			x					x	
E					x		x									x
F	x					x		x								
G			x	x		x	x									
H		x		x										x		
I									x				x	x		x
J								x		x	x	x				
K	All Items															
L	If only one item is detected or the item is not applicable to the combinations A to K															

3. Identify the malfunctioning part from the agreed combination and repair or replace the part.

Malfunction combination	Malfunctioning part	Repair or replace
A	Combination switch INPUT 1 circuit	Inspect the combination switch input circuit applicable to the malfunctioning part. Refer to BCS-43, "Diagnosis Procedure" .
B	Combination switch INPUT 2 circuit	
C	Combination switch INPUT 3 circuit	
D	Combination switch INPUT 4 circuit	
E	Combination switch INPUT 5 circuit	
F	Combination switch OUTPUT 1 circuit	Inspect the combination switch output circuit applicable to the malfunctioning part. Refer to BCS-45, "Diagnosis Procedure" .
G	Combination switch OUTPUT 2 circuit	
H	Combination switch OUTPUT 3 circuit	
I	Combination switch OUTPUT 4 circuit	
J	Combination switch OUTPUT 5 circuit	
K	BCM	Replace BCM. Refer to BCS-86, "Exploded View" .
L	Combination switch	Replace the combination switch.

A

B

C

D

E

F

G

H

I

J

K

N

O

P

BCS

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

NORMAL OPERATING CONDITION

Description

INFOID:0000000007868411

TRANSIT MODE

- Transit mode inhibits battery power consumption during transportation or storage of the vehicle.
- BCM is set to transit mode before delivery.
- In transit mode, remote keyless entry function, headlamp ON/OFF function, theft warning alarm function, and other BCM control functions do not operate normally.
- Therefore, cancel operation must be performed so that the vehicle is used in normal status.
- For transit mode cancel operation, refer to [BCS-7, "Description"](#).

NOTE:

Do not cancel transit mode during storage of the vehicle. Always cancel transit mode before delivery of the vehicle to customer.

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000006348566

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted.

Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

BCM (BODY CONTROL MODULE)

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

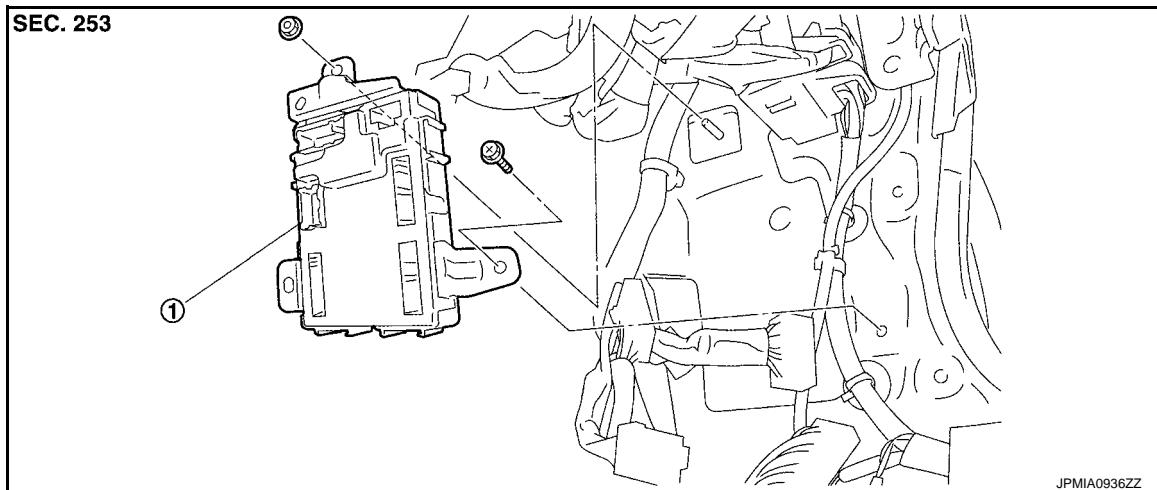
BCM (BODY CONTROL MODULE)

Exploded View

INFOID:000000006348567

CAUTION:

Before replacing BCM, perform “READ CONFIGURATION” to save or print current vehicle specification. Refer to [BCS-4, “CONFIGURATION \(BCM\) : Description”](#).



1. BCM

Removal and Installation

INFOID:000000006348568

CAUTION:

Before replacing BCM, perform “READ CONFIGURATION” to save or print current vehicle specification. Refer to [BCS-4, “CONFIGURATION \(BCM\) : Description”](#).

REMOVAL

1. Remove dash side finisher (passenger side). Refer to [INT-21, “Exploded View”](#).
2. Remove bolt and nut.
3. Remove BCM and disconnect the connector.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

- Be sure to perform “WRITE CONFIGURATION” when replacing BCM.
- Be sure to perform the system initialization (NATS) when replacing BCM. Refer to [BCS-4, “CONFIGURATION \(BCM\) : Work Procedure”](#).

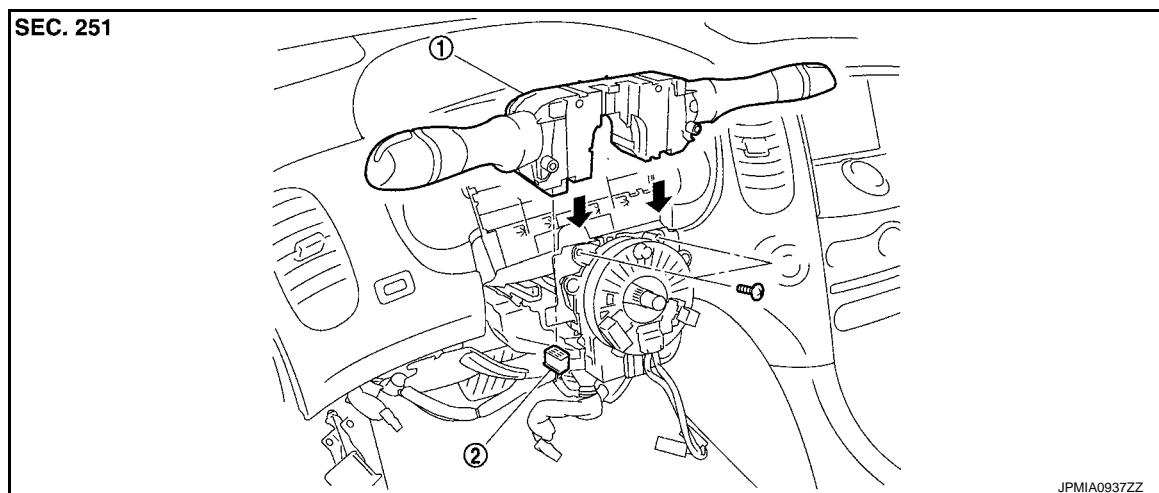
COMBINATION SWITCH

< REMOVAL AND INSTALLATION >

COMBINATION SWITCH

Exploded View

INFOID:0000000006348569



1. Combination switch

2. Combination switch connector

Removal and Installation

INFOID:0000000006348570

REMOVAL

1. Remove steering column cover. Refer to [IP-12, "Exploded View"](#).
2. Remove screws.
3. Disconnect the connector.
4. Pull up the combination switch to remove it.

INSTALLATION

Install in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P