
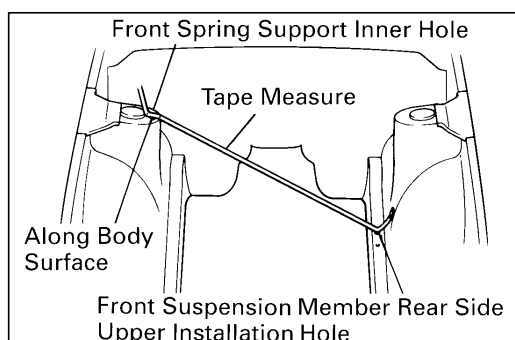
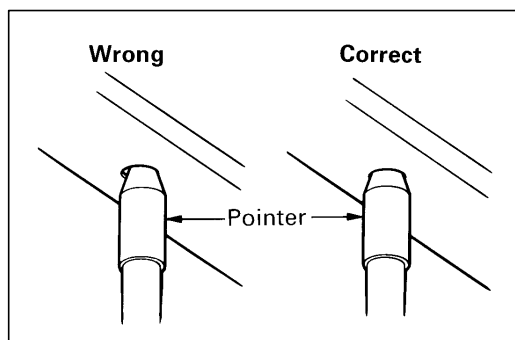
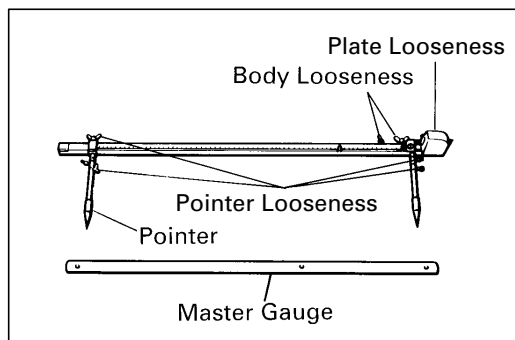
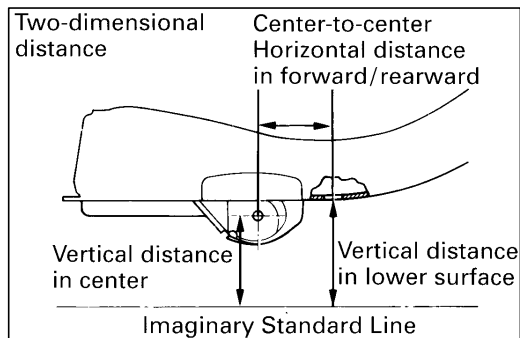


BODY DIMENSIONS

	Page
GENERAL INFORMATION	DI-2
BODY DIMENSION DRAWINGS	DI-3

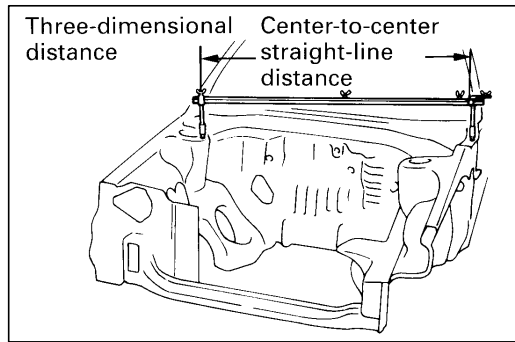

GENERAL INFORMATION

1. BASIC DIMENSIONS

- (a) There are two types of dimensions in the diagram. (Three-dimensional distance)

- Straight-line distance between the centers of two measuring points.

(Two-dimensional distance)

- Horizontal distance in forward/rearward between the centers of two measuring points.
 - The height from an imaginary standard line.
- (b) Incases in which only one dimension is given, left and right are symmetrical.
- (c) The dimensions in the following drawing indicate actual distance. Therefore, please use the dimensions as a reference.

2. MEASURING

- (a) Basically, all measurements are to be done with a tracking gauge. For portions where it is not possible to use a tracking gauge, a tape measure should be used.
- (b) Use only a tracking gauge that has no looseness in the body, measuring plate, or pointers.


HINT:

1. The height of the left and right pointers must be equal.
2. Always calibrate the tracking gauge before measuring or after adjusting the pointer height.
3. Take care not to drop the tracking gauge or otherwise shock it.
4. Confirm that the pointers are securely in the holes.

- (c) When using a tape measure, avoid twists and bends in the tape.
- (d) When tracking a diagonal measurement from the front spring support inner hole to the suspension member upper rear installation hole, measure along the front spring support panel surface.

BODY DIMENSION DRAWINGS
ENGINE COMPARTMENT


(Three-Dimensional Distance)

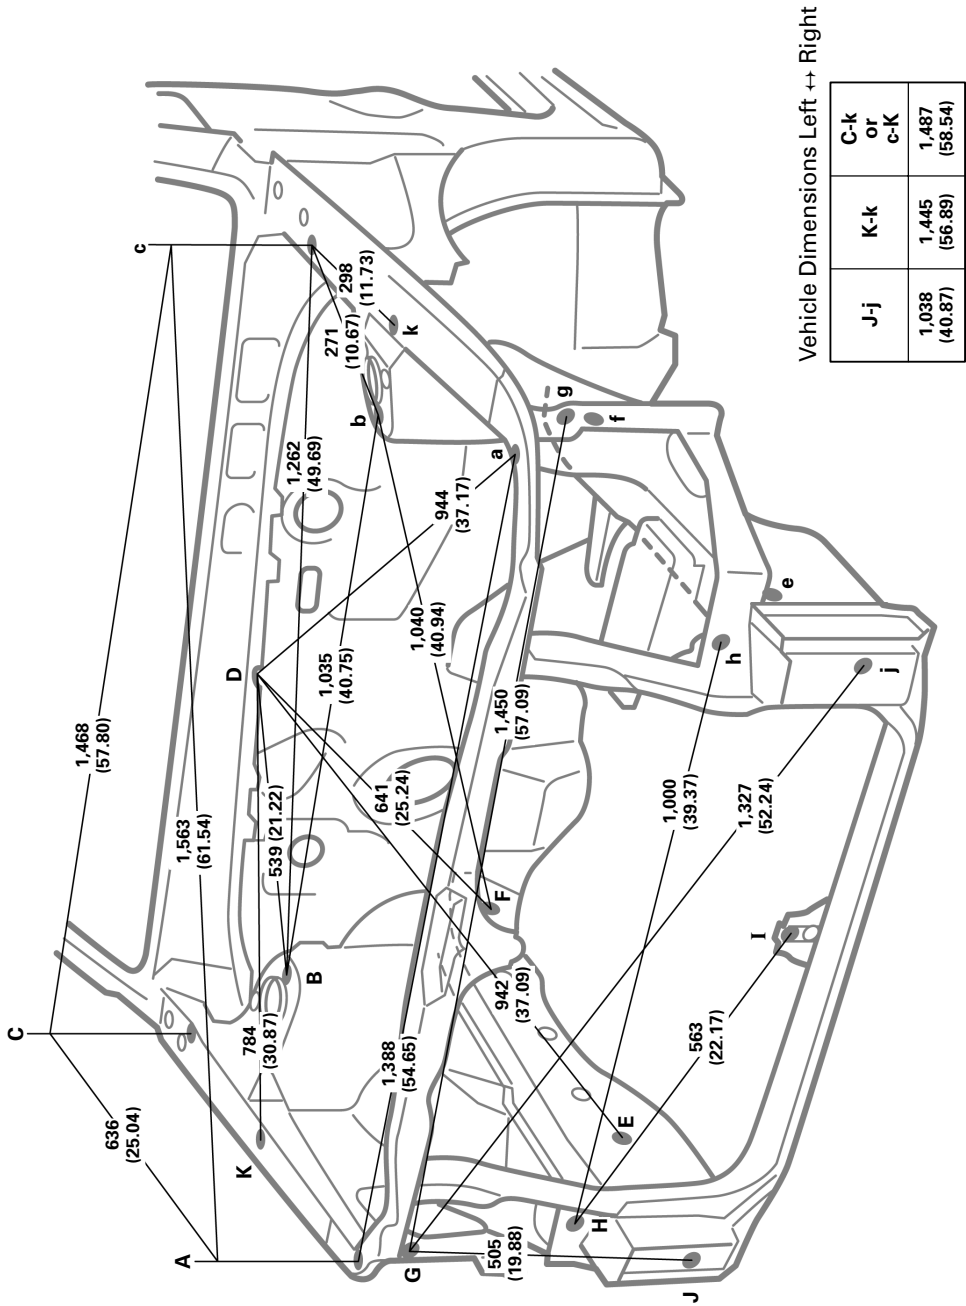

HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (Seen from rear).


Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front fender installation nut	6 (0.24) nut	G, g	Radiator support standard hole	10 (0.39)
B, b	Front spring support hole – inner	11 (0.43)	H, h	Radiator support standard hole	10 (0.39)
C, c	Front fender installation nut	6 (0.24) nut	I	Hood lock support installation hole	6.2 (0.244)
D	Cowl top panel center mark	2.5 (0.098) R	J, j	Front side member working hole	15 (0.59)
E, e	Front side member working hole	15 (0.59)	K, k	Front fender installation nut	6 (0.24) nut
F, f	Front side member standard hole	17 (0.67)	—	—	—

BODY OPENING AREAS (Side View: Front)

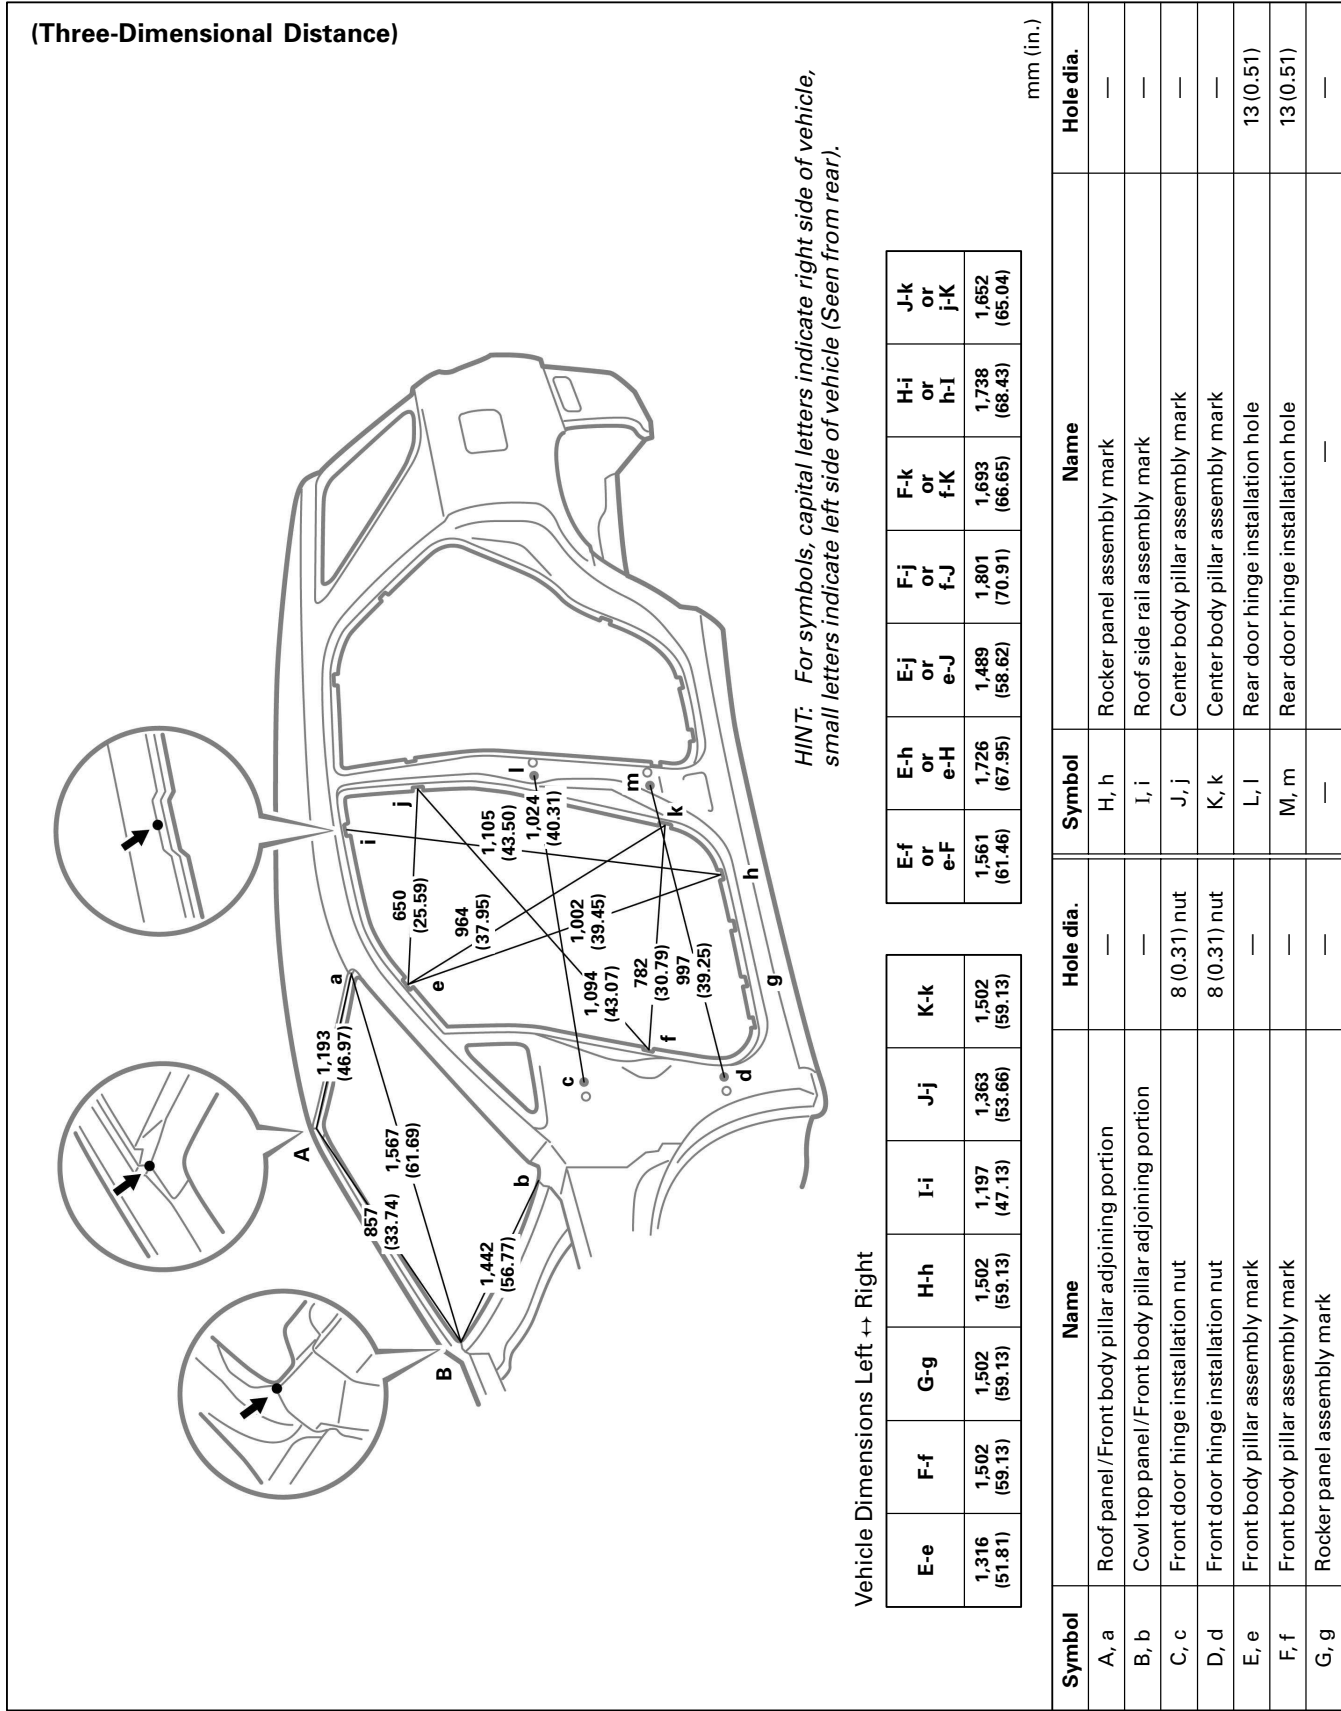

BODY OPENING AREAS (Side View: Rear)

(Three-Dimensional Distance)

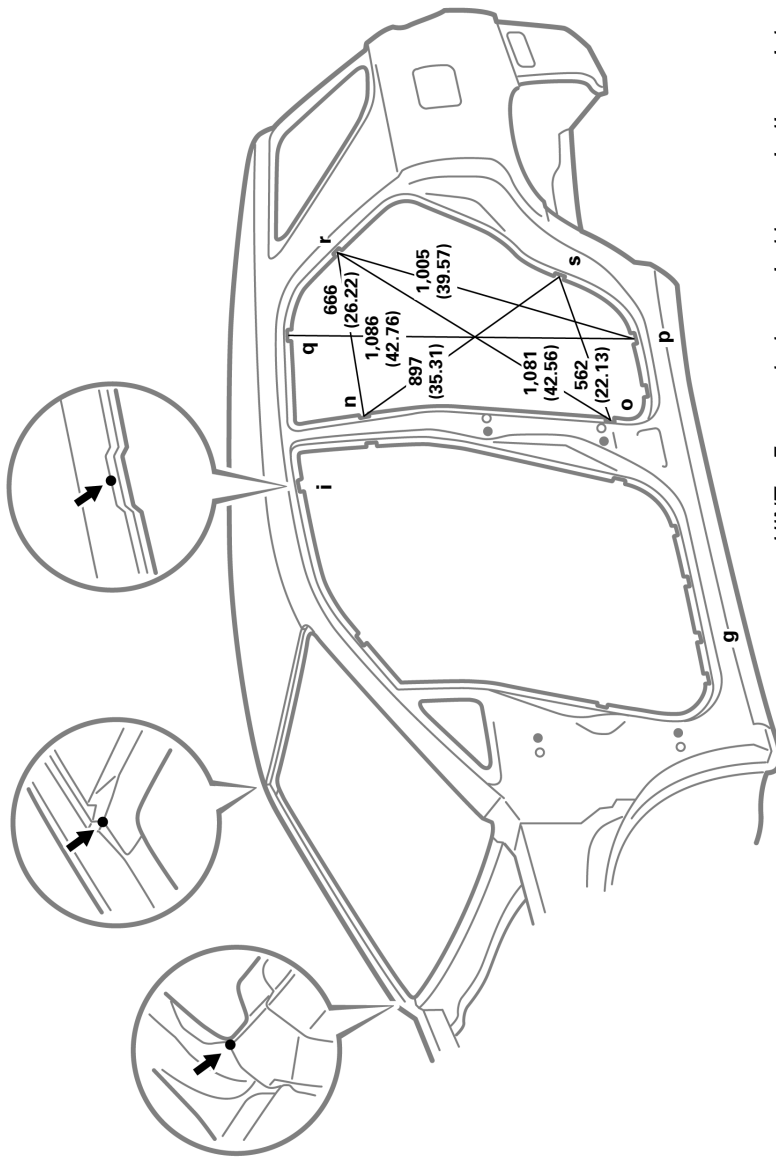

HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (Seen from rear).

Vehicle Dimensions Left ↔ Right


N-n	O-o	P-p	Q-q	R-r	S-s
1,372 (54.02)	1,502 (59.13)	1,502 (59.13)	1,190 (46.85)	1,348 (53.07)	1,502 (59.13)

G-p or g-p	I-q or i-Q	N-r or n-R	N-s or n-S	O-s or o-S	P-q or p-Q	R-s or r-S
1,845 (72.64)	1,302 (51.26)	1,514 (59.61)	1,692 (66.61)	1,603 (63.11)	1,722 (67.80)	1,615 (63.58)

mm (in.)



Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
G, g	Rocker panel assembly mark	—	P, p	Rocker panel assembly mark	—
I, i	Roof side rail assembly mark	—	Q, q	Roof side rail assembly mark	—
N, n	Center body pillar assembly mark	—	R, r	Quarter panel assembly mark	—
O, o	Center body pillar assembly mark	—	S, s	Quarter panel assembly mark	—

BODY OPENING AREAS (Rear View)

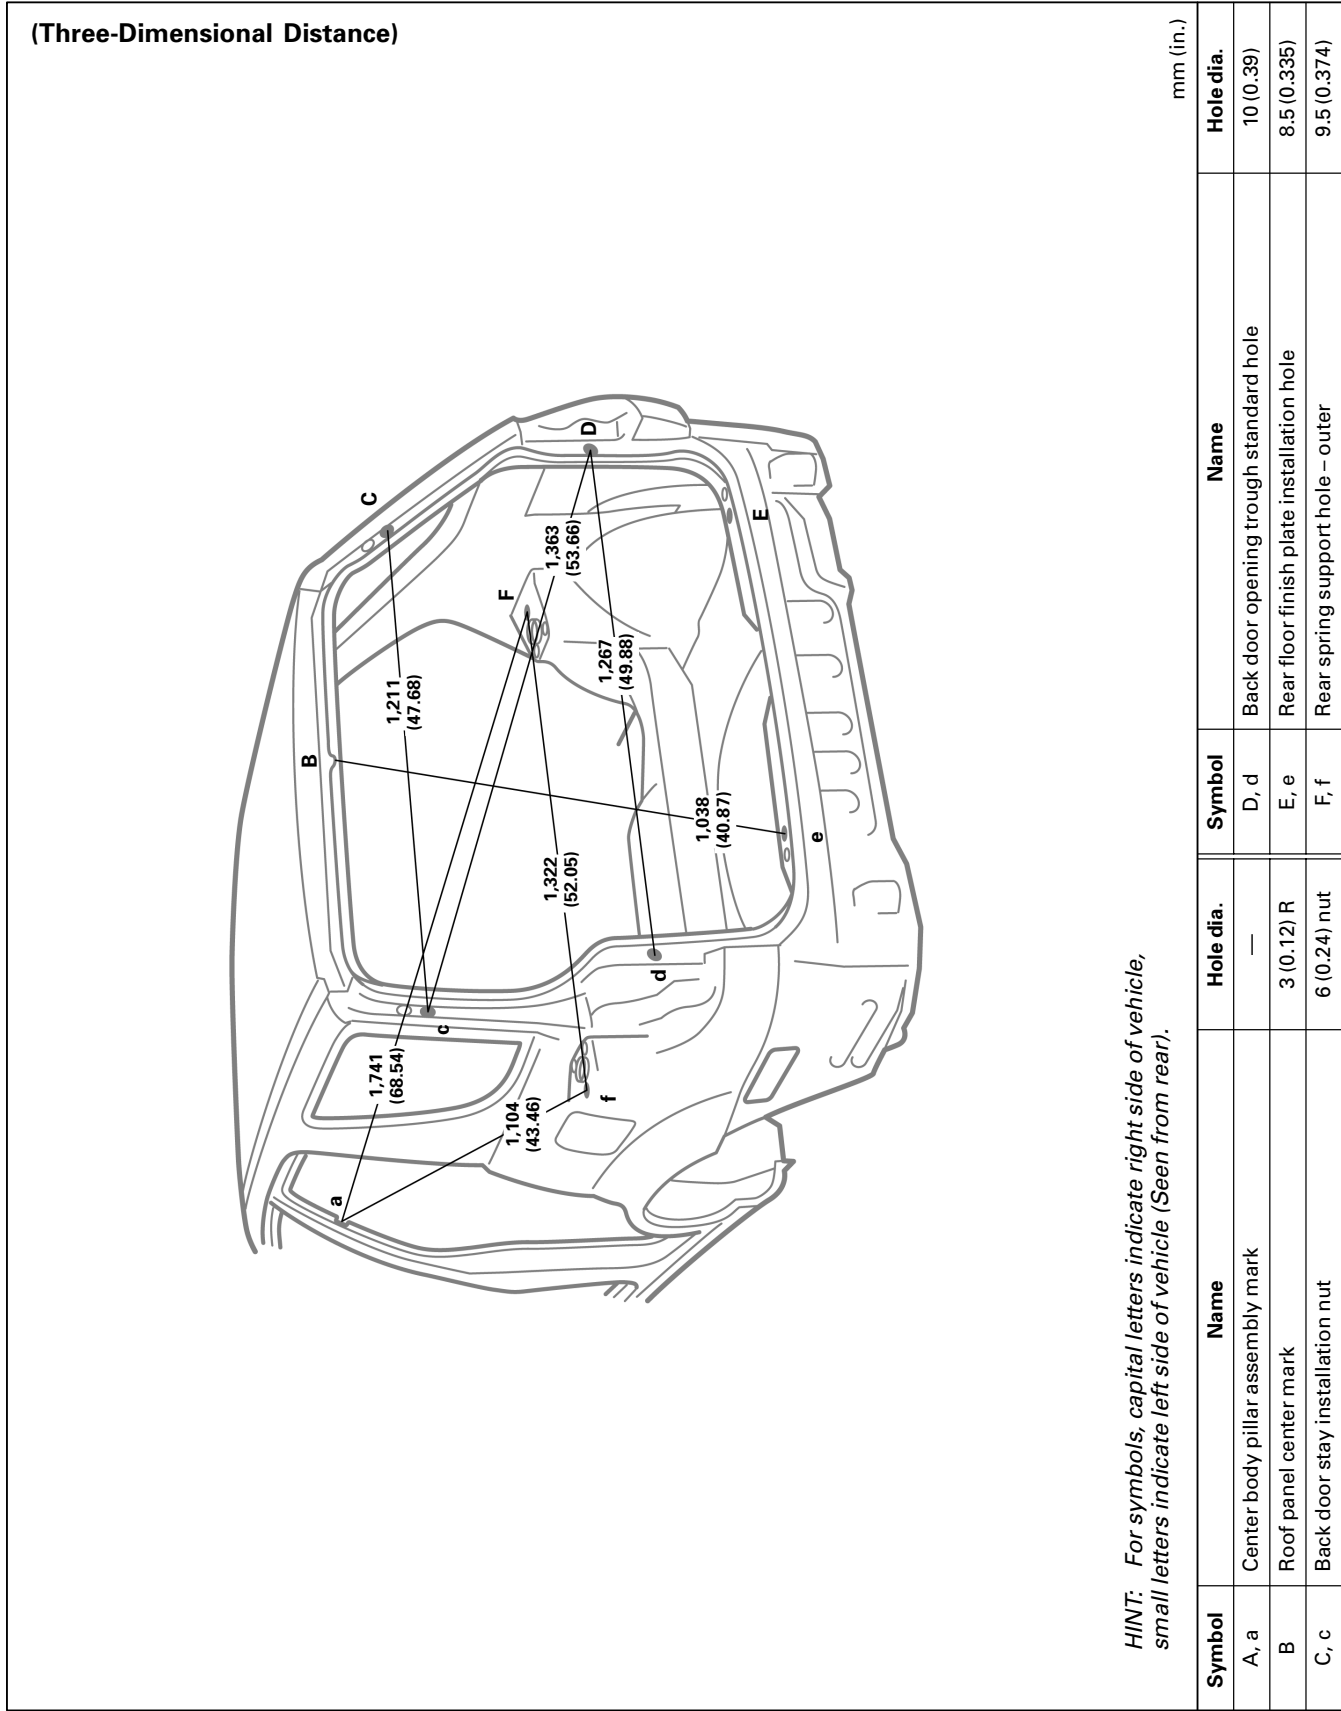


UNDER BODY

(Three-Dimensional Distance)

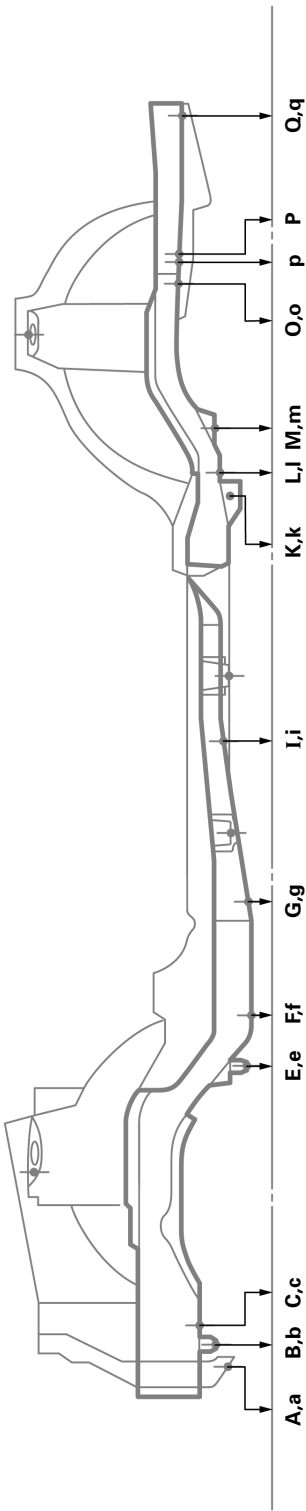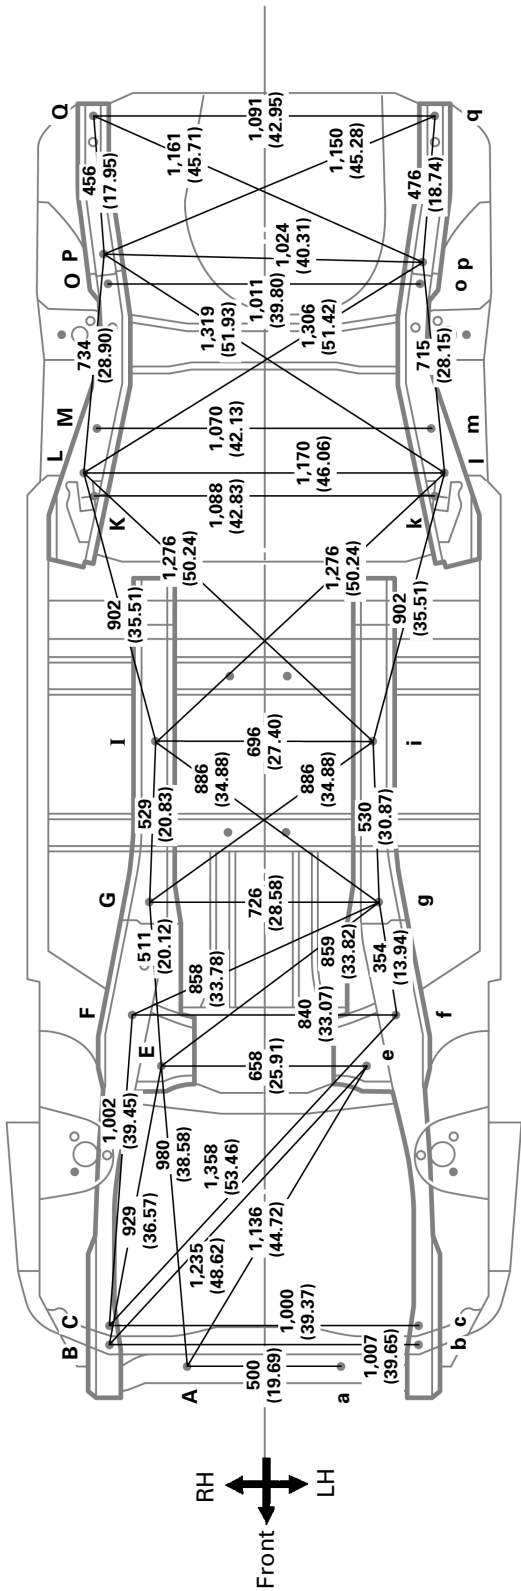


Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front crossmember standard hole	15 (0.59)	K, k	Strut bar installation hole – inner	12 (0.47)
B, b	Front frame installation nut	14 (0.55) nut	L, l	Rear floor side member standard hole	18 (0.71)
C, c	Front side member standard hole	18 (0.71)	M, m	Rear suspension member installation nut	14 (0.55) nut
E, e	Front frame installation nut	14 (0.55) nut	O, o	Rear suspension member installation nut	10 (0.39) nut
F, f	Front suspension brace installation nut	10 (0.39) nut	P, p	Rear floor side member standard hole	18 (0.71)
G, g	Front floor under reinforcement standard hole	18 (0.71)	Q, q	Transport hook installation nut – rear	10 (0.39) nut
I, i	Front floor under reinforcement standard hole	18 (0.71)	—	—	—

(Two-Dimensional Distance)



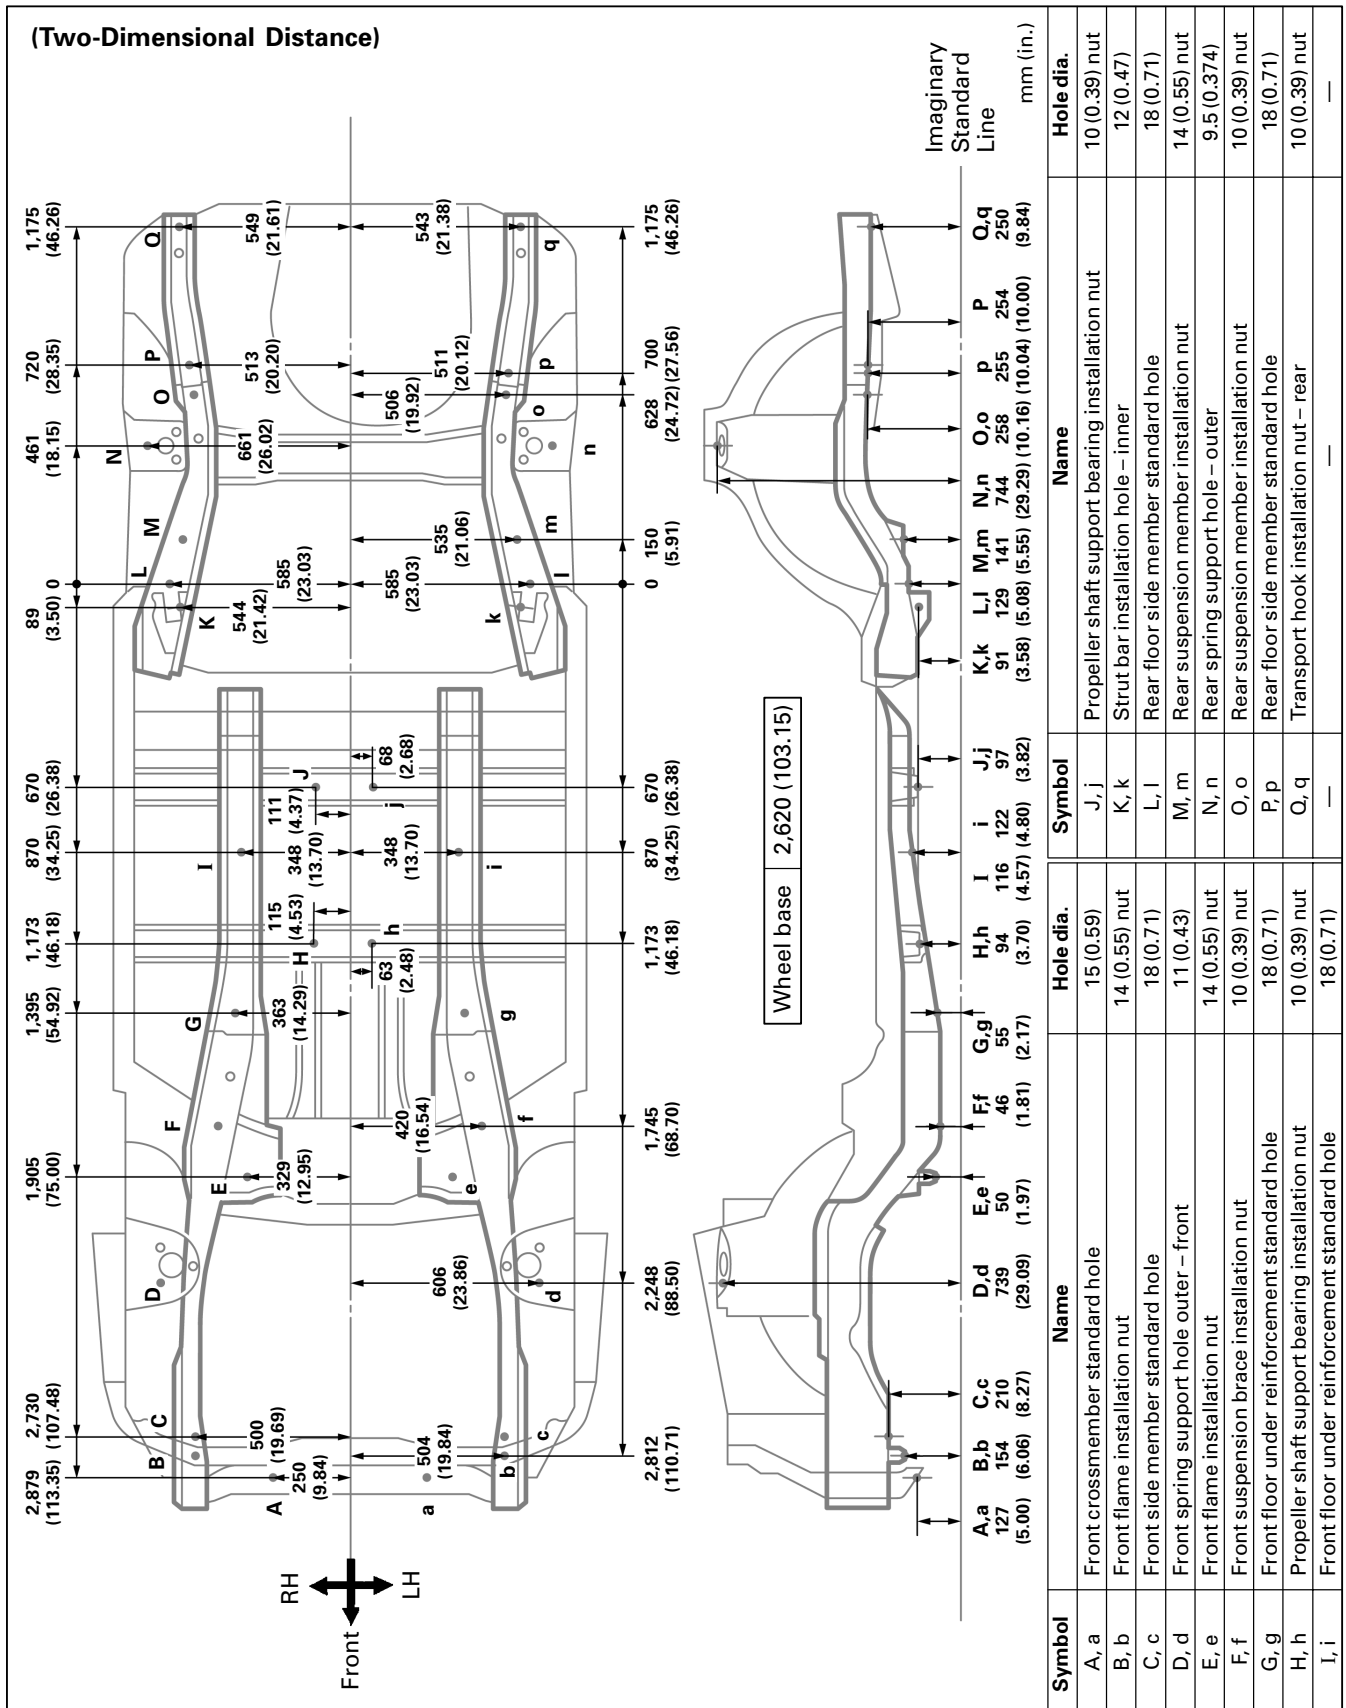


FRONT FRAME

(Two-Dimensional Distance)

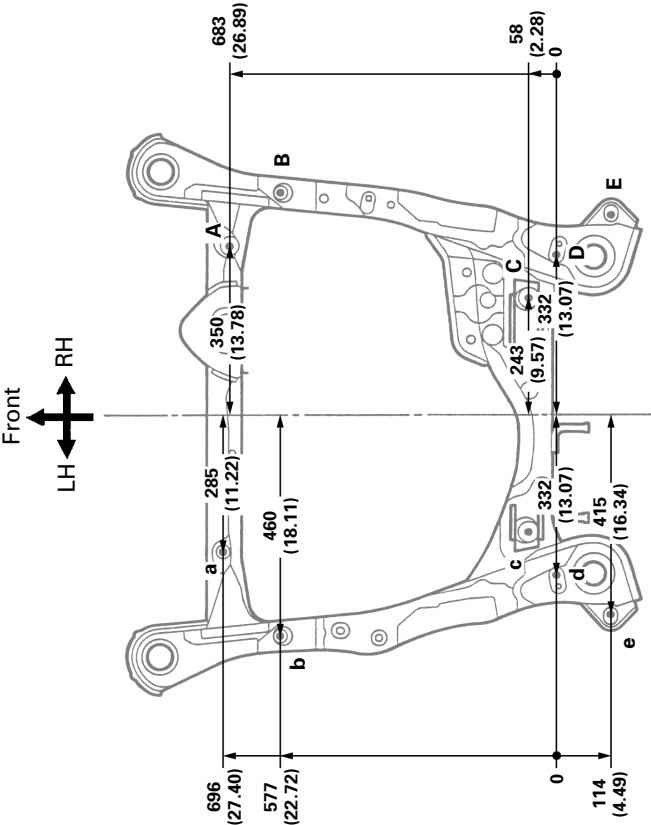

(Three-Dimensional Distance)

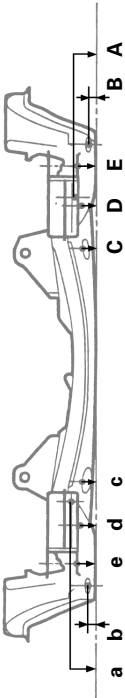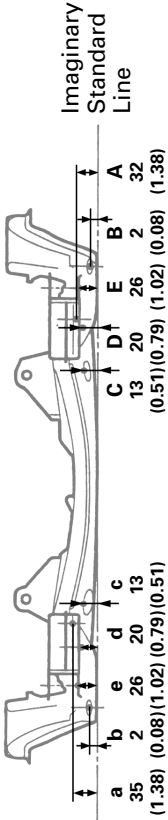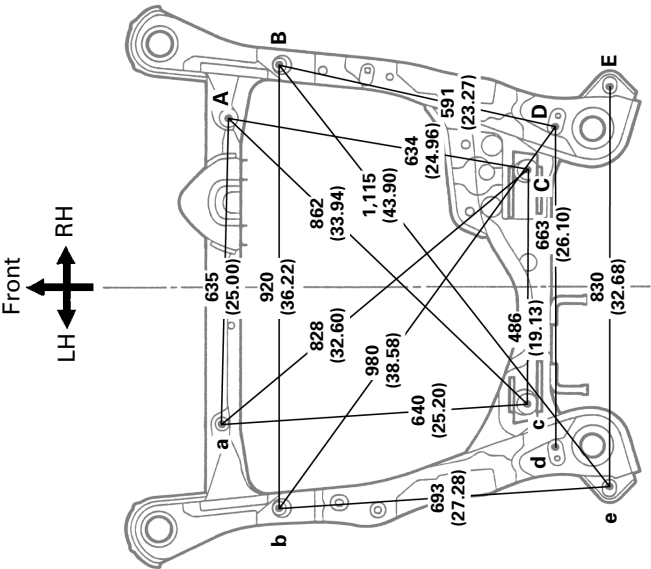

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front frame standard hole	13 (0.51)	D, d	Front frame standard hole	13 (0.51)
B, b	Front frame standard hole	13 (0.51)	E, e	Lower control link installation hole – lower	15 (0.59)
C, c	Front frame standard hole	13 (0.51)	—	—	—

